


# **PORTABLE GENERATOR**

**Owner's Manual** 

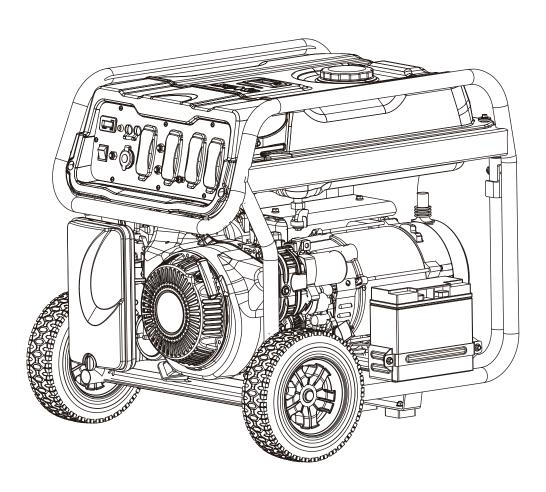





Model: _		
Serial: _		
Date Pui	chased:	

P/N: 32082-00000-00

**SUA9000E REV00** 

**SAVE THIS MANUAL FOR FUTURE REFERENCE** 

# **Table of Contents**

Introduction1	Maintenance And Storage	18
Safety1	Maintenance Schedule	18
General Safety Precautions2	Engine Maintenance	18
Unpacking the Generator7	Engine Oil Level Check	18
Parts Included7	Change Engine Oil	19
Assembly7	Spark Plug Maintenance	19
Install the Wheel Kit7	Air Filter Maintenance	20
Install the Support Leg8	Battery Replacement	20
Battery Cable Connection8	Cleaning the Spark Arrestor	21
Controls and Features9	Valve Clearance	21
Control Panel Features10	Generator Maintenance	21
Specifications11	Storage	21
Add Engine Oil13	Trouble Shooting	23
Low Oil Shutdown13	Parts Diagram and Parts List	24
Add Fuel13	Parts Diagram	24
Operation at High Altitude14	Parts List	25
Grounding14	Circuit Diagram	27
Connecting to a Building's Electrical System14	Warranty	28
Operation15		
Generator Location15		
Surge Protection15		
Starting the Generator15		
Connecting Electrical Loads16		
Stopping the Engine17		
Low Oil Shutdown17		
Do Not Overload Generator17		

# INTRODUCTION

### **Read This Manual Thoroughly**

### **△** WARNING



Read and understand manual completely before using product. Failure to completely understand manual and product couldresult in death or serious injury.

If any section of this manual is not understood, contact customer Service at 1-855-888-3598, or www.a-ipower.com for starting, operating and servicing procedures. The owner is responsible for proper maintenance and safe use of the unit. SAVE THESE INSTRUCTIONS for future reference. This manual contains important instructions that must be followed during placement, operation and maintenance of the unit and its components. Always supply this manual to any individual that will use this unit.

The information in this manual is accurate based on products produced at the time of publication. The manufacturer reserves the right to make technical updates, corrections and product revisions at any time without notice.

### **AWARNING**

Operating, servicing, and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects orother reproductive harm. To minimize exposure, avoid breathing exhaust, and wear gloves or wash your hands frequently when servicing this equipment. For more information go to www.P65warnings.ca.gov.

## **SAFETY**

The words DANGER, WARNING, CAUTION, and NOTICE are used throughout this manual to highlight important information. Make sure that the meanings of this safety information is known to all who operate, perform maintenance on, or are nearthe generator.



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the messagethat follows the safety alerts symbol.

The manufacturer cannot possibly anticipate every possible circumstance that might involve a hazard. The warnings in this manual and the tags and decals affixed to the unit are therefore not all-inclusive. If you use a procedure, work method or operating technique that the manufacturer does not specifically recommend you must satisfy yourself that it is safe for you and others. You must also make sure that the procedure work method or operating technique that you choose does not render the generator unsafe.

### **DEFINITIONS AND SYMBOLS**

## **△** DANGER

Indicates a hazard which, if not avoided, will result in death or serious injury.

# **WARNING**

Indicates a hazard which, if not avoided, could result in death or serious injury.

# **△** CAUTION

Indicates a hazard which, if not avoided, could result in minor or moderate injury.

## **M** NOTICE

Indicates information considered important, but not hazard-related (e.g.,messages relating to property damage).



Asphyxiation Hazard



Electric Shock Hazard



Fire Hazard



Explosion Hazard



Hot Surface.
Do Not Touch the Surface.
Burn Hazard



Moving Parts Hazard



Kickback



Operator's Manual

# **GENERAL SAFETY PRECAUTIONS**

#### **A DANGER**

Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.









NEVER use inside a home or garage, EVEN IF doors and windows are open.

Only use OUTSIDE and far away from windows, doors and vents.

Avoid other generator hazards. READ MANUAL BEFORE USE.

### **△** DANGER

#### POISONOUS GAS HAZARD



Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You **CANNOT** smell it, see it, or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas.

### **△** DANGER



The exhaust system must be properly maintained. Do not alter or modify the exhaust system as to render it unsafe or make it noncompliant with local codes and/or standards. Failure to do so will result in death or serious injury.

### **⚠** WARNING



Always, install battery operated carbon monoxide alarm indoors and installed according to the manufacturer's instruction.

- Operate this product ONLY outside far away from windows, doors and vents to reduce the risk of carbon monoxide gas from accumulating and potentially being drawn towards occupied spaces.
   DO NOT run this product inside homes, garages, basements, crawl spaces, sheds, or other partially-enclosed spaces even if using fans or opening doors and windows for ventilation. Carbon monoxide can quickly build up in these spaces and can linger for hours, even after this product has shut off.
- ALWAYS place this product downwind and point the engine exhaust away from occupied spaces. If you start to feel sick, dizzy, or weak while using this product, shut it off and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.


### **△** WARNING

If you start to feel sick, dizzy or weak while using the portable generator, you may have carbon monoxide poisoning. Get out side to fresh air immediately and call 911 for emergency medical attention. Very high levels of CO can rapidly cause victims to lose consciousness before they can rescue themselves. DO NOT attempt to shut off the generator before moving to fresh air. Entering an enclosed space where a generator is or has been running may put you at greater risk of CO poisoning.

### **CORRECT USAGE**

### Example location to reduce risk of carbon monoxide poisoning

- ONLY use outside and downwind, far away from windows, doors and vents.
- Direct exhaust away from occupied spaces.

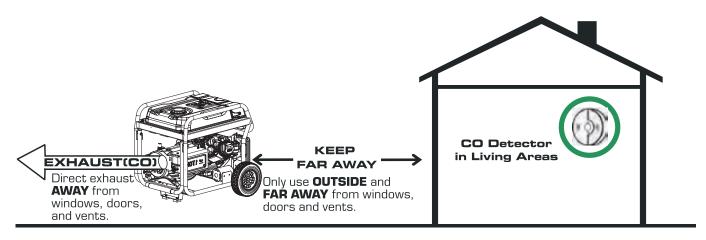

### **INCORRECT USAGE**

### Do not operate in any of the following locations:

- · Near any door, window or vent
- Garage
- Basement
- Crawl Space
- · Living Area
- Attic
- Entry Way
- Porch

  Mud Room

  Attic

  Entryway
  Porch
  Mud Room

  Garage

  Crawl Spaces

### $oldsymbol{\Delta}$ warning



Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.

- When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.
- NEVER start or stop engine with electrical devices plugged in and turned on.

### **△** DANGER





Fuel and its vapor are extremely flammable and explosive. Add fuel in a well ventilated area. Keep sparks, open flames and other ignition sources away. Failure to do so will result in death and serious injury.

### **A** DANGER





Do not overfill tank. Allow space for fuel expansion. If fuel spills wait until it evaporates before starting engine. Failure to do so will result in death and serious injury.

#### WHEN ADDING OR DRAINING FUEL

- Turn generator engine OFF and let it cool at least 2 minutes before removing fuel cap. Loosen cap slowly to relieve pressure in tank.
- Fill or drain fuel tank outdoors.
- DO NOT overfill tank. Allow space for fuel expansion.
- If fuel spills, wait until it evaporates before starting engine.
- Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.
- DO NOT light a cigarette or smoke.

#### WHEN STARTING EQUIPMENT

- Ensure spark plug, muffler, fuel cap, and air cleaner are in place.
- **DO NOT** crank engine with spark plug removed.

#### WHEN OPERATING EQUIPMENT

- DO NOT operate this product inside any building, carport, porch, mobile equipment, marine applications, or enclosure.
- **DO NOT** tip engine or equipment at angle which causes fuel to spill.
- **DO NOT** stop engine by moving choke control to "Start" position.

# WHEN TRANSPORTING, MOVING OR REPAIRING EQUIPMENT

- Transport/move/repair with fuel tank EMPTY or with fuel shutoff valve OFF.
- DO NOT tip engine or equipment at angle which causes fuel to spill.
- · Disconnect spark plug wire.

# WHEN STORING FUEL OR EQUIPMENT WITH FUEL IN TANK

 Store away from furnaces, stoves, water heaters, clothes dryers, or other appliances that have pilot light or other ignition source because they could ignite fuel vapors.

### **△** DANGER



Generator voltage could cause electrical shock or burn will result in death or serious injury.

### $\Delta$ danger



Never use generator in wet or damp locations. Never expose generator to rain, snow, water spray while in use. Protect generator from all hazardous weather conditions. Moisture, or ice can cause a short circuit or other malfunction in the electric circuit. Water contact with a power source if not avoided, will result in death or serious injury.

### $oldsymbol{\Delta}$ danger



Contact with terminals, bare wires and electrical connections when generator is running will result in death or serious injury.

### **△** DANGER





Fire and electrocution hazard. Do not connect to a building's electrical system unless the generator and transfer switch have been properly installed and the electrical output has been verified by a qualified electrician. The connection must isolate the generator power from utility power and must comply with all applicable laws and electrical codes.

- Use a ground fault circuit interrupter (GFCI) in any damp or highly conductive area, such as metal decking or steel work.
- DO NOT use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- DO NOT allow unqualified persons or children to operate or service generator.

### **WARNING**





Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death or serious injury.

Contact with muffler area could cause burns resulting in serious injury.

### **MARNING**



When operating machine, do not touch hot surfaces. Keep machine away from combustibles during use. Hot surfaces could result in severe burns or fire.

- Allow equipment to cool before touching.
- Replacement parts must be the same and installed in the same position as the original parts.

 It is a violation of California Public Resource Code, Section 4442, to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the exhaust system is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order. Other states or federal jurisdictions may have similar laws. Contact the original equipment manufacturer, retailer, or dealer to obtain a spark arrester designed for the exhaust system installed on this engine.

### **△ WARNING**





Unintentional sparking could cause fire or electric shock resulting in death or serious injury.

# WHEN ADJUSTING OR MAKING REPAIRS TO YOUR GENERATOR

 Disconnect the spark plug wire from the spark plug and place the wire where it cannot contact spark plug.

#### WHEN TESTING FOR ENGINE SPARK

- Use approved spark plug tester.
- **DO NOT** check for spark with spark plug removed.

### **△ WARNING**



Starter and other rotating parts could entangle hands, hair, clothing, or accessories. Keep away from rotating parts, failure to do so could result in death or serious injury.

 DO NOT wear loose clothing, jewelry or anything that could be caught in the starter or other rotating parts.

### **A** CAUTION

Excessively high operating speeds could result in minor injury. Excessively low operating speeds impose a heavy load.

- DO NOT tamper with governor spring, links or other parts to increase engine speed. Generator supplies correct rated frequency and voltage when running at governed speed.
- **DO NOT** modify generator in any way.

## **ANOTICE**

Exceeding generators wattage/amperage capacity could damage generator and/or electrical devices connected to it.

- DO NOT exceed the generator's wattage amperage capacity.
- Start generator and let engine stabilize before connecting electrical loads.
- Connect electrical loads in OFF position, then turn ON for operation.
- Turn electrical loads OFF and disconnect from generator before stopping generator.

### **ANOTICE**

Improper treatment of generator could damage it and shorten its life.

- · Use generator only for intended uses.
- If you have questions about intended use, ask dealer or contact local service center.
- · Operate generator only on level surfaces.
- DO NOT expose generator to excessive moisture, dust, dirt, or corrosive vapors.
- DO NOT insert any objects through cooling slots.
- If connected devices overheat, turn them off and disconnect them from generator.
- Shut off generator if:
  - -Electrical output is lost.
  - -Equipment sparks, smokes, or emits flames.
  - -Unit vibrates excessively.

### **△** WARNING

### Medical and Life Support Uses.

- In case of emergency, call 911 immediately.
- NEVER use this product to power life support devices or life support appliances.
- NEVER use this product to power medical devices or medical appliances.
- Inform your electricity provider immediately if you or anyone in your household depends on electrical equipment to live.
- Inform your electrical provider immediately if a loss of power would cause you or anyone in your household to experience a medical emergency.


# **UNPACKING THE GENERATOR**

- Open carton completly. Remove and verify carton content prior to assembly. Your generator ships with following items.
- Call our customer service at 1-855-888-3598 with the unit model and serial number for any missing item.
- Record model, serial number, and date of purchase on front cover of this munual for your own record.

#### **Parts Included**

Your gasoline powered generator ships with the following parts:

NO.	Item Description	Qty
1	Wheels (9.5" Flat Free)	2
2	Axle Pin	2
3	Flat Washer	2
4	Cotter Pin	2
5	Flange Bolt M8x16	2
6	Flange Lock Nut M8	2
7	Support Leg with Vibraion Mounts	1
8	Spark Plug Wrench	1
9	Oil Bottle (1.0L)	1
10	Owner's Manual	1
11	Quick Start Guide	1
12	12V DC Battery Charging Cable	1

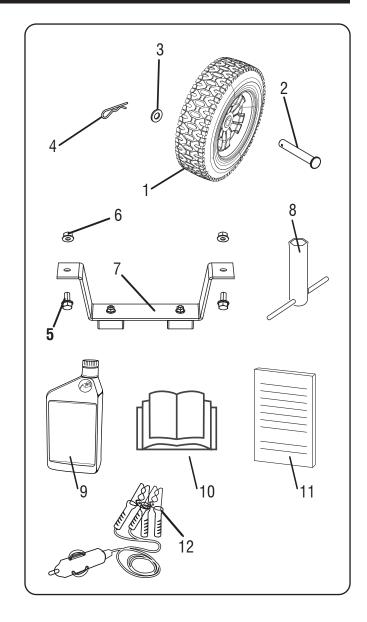

# **ASSEMBLY**

Your generator requires some assembly prior to usage.

### **△** CAUTION

Assembly the generator will require lifting the unit. Always have assistance when lifting the generaotor.

### **A WARNING**

Do not plug in or turn on the generator until it is fully assembled according to the instructions. Failure to completely understand manual and product could result in death or serius injury.

Call our customer service at 1-855-888-3598 for any assembly issues or concerns. Please have model and serial number available.

#### **Install the Wheel Kit**


### **NOTE:**

The wheels are not intended for over-the-road use.

- 1 place generator on a flat surface.
- 2 Tip the generator on a piece of cardboard or other soft material to protect the frame paint and prevent the generator from sliding.


## **ASSEMBLY**

- 3 Slide axle pin (A) through the wheel (B), flat washer (C) and generator frame axles hole (D).
- 4 Secure everything with cotter pin (E). Repeat on opposite side.

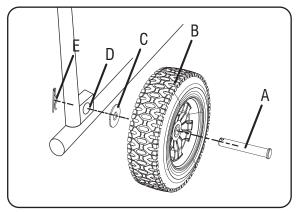

### **Install the Support Leg**

- 5 Insert bolts (F) throught the support leg (G) and holes on the generator frame as shown.
- 6 Tighten bolts (F) and nuts (H) to the frame.

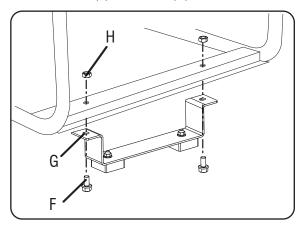


#### **NOTE:**

Handle already is assembled on the unit.


### **Battery Cable Connection**

**NOTE:** The generator comes equipped with the positive cable (A) (with red boot) already attached.


- 1. Verify the positive (+) battery cable (A) with red boot is securely tightened to the positive (+) battery post. Make sure boot is over battery post.
- 2. Remove bolt (B) (M6x12) and nut (C) from battery negative (-) post.
- 3. Locate negative (-) battery cable (D) with black boot and attach to the negative (-) battery post. Tight the cable with bolt (B) and nut (C). Cover the post with black boot.

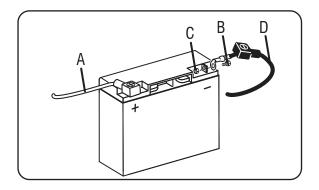

**IMPORTANT:** Before operating the generator the shock-absorbing seat (K) must be adjusted for clearance. Loosen the lock nut (L) and adjust the shock absorbing seat (K) so there is about 3-4mm gap between the top of the seat and the bottpm of the alternator bracket (M). Re-tighten the lock nut after adjustment.

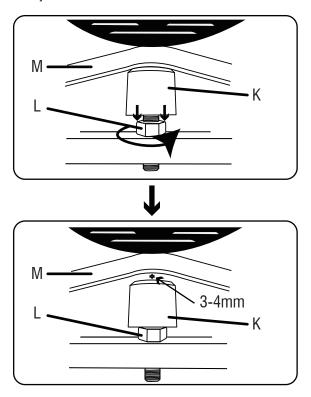


# **CONTROLS AND FEATURES**

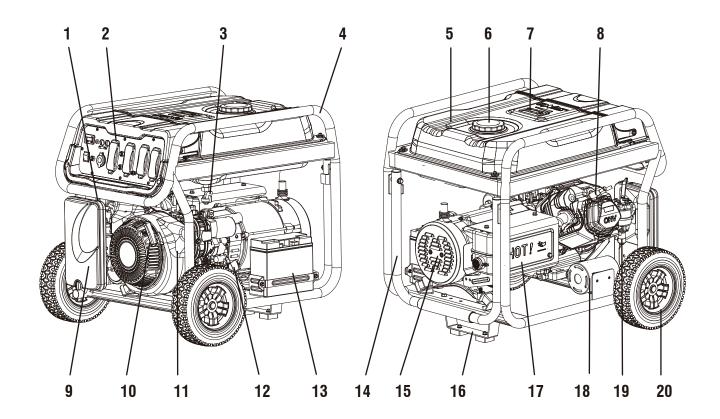

- 1 Choke Lever
- 2 Control Panel
- 3 Fuel Valve
- 4 Frame
- 5 Fuel Tank
- 6 Fuel Cap
- 7 Fuel Gauge
- 8 Spark Plug
- 9 Air Filter
- 10 Recoil Starter

- 11 Engine
- 12 Oil Filler Cap/Dipstick
- 13 Battery
- 14 Handle
- 15 Alternator Cover
- 16 Support Leg
- 17 Muffler/Spark Arrester
- 18 Carbon Canister
- 19 Carburator
- 20 Wheel

# **CONTROL PANEL FEATURES**

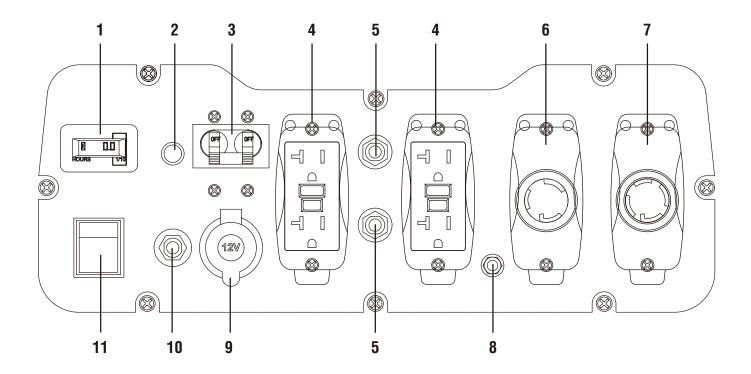

- **1. Hour Meter:** Displays and records how many hours your generator has run (up to 9,999.9).
- **2. Low Oil Indicator:** The Light will be illuminated when the engine oil level is low. Add oil.
- Main Breaker: The main breaker controls total output of all outlets to protect the generator from overload or short circuit.
- 4. 120V AC, 20A Duplex, GFCI, Single Phase, 60 Hz Outlets (5-20R): Each outlet is capable of carrying a maximum of 20 amps on a single outlet or a combination of both outlets.
- **5. Circuit Breaker(AC):** Protects the generator against electrical overloads.
- 6. 120V AC, 30A Twist Lock outlet, single phase, 60 Hz Outlet (NEMA L5-30R): This receptacle can provide 120 volt output up to 30 amps.

- 7. 120/240V AC, 30A Twist Lock, Single Phase, 60 Hz Outlet (NEMA L14-30R): supply either 120 Volt or 240 Volt output up to 30 amps.
- **8. Ground Terminal:** The ground terminal is used to ground the generator.
- **9. 12V DC, Outlet (Automotive):** Provides 12 volt DC power up to 8.3 amps.
- **10. Circuit Breaker (DC):** Protects the generator against electrical overloads.
- 11. Engine Control Switch: To start engine manually, flip the switch to RUN (I) position and pull recoil starter. To start engine with electric start, press and hold the switch on the START (II) position and the engine will crank and attempts to start. When the engine starts, release the switch to the RUN (I) position.

**NOTE:** Total power drawn from all outlets must not exceed the nameplate rating.

# **SPECIFICATIONS**

### **Generator Specifications**

·	011100005 (10001 00551 00)
Model	SUA9000E (10001-03554-00)
Starting Watts	9000W
Running Watts	7000W
Rated AC Voltage	120/240V
Rated DC Voltage	12V
Rated Frequency	60HZ
Phase	Single
Grounding System (AC)	Neutral Bonded to Frame
Engine Type	Single Cylinder, 4-Stroke OHV Air Cooled
Engine Displacement	420cc
Starting System	Recoil/Electric
Low Oil Shutdown	Yes
Oil Type	10W-30
Oil Capacity	33.8fl.oz (1.0L)
Spark Plug OEM Type	F7RTC
Spark Plug Replacement Type	NGK BPR7ES or Champion RN9YC
Spark Plug Gap	0.028~0.031 inch (0.7~0.8mm)
Valve Intake Clearance	0.004~0.006 inch (0.1~0.15mm)
Valve Exhaust Clearance	0.006~0.008 inch (0.15~0.2mm)
Voltage Regulation System	AVR
Alternator Excitement System	Brushed
Total Harmonic Distortion (THD)	Standard
Fuel Tank Capacity	7.0Gal (26.5L)
Fuel Type	Gasoline
Maximun Ambient Temperature	104°F (40°C)
Battery Spec	12V, 12Ah
Certifications	EPA-CARB Compliant

### **M** NOTICE


This product is designed and rated for continuous operation at ambient temperatures up to  $104^{\circ}F(40^{\circ}C)$ . If needed, this product can be operated at temperatures ranging from  $5^{\circ}F(15^{\circ}C)$  -  $122^{\circ}F(50^{\circ}C)$  for short periods. If the product is exposed to temperatures outside of this range during storage, it should be brought back within this range before operation. This product must always be operated outdoors in awell-ventilated area and far away from doors, windows, and other vents.

Maximum wattage and current are subject to and limited by such factors as fuel BTU content, ambient temperature, altitude, engine conditions, etc. Maximum power decreases about 3.5% for each 1,000 feet above sea level, and will also decrease about 1% for each 10°F(6°C) above 60°F(16°C) ambient temperature.

### 120V AC, 20A Duplex GFCI

Your generator is equipped with ground fault circuit interrupter (GFCI) receptacles. In the event of a ground fault, a GFCI trips automatically to stop the flow of electricity and prevent serious injury. The LED Indicator Light on the receptacle will be turn off. Press the "RESET" button located on the front of the receptacle to restore flow of electricity. GFCI does NOT protect against circuit overloads. To ensure proper operation of the GFCI duplex, perform this test monthly:

- 1. With the generator running, plug a test lamp into the GFCI receptacle. Turn the lamp on.
- 2. Press the "TEST" button located on the front of the receptacle to trip the device. This should immediately stop the flow of electricity and shut off the lamp. If the electricity is not stopped, do not use this receptacle until it has been serviced or replaced.
- 3. Press the "RESET" button located on the front of the receptacle to restore the flow of electricity. If the LED Indicator Light does not come back or GFCI cannot be reset, then it must be replaced.

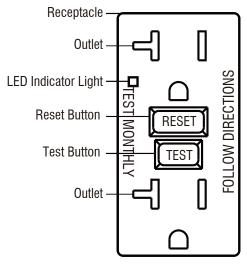


### **Add Engine Oil**


We recommend using SAE 10W-30 APISJ oil for best performance. Other high-quality detergent oils (APISJ or higher) are acceptable. Do not use special additives. Ambient temperature determines the proper oil viscosity for the engine. Use the chart to select the proper oil for the outdoor temperature range expected.

## **△** NOTICE

Do not attempt to crank or start the engine before it has been properly filled with the recommended type and amount of oil. Damage due to operation with no oil will void your warranty.

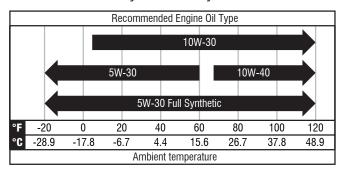

- 1. Place generator on a flat, level surface.
- 2. Clean area around oil fill and remove yellow oil fill cap/dipstick (A).
- 3. Wipe dipstick clean.
- 4. Using oil funnel, slowly pour contents of provided oil bottle into oil filler neck (B) to the "H" mark on dipstick. Be careful do not overfill. Overfilling with oil could cause the engine to not start or hard starting.
- 5. Replace oil fill cap/dipstick (A) and fully tighten.
- Oil level should be checked prior to each use or at least every 8 hours of operation. Keep oil level maintained.

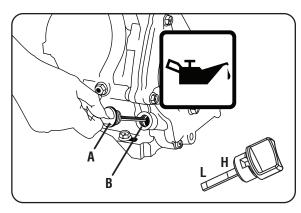

The engine is equipped with a low oil shut-off and will stop when the oil level in the crankcase falls below the threshold level.

### **MOTICE**

We consider the first 5 hours of run time to be the break-in period for the unit. During the break in period stay at or below 50% of the running watt rating and vary the load occasionally to allow stator windings to heat and cool. Adjusting the load will also cause engine speed to vary and help seat piston rings.

#### Low Oil Shutdown

The unit is equipped with a low oil shutdown. If the oil level becomes lower than required, the sensor will activate a warning device or stop the engine. If generator shuts off and the oil level is within specifications, check to see if generator is sitting at an angle that forces oil to shift. Place on an even surface to correct this. If engine fails to start, the oil level may not be sufficient to deactivate low oil level switch. Make sure the sump is completely full of oil.

#### Add Fuel

### **△** DANGER





Fuel and its vapor are extremely flammable and explosive. Add fuel in a well ventilated area. Keep sparks, open flames and other ignition sources away. Failure to do so will result in death and serious injury.

### igtriangle danger





Do not overfill tank. Allow space for fuel expansion. If fuel spills wait until it evaporates before starting engine. Failure to do so will result in death and serious injury.

Fuel must meet these requirements:


- · Clean, fresh, unleaded gasoline.
- Use regular UNLEADED gasoline with the generator engine with a minimum 87 octane / 87 AKI (91 RON). Do not use E85 or E15.

For high altitude use, see "Operation at High Altitude".

- DO NOT mix oil in gasoline.
- DO NOT modify engine to run on alternate fuels.

#### WHEN ADDING FUEL

- Fill fuel tank outdoors.
- DO NOT overfill tank. Allow space for fuel expansion. If the tank is overfilled, fuel can overflow onto a hot engine and cause fire or explosion.
- If fuel spills, wait until it evaporates before starting engine.
- Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources.
- Check fuel lines, tank, cap and fittings frequently for cracks or leaks. Replace if necessary.
- DO NOT light a cigarette or smoke when filling the fuel tank.

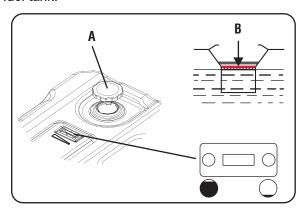

- 1. Remove the fuel cap (A) slowly.
- 2. Slowly add unleaded fuel to fuel tank. Be careful not to fill above the red fuel level indicator (B). This allows adequate space for fuel expansion.
- 3. Install fuel cap and let any spilled fuel evaporate before starting engine.

### **A** NOTICE

It is important to prevent gum deposits from forming in fuel system parts such as the carburetor, fuel hose or tank during storage. Alcohol-blended fuels (called gasohol, ethanol or methanol) can attract moisture, which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. See the "Long Term Storage" section. Never use engine or carburetor cleaner products in the fuel tank as permanent damage may occur.

#### **Operation at High Altitude**

At altitudes over 5,000 feet(1524 meters), a minimum 85 octane gasoline is acceptable. Engine power and generator output will be reduced approximately 3.5% for every 1000 feet (305 m) of elevation above sea level. High altitude may cause hard starting, increased fuel consumption and spark plug fouling. To operate at high altitudes A-iPower can provide a high altitude carburetor main jet. The alternative main jet and installation instructions can be obtained by contacting Customer Support.

### **A** NOTICE

Operation using an alternative main jet at elevations lower than the recommended minimum altitude can damage the engine. For operation at lower elevations, the standard main jet supplied must be used. Operating the engine with the wrong main jet may increase exhaust emissions, fuel consumption and reduce performance.

### Grounding

### **A** WARNING



Shock hazard. Failure to properly ground the generator can result in electric shock.

The national electrical requires your generator must be connected properly to an appropriate ground to help prevent electric shock.

The generator has a system ground that connects the generator frame components to the ground terminals on the AC output receptacles. There may be Federal or State regulations, local codes, or ordinances that apply to the intended use of the generator. Consult a qualified electrician, electrical inspector, or the local agency having jurisdiction. This generator is not intended to be used at a construction site or similar activity as defined by NFPA 70-2020 (NEC) section 590.6.

### **Connecting to a Building's Electrical System**

Connections to your home's electrical system must use a listed transfer switch installed by a licensed electrician. The connection must isolate the generator power from the utility power and comply with all applicable laws and electrical codes.

## **OPERATION**

#### **Generator Location**

### **△** WARNING

Make sure you review each warning in order to prevent fire hazard.

#### **A DANGER**

Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.









NEVER use inside a home or garage, EVEN IF doors and windows are open. Only use OUTSIDE and far away from windows, doors and vents.

Avoid other generator hazards. READ MANUAL BEFORE USE.

### igtriangle danger



Never use generator in wet or damp locations. Never expose generator to rain, snow, water spray or standing water while in use. Protect generator from all hazardous weather conditions. Moisture, or ice can cause a short circuit or other malfunction in the electric circuit. Water contact with a power source if not avoided, will result in death or serious injury.

- Keep area clear of inflammables or other hazardous materials.
- Select a site that is dry, well ventilated and protected from the weather.
- Keep exhaust pipe clear of foreign objects.
- · Keep generator away from open flame.
- · Keep generator on a stable and level surface.
- Do not block generator air vents with paper or other material.

#### **Surge Protection**

Electronic devices, including computers and many programmable appliances use components that are designed to operate within a narrow voltage range and may be affected by momentary voltage fluctuations. While there is no way to prevent voltage fluctuations, you can take steps to protect sensitive electronic equipment.

Install UL1449, CSA-listed, plug-in surge suppressors on the outlets feeding your sensitive equipment.


Surge suppressors come in single- or multi-outlet styles. They're designed to protect against virtually all short-duration voltage fluctuations.

### **Starting the Generator**


- 1. Before starting the generator, check for loose or missing parts and for any damage which may have occurred during shipment.
- 2. Check oil level and fuel.



3. Disconnect all electrical loads from the generator. Never start or stop the generator with electrical devices plugged in or turned on.

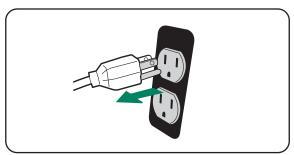

4. Turn the fuel valve to the "ON" position.

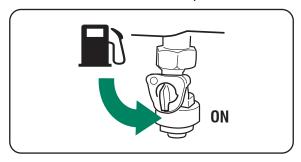


5. Move the choke lever to the "START" position.



6. Starting the Generator (Electric / Recoil start)


#### 6-1. Electric start

Press and hold switch on the "START"(II) position. Engine will crank and attempts to start. When the engine starts, release the switch to the "RUN" (I) position.

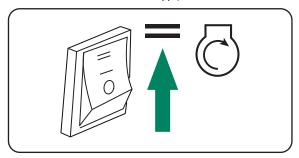


#### 6-2. Recoil start

Flip the engine switch to the "**ON**"(I) position. Pull the starter cord slowly until resistance is felt and then pull rapidly.

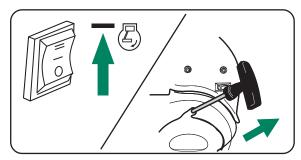

7. Do not over-choke. As soon as engine starts and warms up, move the choke lever to the "**RUN**" position.

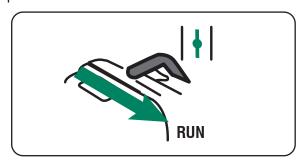

8. Allow generator to run at no load for few minutes upon each initial start-up to permit engine and generator to stablize.

### **△** WARNING



Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.

When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.

#### NOTE:

Keep choke lever in "START" position for only 1 pull of the recoil starter. After first pull, move choke lever to the "RUN" position for up to the next 3 pulls of the recoil starter. Too much choke leads to sparkplug fouling/engine flooding due to the lack of incoming air. This will cause the engine not to start. If engine starts after 3 pulls but fails to run. Or if unit shuts down during operation, make sure unit is on a level surface and check for proper oil level in crankcase. This unit may be equipped with a low oil protection device. If so, oil must be at proper level for engine to start.

### **Connecting Electrical Loads**


This unit has been pretested and adjusted to handle its full capacity. Before starting the generator, disconnect all loads. Apply load only after generator is running. Voltage is regulated via the engine speed adjusted at the factory for correct output. Re-adjusting will void warranty.

#### **NOTE:**

When applying a load, do not exceed the maximum wattage rating of the generator when using one or more receptacles. Also, do not exceed the amperage rating of any one receptacle.

Do not apply heavy electrical load during break-in period (the first five hours of operations).


- 1. Let engine stabilize and warm up for a few minutes after starting.
- 2. Ensure circuit breaker on control panel is in on position.
- 3. Plug in and turn on the desired 120 or 240 Volt AC, single phase, 60Hz electrical loads. It is better to attach the item with largest load first.

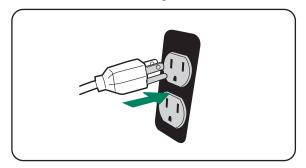


### **Stopping the Engine**

Turn off and remove entire electrical loads.
 Never start or stop the generator with electrical devices plugged in or turned on.


Let the generator run at no-load for two minutes to stabilize internal temperatures of the engine and generator.

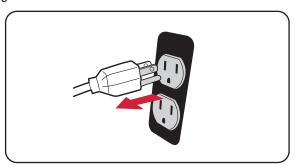

2. Press the engine switch to the "**OFF**"(**O**) position. Do not leave the generator until it has completely stopped.

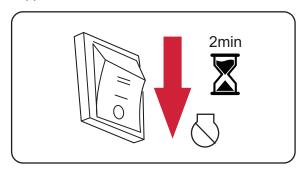

3. Turn the fuel valve to the "OFF" (0) position.

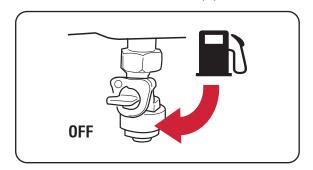

### **A WARNING**





Fuel and its vapors are extremely flammable and explosive which could cause burns, fire or explosion resulting in death or serious injury.

DO NOT stop engine by moving choke control to "**START**" position.

#### NOTE:

Always ensure that the fuel valve is in the "**OFF**" position when the engine is not in use. If the engine will not be used for a period of two weeks or longer, please see the Storage section for proper engine and fuel storage.

#### Low Oil Shutdown

If the engine oil drops below a preset level, an oil switch will stop the engine. Check oil level with dipstick.

If oil level is between LOW and HIGH mark on dipstick:

- 1. DO NOT try to restart the engine.
- 2. Contact an Authorized Service Dealer.
- 3. DO NOT operate engine until oil level is corrected. If oil level is below LOW mark on dipstick:
- 1. Add oil to bring level to HIGH mark.
- 2. Restart engine and if the engine stops again a low oil condition may still exist. DO NOT try to restart the engine.
- 3. Contact Customer Service.
- 4. DO NOT operate engine until oil level is corrected.

#### Do Not Overload Generator

Overloading a generator in excess of its rated wattage capacity can result in damage to the generator and to connected electrical devices.

To prolong the life of your generator and attached devices, follow these steps to add electrical load:

- 1. Start the generator with no electrical load attached.
- 2. Allow the engine to run for several minutes to stabilize.
- 3. Plug in and turn on the first item. It is best to attach the item with the largest load first.
- 4. Allow the engine to stabilize.
- 5. Plug in and turn on the next item.
- 6. Allow the engine to stabilize.
- 7. Repeat steps 5-6 for each additional item.

# **MAINTENANCE AND STORAGE**

#### **MAINTENANCE SCHEDULE**

Regular Maintenance will improve the performance and extend the life of your generator. Follow maintenance schedule intervals whichever occurs first according to use.

**NOTE:** Adverse conditions will require more frequent services.

### **Walk-Around Inspection**

Before starting the engine perform a visual inspection of the unit. Look for:

- Proper engine oil level
- Proper fuel level
- Fluid leaks
- · Loose clamps and bolts
- · Cracked fuel line
- · Loose or frayed wiring
- Built up debris

### **Before Each Use**

Check engine oil level Walk-around inspection

#### First 5 Hours (Break-In)

Change engine oil

### **First 25 Hours or First Month**

Change engine oil

### **Every 100 Hours or 6 Months**

Change engine oil
Clean Air Filter
Inspect/Adjust/Replace Spark plug
Inspect/Clean/Replace Spark Arrester

### **Every 200 Hours or 12 Months**

Replace Air filter
Replace Spark Plug
Inspect/Adjust Valve Clearance\*

### NOTE:

Change oil every month when operating under heavy load or high temperatures. Clean the air filter more often under dirty or dusty operating conditions. Replace air filter if they cannot be adequately cleaned.

#### NOTE:

Maintenance should be performed more frequently when generator is used in dusty areas.

When generator has exceeded the maximum figures specified in the table, maintenance should still be cycled according to the intervals of time or hours stated herein.

#### **General Recommendations**

Regular maintenance will improve the performance and extend the life of the generator. See any authorized dealer for service.

The generator's warranty does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain the generator as instructed in this manual.

Some adjustments will need to be made periodically to properly maintain your generator. All service and adjustments should be made at least once each season. Follow the requirements in the Maintenanc Shedule chart above.

#### **ENGINE MAINTENANCE**

To prevent accidental starting, remove and ground spark plug wire before performing any service.

#### **Engine Oil Level Check**

### **△** CAUTION

Avoid skin contact with engine oil. Wear protective clothing and equipment. Wash all exposed skin with soap and water.


### **A** NOTICE

Always use the specified engine oil. Failure to use the specified engine oil can cause accelerated wear and/or shorten the life of the engine.

When using the generator under extreme, dirty, dusty conditions or in extremely hot weather, change the oil more frequently.


Ambient air temperature will affect engine oil performance. Change the type of engine oil used based on weather conditions.

<sup>\*</sup> To be performed by authorized service center

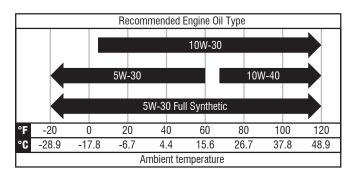

Check the engine oil level before each use or every 8 hours of operation.

- 1. Place the generator on a level surface and allow the engine to cool for several minutes.
- 2. With a damp rag, clean around the oil dipstick.
- 3. Remove the oil dipstick (A).
- 4. Wipe the dipstick clean, then screw dipstick into filler neck (B). Remove the dipstick and verify that the oil level is within safe operating range.
- 5. If low, add recommended engine oil incrementally and recheck until the level is between the L and H marks on the dipstick. DO NOT overfill. If over the full mark on the dipstick, drain the oil to reduce the oil level to the full mark.
- 6. Replace the oil dipstick and hand-tighten.

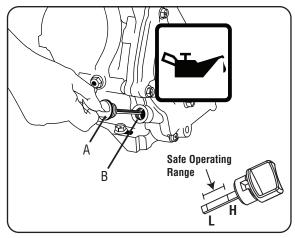

#### **Change Engine Oil**

Change engine oil per maintenance schedule. If you are using your generator under extremely dirty or dusty conditions, or in extremely hot weather, change the oil more often.

### **A WARNING**



Risk of burns. Allow engine to cool before draining oil or coolant. Failure to do so could result in death of serious injury.

### **△** CAUTION


Avoid prolonged or repeated skin contact with used motor oil.

- 1. Remove the oil cap (A) and wipe dipstick clean.
- 2. Place a container underneath the oil drain plug to collect used lubricant as it drains.
- 3. Unscrew the oil drain plug (C) and remove.
- 4. Allow lubricant to drain completely.

#### NOTF.

Drain the lubricant while the engine is still warm but not hot. Warm lubricant will drain quickly and more completely.

- 5. Reinstall the oil drain plug (C) and tighten securely.
- 6. Fill the engine with oil until it reaches the HIGH(H) level on the oil filler cap.
- 7. Reinstall the oil cap.

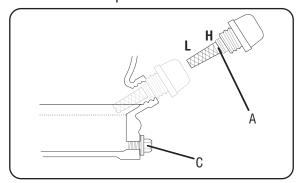

If contaminated or deteriorated oil is used or the quantity of the engine oil is not sufficient, engine damage will result and its life will be greatly shortened.

Maximum oil capacity: 33.8fl.oz (1.0L)

### **Spark Plug Maintenance**


The spark plug must be properly gapped and free of deposits in order to ensure proper engine operation. To check:


- 1. Remove the spark plug cap (B).
- 2. Clean any dirt from around base of spark plug.
- 3. Remove spark plug (A) using provided wrench.
- 4. Inspect spark plug for damage, and clean with a wire brush before reinstalling. If insulator is cracked or chipped, spark plug should be replaced.
- 5. Measure plug gap. The correct gap is 0.028-0.031 in. (0.7-0.8 mm). To widen gap, if necessary, carefully bend the ground (top) electrode. To lessen gap, gently tap ground electrode on a hard surface.
- 6. Seat spark plug in position; thread in by hand to prevent cross-threading.

7. Tighten with wrench to compress washer. If spark plug is new, use 1/2 turn to compress washer appropriate amount. If reusing old spark plug, use 1/8 to 1/4 turn for proper washer compression. **NOTE:** 

An improperly tightened spark plug will become very hot and could damage the engine.

8. Reinstall the spark plug cap (B).

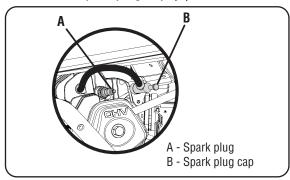


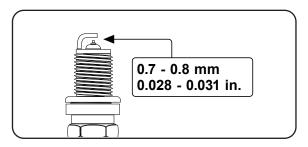

#### **Air Filter Maintenance**

For proper performance and long life, keep air filter clean.

- 1. Turn the knob (A) on the bottom of air the filter cover to release. Remove cover (B) and set aside.
- 2. Remove the filter element (C).
- 3. If the filter element is dirty, clean with warm, soapy water. Rinse and let dry.
- 4. Apply a light coat of engine lubricant to the element, then squeeze it out.
- 5. Replace the element (C) in the air filter unit.
- 6. Replace the air filter cover (B) and fasten knob (A).

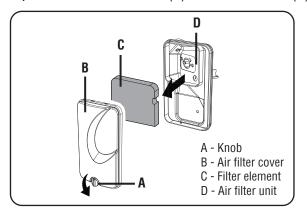

#### **Battery Replacement**

### **A** WARNING

Burn hazard. The battery contains sulfuric acid (electrolyte) which is highly corrosive and poisonous. Wear protective clothing and eye protection when working near the battery. Keep children away from the battery.

### **A** CAUTION

Battery posts, terminals contain lead and lead compounds. Wash hands after handling.


- 1. Remove spark plug wire from the spark plug.
- 2. Disconnect positive cable (A) and negative cable (B) from the battery by removing bolts (M6x12) and nuts (M6) from the negative and positive battery posts.
- 3. Loosen and remove bolts (C) (M6x12) on the battery holding bracket (D).
- 4. Replace the battery with new battery.

  Battery specifications: 12V, 12AH sealed lead acid.

  LxWxH: 5.9\*3.4\*5.1 inch (150\*86\*130 mm)
- 5. Reinstall the battery holding bracket (D) and tighten the bolts (C).
- Connect the positive cable with red boot first and then connect the negative cable with black boot.
   Tighten the bolts and nuts and cover them with boots.
- 7. Install the spark plug wire onto the spark plug.

### **ANOTICE**

Dispose of the used battery properly according to the guidelines established by your local or state government.

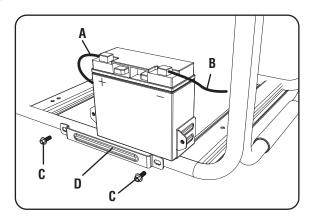



### **Cleaning the Spark Arrestor**

- 1. Allow the engine to cool completely before servicing the spark arrestor.
- 2. Loosen the screw (A) to be able to remove clamp (B) and cover plate (C).
- 3. Remove the spark arrestor screen (D).
- 4. Carefully remove the carbon deposits from the spark arrestor screen with a wire brush.
- 5. Replace the spark arrestor if it is damaged.
- 6. Position the spark arrestor on the muffler and attach with the screws removed in step 2.

#### **NOTE:**

This product is equipped with a spark arrestor that has been evaluated by the USDA Forest Service; however, product users must comply with Federal, State, and local fire prevention regulations. Check with appropriate authorities. Contact customer service or a qualified service center to purchase a replacement spark arrestor.

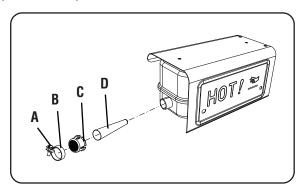

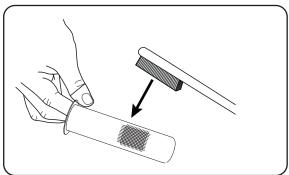

#### Valve Clearance

**Important:** Please contact Authorized Service Center for service assistance. Proper valve clearance is essential for prolonging the life of the engine. Check valve clearance per maintenance schedule.

Valera	Intake Valve	Exhaust Valve	
Valve Clearance	0.004~0.006 inch	0.006~0.008 inch	
Clearance	0.1~0.15 mm	0.15~0.2 mm	
Torque	10-12 N·M	10-12 N·M	

### **A** NOTICE

Checking and adjusting valve clearance must be done when the engine is cold.

#### **GENERATOR MAINTENANCE**

Make certain that the generator is kept clean and stored properly. Only operate the unit on a flat, level surface in a clean, dry operating environment. **DO NOT** expose the unit to extreme conditions, excessive dust, dirt, moisture or corrosive vapours.

#### **NOTE:**

**DO NOT** use a garden hose to clean the generator. Water can enter the generator through the cooling slots and damage the generator windings. Use a damp cloth to clean exterior surfaces of the generator.

Use a soft bristle brush to remove dirt and oil. Use an air compressor 25 PSI (172 kPa) to clear dirt and debris from the generator.

Inspect all air vents and cooling slots to ensure that they are clean and unobstructed.

#### **STORAGE**

It is recommended to start and run the generator for 30 minutes, every 30 days. If this is not possible, refer to below short term and long term storage.

#### **Short Term Storage**

Fill the tank with fresh gasoline and add gasoline stabilizer. Drain the carburetor float bowl.

- 1 Add a properly formulated FUEL STABILIZER to the tank if it is not already added.
- 2 Run the engine for 10-15 minutes to circulate stabilizer throughout fuel system.
- 3 Allow the generator to cool a minimum of 30 minutes and then drain the carburetor float bowl.
- 4 Clean the generator and store in a cool, dry and well ventilated area out of direct sunlight.


### **Long Term Storage (over one year)**

For long term storage, the gasoline tank and carburetor must be drained of gasoline.

- 1 After engine cools down, remove all gasoline from the fuel tank using non-conductive siphon.
- 2 To remove the remaining gasoline in fuel system: a-Keep the fuel valve open and run the engine until it stops from lack of fuel.

**O**r

- b-Keep the fuel valve open and drain carburetor float bowl.
- 3 Change the engine oil.
- 4 Remove the spark plug.
- 5 Pour tablespoon( 5-10cc) of clean engine oil into cylinder.
- 6 Pull starter recoil several times to distribute oil in cylinder.
- 7 Install spark plug.
- 8 Pull recoil slowly until resistance is felt. This close valves so moisture cannot enter engine cylinder. Gently release recoil.
- 9 Clean the generator and store in a cool, dry and well ventilated area out of direct sunlight.

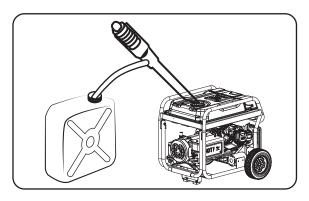

#### DRAINING THE FLOAT BOWL

- 1. Turn the fuel tank valve to the OFF position.
- 2. Locate the drain screw on the bottom of the carburetor float bowl.
- 3. Place an appropriate gasoline container under the drain screw to catch the drained fuel.
- 4. Loosen the float bowl drain screw and allow the fuel to drain. Tighten the float bowl drain screw.

### igtriangle Danger




Explosion and Fire. Fuel and vapors are extremely flammable and explosive. Store fuel in a well ventilated area. Keep fire and spark away. Failure to do so will result in death or serious injury.

### **A** WARNING




Risk of Fire. Verify machine has properly cooled before installing cover and storing machine. Hot surfaces could result in fire.

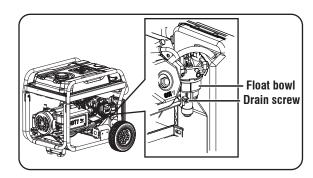

# TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Engine is running, but no AC output is available.	<ol> <li>AC Circuit breaker is open.</li> <li>Fault in generator.</li> <li>Poor connection or defective cord set.</li> <li>Connected device is bad.</li> <li>GFCI outlet is open (if equipped)</li> </ol>	Check AC load and reset circuit breaker.     Contact customer service or authorized service center.     Check and repair.     Connect another device that is in good condition.     Correct ground fault and press reset button on GFCI outlet.
Engine runs well at no-load, but "bogs down" when loads is connected.	<ol> <li>Short circuit in a connected load.</li> <li>Engine speed is too slow.</li> <li>Generator is overloaded.</li> <li>Shorted generator circuit.</li> <li>Clogged or dirty fuel filter.</li> <li>Connected device is bad.</li> </ol>	<ol> <li>Disconnect shorted electrical load.</li> <li>Contact customer service or authorized service center.</li> <li>Reduce load.</li> <li>Contact customer service or authorized service center.</li> <li>Clean or replace fuel filter.</li> <li>Connect another device that is in good condition.</li> </ol>
Engine will not start; starts and runs rough or shuts down when running.	<ol> <li>Engine switch set to OFF (O) position.</li> <li>Fuel valve is in OFF (O) position.</li> <li>Low oil level.</li> <li>Dirty air filter.</li> <li>Out of fuel.</li> <li>Stale fuel.</li> <li>Spark plug wire not connected to spark plug.</li> <li>Bad spark plug.</li> <li>Water in fuel.</li> <li>Flooded.</li> <li>Excessively rich fuel mixture.</li> <li>Intake valve stuck open or closed.</li> <li>Engine has lost compression.</li> <li>Clogged or dirty fuel filter.</li> <li>Clogged or dirty spark arrester screen.</li> <li>Battery drained.</li> <li>Battery cable connections are loose.</li> </ol>	<ol> <li>Set engine switch to ON (I) position.</li> <li>Move fuel valve to ON (I) position.</li> <li>Fill crankcase to proper level or place generator on level surface.</li> <li>Clean or replace air cleaner.</li> <li>Fill fuel tank.</li> <li>Drain fuel tank and carburetor; fill with fresh fuel.</li> <li>Connect wire to spark plug.</li> <li>Replace spark plug.</li> <li>Drain gas tank and carburetor; fill with fresh fuel.</li> <li>Wait 5 minutes and re-crank engine.</li> <li>Contact customer service or authorized service center.</li> <li>Replace fuel filter.</li> <li>Clean or replace spark arrester screen.</li> <li>Charge the battery. Use the recoil handle to start the generator.</li> <li>Make sure battery cables are securly is connected to the battery.</li> </ol>
Engine lacks power.	<ol> <li>Load is too high.</li> <li>Dirty air filter.</li> <li>Clogged or dirty fuel filter.</li> <li>Clogged or dirty spark arrester screen.</li> <li>Engine needs to be serviced.</li> <li>Bad fuel.</li> </ol>	1. Reduce load. 2. Replace air filter. 3. Clean or replace fuel filter. 4. Clean or replace spark arrester screen. 5. Contact customer service or authorized service center . 6. Drain gas tank and carburetor; fill with fresh fuel.
Engine"hunts"or falters.	<ol> <li>Carburetor is running too rich or too lean.</li> <li>Clogged or dirty fuel filter.</li> <li>Choke is opened too soon.</li> </ol>	Contact customer service or authorized service center .     Replace fuel filter.     Set choke to halfway position until engine runs smootly.
Engine shuts down when running.	Out of fuel.     Dirty air cleaner.     Low oil level.	Fill fuel tank.     Clean or replace air cleaner.     Fill crankcase to proper level or place generator on level surface.

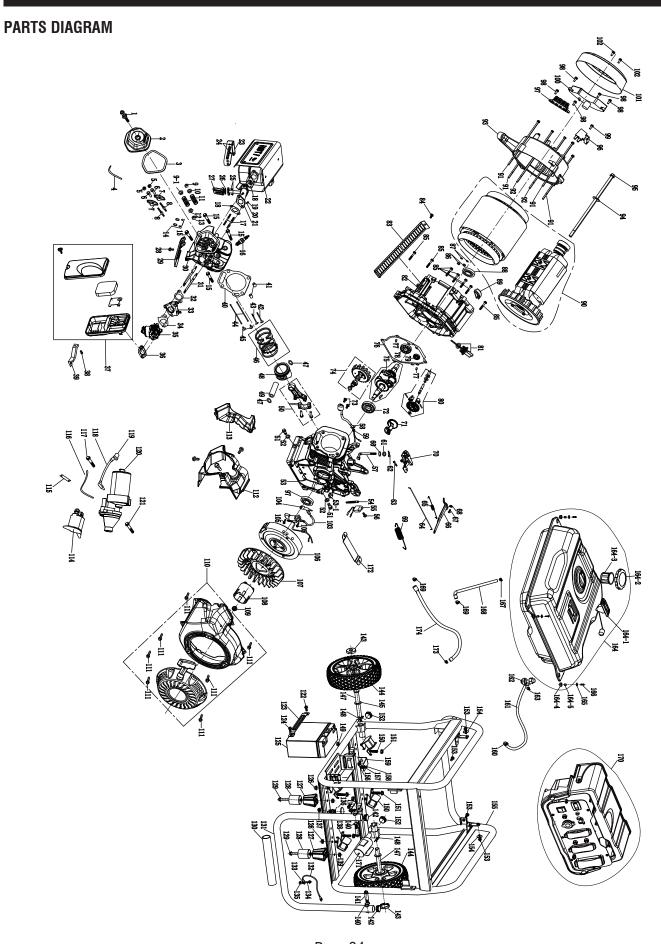

Page 24

### **Parts List**

NO.	Part Number	Description	Qty.
1	12020-E88F-0000	Flange bolt M6*60	1 1
2	12500-E88F-600C	Valve cover	1
3	12002-E88F-0000	Gasket, valve cover	1
4	14201-E88F-2000	Breather tube	1
5	14434-E88F-0000	Adjusting,nut M6	2
6	14434-E88F-0000	Shaft,rocker	2
7	14431-E88F-0000	Arm, rocker	2
8	14433-E88F-0000	Pivot,bolt M6*M8*56	2
9	14447-E88F-0000	· ·	2
9-1		Rotator, valve	1
10	14445-E88F-0000 14446-E88F-0000	Retainer, inlet valve spring	2
		Retainer, exhaust valve spring	
11	14751-E88F-0000	Spring valve	2
12	14448-E88F-0000	Retainer, exhaust valve spring	2
13	14444-E88F-B000	Oil seal	2
14	14449-E88F-0000	Plate, push rod guide	1
15	B5789-10LJ-080C	Flange bolt M10*80	4
16	15010-E88F-1000	Spark plug	1
17	12005-E68F-000C	Stud bolt M8*35,exhaust	2
18	18010-E88F-0001	Gasket,muffler	2
19	B6170-08KG-000C	Nut M8	2
20	B895-085G-000C	Spring washer	2
21	18020-E88F-0018	Connecting pipe,muffler	1
22	53100-G8AA-00B3	Muffler assy	1
23	53217-G5B8-00B4	Muffler bracket	1
24	B5787-06KG-016C	Flange bolt M6*16	2
25	B5789-06KG-012C	Flange bolt M6*16	2
26	18040-E88F-0000	Roll over valve washer	1
27	18050-E68F-0000	Roll over valve	1
28	B5789-06KG-120C	Flange bolt M6*16	1
29	11016-E88F-0000	Wind guide,bottom	1
30	12200-E92F-2000	Cylinder head	1
31	12004-E88F-001C	Intake,stud bolt M6*M8*106	2
32	17005-E88F-1000	Gasket,intake port	1
33	17001-E88F-0100	Carburator connecting	1
34	17003-E88F-0100	Carburator	1
35	17200-E92F-4000	Carburator assy	1
36	17004-E88F-1000	Gasket,air cleaner	1
37	14200-E90F-3000	Air clearner assy	1
38	B5789-06KG-012C	Flange bolt M6*12	1
39	51213-G7A1-1000	Bracket,air cleaner	1
40	12010-E92F-0000	Gasket,cylinder head	1
41	11014-E88F-0000	Dowel pin	2
42	14443-E90F-1000	Valve,exhaust	1
43	14442-E90F-1000	Valve,intake	1
	14410-E88F-0000	Push rod	2
44			
44	14441-E88F-0000	Valve lifter	2

NO.	Part Number	Description	Qty.
47	13112-E88F-0000	Clip,piston	2
48	13101-E92F-0000	Piston	1
49	13111-E88F-0000	Piston pin	1
50	13200-E92F-0000	Connecting rod	1
51	B5789-12LG-016C	Drain plug M12*16	2
52	B848-120H-0000	Washer,flat	2
53	11100-E92E-1000	Crank case	1
53-1	15002-E68F-0000	Rubber pad	1
54	11013-E88F-0000	Metal clamp	1
55	15030-E68F-1000	Oil alert	1
56	B5789-06KG-012C	Flange bolt M6*12	1
57	16001-E88F-1000	Shaft governor	1
58	15020-E88F-0100	Oil sensor	1
59	B6177.1-10LG-000B	Nut M10	1
60	B95-080G-000B	Washer,flat	2
61	B13871-0814-A000	Oil seal	1
62	16006-E88F-0000	Clip	1
63	B5789-06KG-012C	Flange bolt M6*12	1
64	16002-E88F-0000	Linkage,throttle	1
65	16003-E88F-0000	Reset spring	1
66	16020-E88F-0000	Lever,governor	1
67	16031-E68F-000C	Bolt M6*21	1
68	B6177.1-06KG-000C	Flange nutM6	1
69	16004-E92F-0000	Governor spring	1
70	16303-E92F-0000	Control bracket assy	1
71	13401-E92E-0000	Balance shaft	1
72	B275-6202-03	Bearing	1
73	B5787-06KG-016C	Flange bolt M6*16	1
74	14100-E92E-0000	Camshaft assy	1
75	13300-E92E-A000	Crankshaft assy	1
76	11012-E92F-1000	Gasket,closure plate	1
77	11014-E68F-0000	Dowel pin	2
78	B275-6202-03	Bearing	1
79	B275-6207-02	Bearing	1
80	16010-E88F-0000	Governor gear assy	1
81	11010-E88F-0100	Dipstick	1
82	11100-E90E-4000	Closure ,plate	1
83	55006-G5B8-0000	Air deflector,bottom	1
84	B5787-05JG-012B	Flange bolt M5*12	1
85	B5787-08LG-040B	Flange bolt M8*40	10
86	B809-0500-000B	Nut M5	2
87	B93-050G-000B	Spring washer	2
88	55006-G5A3-0000	Oil seal	1
89	55005-G5A3-0000	Rubber,dust proof	1
90	20029-04955-00	Rotor-stator assy	1
91	B5789-06KG-200C	Flange bolt M6*200	4
92	B5787-05KG-235B	Hex nut M5*235	2

### **Parts List**

NO.	Part Number	Description	Qty.
93	31502-G5A3-0000	End bracket	1 1
94	B97.4-105G-000B	Plain washer	1
95	B5789-10LG-285C	Flange bolt M10*285	1
96	31610-B140-0002	Carbon brush assy	1
97	31401-A120-0012	Terminal block	1
			+
98	B5787-05JG-016B	Flange bolt M5*16	5
99	B5787-05JG-012B	Flange bolt M5*12	2
100	31700-G9AA-0100	AVR	1
101	31301-G6A1-00B4	Alternator cover,rear	1
102	B5787-05JG-012B	Flange bolt M5*12	2
	15100-E90F-1000	Ignition coil assy	1
104	15011-0188-0000	Spark plug cap	1
	B5789-06KG-025B	Flange bolt M6*25	2
106	15300-E92E-0000	Flywheel assy	1
	15004-E88F-1200	Cooling fan	1
108	15003-E88F-0000	Starting cup	1
	B6177.1-16MG-001C	Flange nut M16*1.5	1
110	15600-E92F-30RE	Recoil starter assy	1
111	B5789-06KG-012C	Flange bolt M6*12	5
112	12014-E92F-0000	Wind guide,top	1
113	12014-E92F-1000	Wind guide,side	1
114	34100-E88E-0000	Starter relay	1
115	15001-E88F-0000	Tension disc	1
116	15200-E88F-0000	Charge coil	1
117	B5789-06KG-031C	Flange bolt M6*30	1
118	34100-E88E-0000	Relay cap	1
119	34101-E88F-0000	Connecting wire	1
120	34000-E88E-2000	Starter assy	1
121	B5789-06KG-031C	Flange bolt M6*30	1
122	B5789-06KG-012C	Flange bolt M6*12	1
123	51202-G8AA-00HQ	Battery holder	1
124	B5789-06KG-012B	Flange bolt M6*12	1
125	51270-12AH-3000	Battery	1
126	B6177.1-08KG-000B	Nut M8	2
127	51330-G5B8-00B4	Bracket assy	2
	51304-G5AA-0000	Bracket rubber mat	2
	B5789-08LG-095B	Flange bolt M8*95	2
	51306-G5AA-0000	Handle grip	1
131	51320-G8AA-02HQ	Handle component	1
	51219-G7A2-0002	Ground wire	1
	B861.2-060G-000B	Washer	1
	B5789-06KG-012B	Flange bolt M6*12	1
	B6177.1-06KG-000B	Nut M6	1
136	51204-G2A1-0000	Shock absorbing mount	1
137	B6170-1000-000C	Hexagon nut M10	2
138	51204-G5A3-A000	Shock absorbing mount	2
139	44008-0800-000B	Nut M8	2
108	duuu-uuuu-uuub	INUL IVIO	<u> </u>

NO.	Part Number	Description	Qty.
140	55012-G5AA-0000	Gasket	2
141	51229-G5AA-0001	Handle dowel pin	2
142	51312-G5AA-1000	Handle plastic plug	2
143	51311-G5AA-0000	Cover,wheel	2
144	51310-G5AA-00RE	Wheel	2
145	B95-016G-000B	Washer,flat	2
147	51301-G5AA-0000	Axle pin	2
148	16006-G7A2-0000	Cotter pin	2
149	B6177.1-08KG-000B	Flange bolt M8	2
150	51204-G5A3-A000	Shock absorbing mount	2
151	B6177.1-10LG-000B	Flange nut M10	4
152	51312-G5AA-0000	Plastic plug	2
153	B5789-06KG-020B	Flange bolt M6*20	4
154	B5287-G7A2-000B	Gasket,fuel tank	2
155	51100-G8AA-05HQ	Frame assy	1
156	B5789-06KG-012B	Flange bolt M6*12	1
157	B5789-06KG-012B	Flange bolt M6*12	1
158	B6177.1-06KG-000B		1
159	51230-G5AA-00R1	Engine fix block	1
160	54106-G7A1-000K	Clamp	1
161	17002-E68F-1000	Fuel hose	0.44
162	54105-G5AA-0000	Fuel valve	1
163	54106-G7A1-000K	Clamp	1
164	54100-G5AA-11RE	Fuel tank assy	1
164-1	54102-G2A1-0000	Oil leveler	1
-	54150-G5A2-0000	Fuel tank cover	1
$\overline{}$	17017-G2A1-0000	Fuel filter	1
-	54103-G5AA-0000	Fuel tank rubber mat	4
	54104-G5AA-0000	Fuel tank lining coat	4
165	B5287-G7A2-000B	Gasket,fuel tank	4
166	B5789-06KG-025B	Flange bolt M6*25	4
167	54106-G7A2-000K	Clamp	1
168	54109-G7AA-0001	Breather pipe	1
169	54106-G7A2-100K	Clamp	2
170	52000-G8AA-15H9	Control panel assy	1
171	54120-G7B1-0000	Carbon canister	1
172	11016-E92F-0000	Wind board	1
173	54106-G7A2-000K	Clamp	1
174	54109-G7AA-1000	Breather pipe	1
ldot			



Grounding system(DC): System Floating CONTROL PANEL ENGINE 0 IG E FS G Battery START Unit switch B/W 30A L14-30R Ignition coil 9/X Low oil indicator(LED) 8 Spark plug J/V - T Rectifier Low oil shutdown = Grounding system(AC): Neutral Bonded To Frame Hour meter 94 Fuel cut solenoid  $\Delta$ 12V DC coil 9 8888 0 **Q** ( Excitation coil þ ALTERNATOR Stator coil

 B:BLACK
 G:GREEN
 L:BLUE
 R:RED
 Y:YELLOW
 B/W:BLACK/WHITE
 R/W:RED/WHITE

 Br:BROWN
 Gy:GRAY
 O:ORANGE
 W:WHITE
 P:PINK
 Y/G:YELLOW/GREEN

## **WARRANTY**

#### LIMITED WARRANTY

KEEP YOUR RECEIPT. Proof of purchase will be required to substantiate any warranty claim.

WHAT IS COVERED: A-iPower Corp. warrants to the original retail purchaser in the United States of America, or Canada that this product is free of defects in material and workmanship and agrees, at A-iPower Corp's direction, to either repair, provide replacement parts for, or replace (without charge for parts or labor) any product or component with a material defect for a period of 2 years from the date of purchase, except as limited below. Warranty service and replacement parts are warranted only for the duration of the warranty on the original product. All replaced parts or products become a property of A-iPower Corp.

This product is also covered by an Emissions Control System Warranty which is separate from and in addition to the warranty.

#### WARRANTY

A-iPower Limited Warranty – 2 Years Residential and 1 Year Commercial

2 year Residential warranty applies as follow: 1st year Parts & Labor / 2nd year Parts ONLY

Thank you for choosing A-iPower products. To ensure proper registration of your product warranty, please submit your warranty registration along with proof of purchase within 10 days of the date of purchase, this can be done by

- a) Completing the Warranty Registration form at the back of this manual and mailing to: A-IPOWER CORP 10887 COMMERCE WAY UNIT A FONTANA CA 92337 USA
- b) Visit us at www.a-ipower.com and click the product registration icon

### **Warranty Term**

A-iPower will provide warranty for any of its products purchased through any authorized AiPower dealer in North America to the original purchaser and will be warranted against defects in material or workmanship for a period of two (2) years for Consumer use from date of purchase, subject to exclusions noted herein. Commercial and Rental applications are warranted for a period of one (1) year from date of purchase.

- "Consumer Use" residential household use by a retail consumer
- "Commercial Use" all other use commercial, business, industrial, or rental purpose

### **How to Obtain Warranty Service**

Please call our Customer Service Dept. 1-855-888-3598

or e-mail to support@a-ipower.com Please have necessary information available - Model Number, Serial Number, Proof of Purchase

# DO NOT RETURN THE PRODUCT TO THE PLACE OF PURCHASE

A-iPower Customer Service Dept will assist with all product related questions and will help troubleshoot issues and will send any replacement parts as necessary while product is within the warranty period at no charge. If the issue cannot be resolved then A-iPower Customer Service Dept at its discretion determine and authorize diagnosis and repair through one of its authorized Service Centers. A-iPower Corp at its discretion may choose to provide replace of part, component, or product.

Service or replacement of parts at any unauthorized repair facility without prior authorization will not be covered by this warranty.

### **Warranty Exclusions**

This warranty does not cover the following: Regular wear and maintenance - this warranty will not cover repair when normal use has exhausted the lifetime of a part(s) or engine.

Installation and Maintenance - this warranty does not cover improper or unauthorized assembly, alteration, modification or any other damage resulting from misuse or neglect.

Normal maintenance parts - this warranty does not cover spark plugs, air filters, adjustments, or other related service due to obstructions and other build ups resulting from improper maintenance.

Additional exclusions - this warranty does not cover wearable parts such as filers, spark plugs, o-rings, batteries etc. It does not cover any cosmetic defects such as scratches to paint, decals etc. It does not cover any damage resulting from use of non-original manufacturer's parts, use of aftermarket parts. It does not cover any failures due to acts of God and

other force majeure events beyond the control of the manufacturer.

# Warranty limits and Implications and Consequential Damages

A-iPower is not obligated to cover any loss of time, use of product, freight cost, or any other incidental or consequential claim from the use of this product. This warranty is in Lieu of all other warranties, express or implied.

This warranty gives you specific legal rights which vary from state to state.

#### **MERCHANDISE RETURN GUIDELINES**

- All products must be returned in original or equivalent packaging. Improperly packaged returns will not be accepted.
- Must have adequate packing for transportation.
- Federal Law requires that all machines that utilize gasoline, oil, or other flammable liquids must be drained Completely & Thoroughly prior to shipment.
- Gas caps and oil plugs must be left off for 24 hours prior to shipping. Please note: liability for this violation of the law resides with the sender of the shipment.
- Return to address provided in return authorization, using the parcel service required. Units returned without authorization will not be honored.
- Please Note: Refunds will not be granted for items that have been modified or damaged by abuse or usage not in accordance with product instructions.



Fontana, CA 92337 USA Phone: 1-855-888-3598 support@a-ipower.com www.a-ipower.com



## **A-iPOWER WARRANTY REGISTRATION FORM**

Register your product by emailing this form to support@a-ipower.com or register on-line at: www.a-ipower.com.

Registering your product is important, it provides the following protections:

- 1. You have record of product purchased
- 2. Customer Service can Better serve you for Warranty related issues
- 3. We can contact you in the unlikely event should notification is necessary

<b>Customer Information:</b>		Product Information:			
Name:Phone:E-mail:		Serial i	#		
Address: City, State: Zip code: Purchase Date:		Model #  The serial No. can be found on the engine. PLEASE NOTE: Your product cannot be registered without model & serial numbers.			
1.THE PRODUCT WAS PURCHASED FOR:		<u> </u>			
2.THIS PRODUCT IS A: (select of A.□ First time purchase	B. □ Replacement				
3.HOW DID YOU FIRST LEARN OF THIS PRO  A. □ Radio B. □ Store Display C. □ Contractor D. □ Trade Show		ODUCT: (select one)  G. □ Direct Mail  H. □ From Friend/Relative/Neighbor  I. □ Internet  J. □ Other			
4. PLEASE RATE THE FOLLOWING:	Completly Satisfied	4	2	2	Not at all Satisfied
Product Value for Price Paid Performance Features Product Appearance Warranty Ease of Maintenance Noise Level 5 . HOW LIKELY ARE YOU TO F	Extremely Likely 5	4	3	2	Not Likely at all 1

Privacy Statement: A-ipower is committed to respecting your privacy and to complying with the regulations regarding the protection of personal data. The survey data we collect is for the purposes of marketing or product support and demographic information about the entire audience registering their products.



Fontana, CA 92337 USA Phone: 1-855-888-3598 support@a-ipower.com www.a-ipower.com