



PORTABLE GENERATOR

Owner's Manual



SAVE THIS MANUAL FOR FUTURE REFERENCE
IMPORTANT SAFETY INSTRUCTIONS ARE INCLUDED IN THIS MANUAL

CUSTOMER SERVICE SERVICE CLIENTELE SERVICIO AL CLIENTE 1-855-888-3598	A-iPOWER Corp. 10887 Commerce Way Unit A Fontana CA 92337 www.a-ipower.com
--	---

TABLE OF CONTENTS

Introduction.....	1	Section 6 — Maintenance.....	10
Section 1 — Safety Rules.....	1	6.1 Maintenance Schedule.....	10
Standards Index.....	1	6.2 General Recommendations.....	10
Section 2 — General Information.....	4	6.2.1 Generator Maintenance.....	10
2.1 Unpacking.....	4	6.2.2 To Clean the Generator.....	10
2.2 Assembly.....	4	6.2.3 Engine Maintenance.....	10
Section 3 —Features and Controls.....	5	6.2.4 Changing the Oil.....	11
Section 4 — Preparation		6.2.5 Replacing the Spark Plug.....	11
Before Operation.....	6	6.2.6 Spark Arrester.....	11
4.1 Adding Engine Oil.....	6	6.3 Service Air Filter.....	11
4.2 Adding Fuel.....	6	6.4 Valve Clearance.....	12
4.3 Grounding the Generator.....	6	6.5 General.....	12
Section 5 — Operation.....	7	6.6 Other Storage Tips.....	12
5.1 Starting the Engine.....	7	Section 7 — Storage.....	12
5.2 Connecting Electrical Loads.....	9	Section 8 — Troubleshooting.....	13
5.3 Stopping the Engine.....	9	Section 9 — Parameter.....	14
5.4 Low Oil Level Shut down System.....	9	Section 10 — Diagram.....	15
5.5 High Altitude.....	9	Section 11 — Warranties.....	26

WARNING

The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer or birth defects and other reproductive harm.

INTRODUCTION

A FEW WORDS ABOUT SAFETY

Your safety and the safety of others are very important. And using this generator safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining a generator.

Record the model and serial numbers as well as date and place of purchase for future reference. Have this information available when ordering parts and when making technical or warranty inquiries.

 WARNING	 ADVERTENCIA
This product can expose you to chemicals which are known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov	Este producto puede exponerle a sustancias químicas que el Estado de California reconoce como cancerígenas. Para obtener más información, diríjase a www.P65Warnings.ca.gov

Rev. 5_12_2010

 DANGER	
Using a generator indoors WILL KILL YOU IN MINUTES . Exhaust contains carbon monoxide, a poison gas you cannot see or smell.	
 NEVER use in the home or in partly enclosed areas such as garages.	 Only use OUTSIDE and far from open windows, doors, and vents.
Avoid other generator hazards. READ MANUAL BEFORE USE.	

SAFETY PRECAUTIONS

⚠ DANGER	
Using a generator indoors CAN KILL YOU IN MINUTES . Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.	
	
NEVER use inside a home or garage, EVEN IF doors and windows are open.	
Only use OUTSIDE and far away from windows, doors, and vents.	
Avoid other generator hazards. READ MANUAL BEFORE USE.	



POISONOUS GAS HAZARD.



Engine exhaust contains carbon monoxide, a poisonous gas that could kill you in minutes. You **CANNOT** smell it, see it, or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas.

- Operate this product **ONLY** outside far away from windows, doors and vents to reduce the risk of carbon monoxide gas from accumulating and potentially being drawn towards occupied spaces.
- Install battery-operated carbon monoxide alarms or plug-in carbon monoxide alarms with battery back-up according to the manufacturer's instructions. Smoke alarms cannot detect carbon monoxide gas.
- **DO NOT** run this product inside homes, garages, basements, crawlspaces, sheds, or other partially-enclosed spaces even if using fans or opening doors and windows for ventilation. Carbon monoxide can quickly build up in these spaces and can linger for hours, even after this product has shut off.
- **ALWAYS** place this product downwind and point the engine exhaust away from occupied spaces. If you start to feel sick, dizzy, or weak while using this product, shut it off and get to fresh air **RIGHT AWAY**. See a doctor. You may have carbon monoxide poisoning.



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.




Certain components in this product and related accessories contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

- If you start to feel sick, dizzy or weak while using the portable generator, you may have carbon monoxide poisoning. Get out side to fresh air immediately and call 911 for emergency medical attention. Very high levels of CO can rapidly cause victims to lose consciousness before they can rescue themselves. **DO NOT** attempt to shut off the generator before moving to fresh air. Entering an enclosed space where a generator is or has been running may put you at greater risk of CO poisoning.

CORRECT USAGE

Example location to reduce risk of carbon monoxide poisoning


- ONLY use outside and downwind, far away from windows, doors and vents.
- Direct exhaust away from occupied spaces.

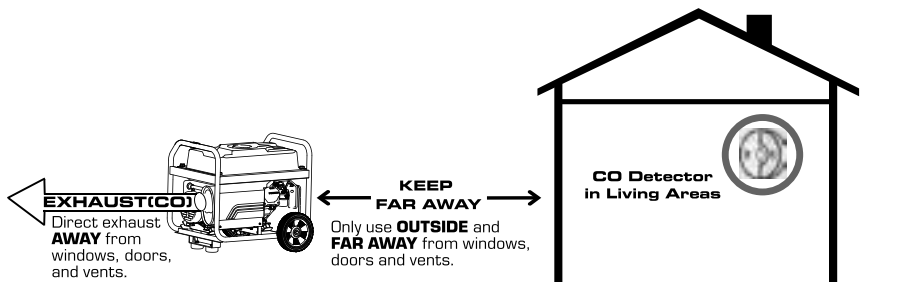

INCORRECT USAGE

Do not operate in any of the following locations:

- Near any door, window or vent
- Garage
- Basement
- Crawl Space
- Living Area
- Attic
- Entry Way
- Porch
- Mudroom

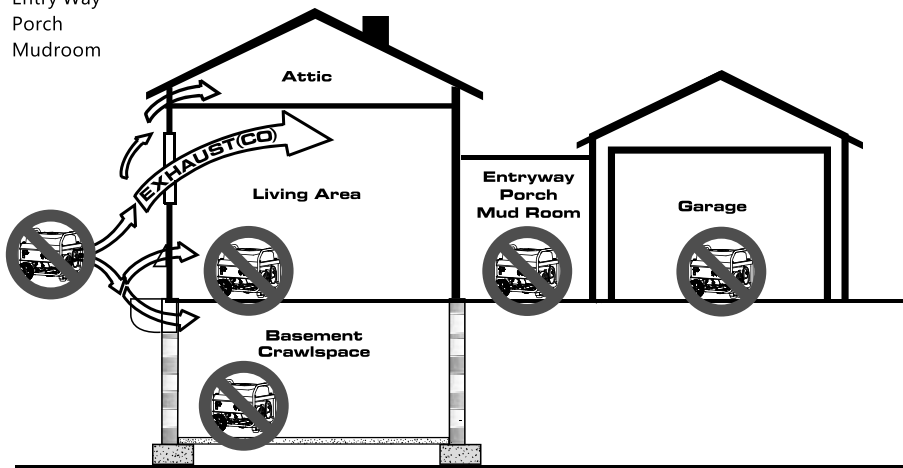



Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.

- When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.
- **NEVER** start or stop engine with electrical devices plugged in and turned on.



Fuel and its vapors are extremely flammable and explosive which could cause burns, fire, or explosion resulting in death or serious injury and/or property damage.

WHEN ADDING OR DRAINING FUEL

- Turn generator engine OFF and let it cool at least 2 minutes before removing fuel cap. Loosen cap slowly to relieve pressure in tank.
- Fill or drain fuel tank outdoors.
- **DO NOT** overfill tank. Allow space for fuel expansion.
- If fuel spills, wait until it evaporates before starting engine.
- Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.
- **DO NOT** light a cigarette or smoke.

WHEN STARTING EQUIPMENT

- Ensure spark plug, muffler, fuel cap, and air cleaner are in place.
- **DO NOT** crank engine with spark plug removed.

WHEN OPERATING EQUIPMENT

- **DO NOT** operate this product inside any building, carport, porch, mobile equipment, marine applications, or enclosure.
- **DO NOT** tip engine or equipment at angle which causes fuel to spill.
- **DO NOT** stop engine by moving choke control to "Start" position.

WHEN TRANSPORTING, MOVING OR REPAIRING EQUIPMENT

- Transport/move/repair with fuel tank EMPTY or with fuel shutoff valve OFF.
- **DO NOT** tip engine or equipment at angle which causes fuel to spill.
- Disconnect spark plug wire.

WHEN STORING FUEL OR EQUIPMENT WITH FUEL IN TANK

- Store away from furnaces, stoves, water heaters, clothes dryers, or other appliances that have pilot light or other ignition source because they could ignite fuel vapors.



- This generator does not meet U. S. Coast Guard Regulation 33CFR-183 and should not be used on marine applications.
- Failure to use the appropriate U. S. Coast Guard approved generator could result in death or serious injury and/or property damage.



Generator voltage could cause electrical shock or burn resulting in death or serious injury.

- Use approved transfer equipment, suitable for the intended use, to prevent backfeed by isolating generator from electric utility workers.

- When using generator for backup power, notify utility company.
- Use a ground fault circuit interrupter in any damp or highly conductive area, such as metal decking or steel work.
- **DO NOT** touch bare wires or receptacles.
- **DO NOT** use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- **DO NOT** operate generator in the rain or wet weather.
- **DO NOT** handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- **DO NOT** allow unqualified persons or children to operate or service generator.



Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death or serious injury and/or property damage.

Contact with muffler area could cause burns resulting in serious injury.

- **DO NOT** touch hot parts and **AVOID** hot exhaust gases.
- Allow equipment to cool before touching.
- It is a violation of California Public Resource Code, Section 4442, to use or operate the engine on any forest-covered, brush-covered, or grass-covered land unless the exhaust system is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order. Other states or federal jurisdictions may have similar laws. Contact the original equipment manufacturer, retailer, or dealer to obtain a spark arrester designed for the exhaust system installed on this engine.
- Replacement parts must be the same and installed in the same position as the original parts.



Unintentional sparking could cause fire or electric shock resulting in death or serious injury.

WHEN ADJUSTING OR MAKING REPAIRS TO YOUR GENERATOR

- Disconnect the spark plug wire from the spark plug and place the wire where it cannot contact spark plug.

WHEN TESTING FOR ENGINE SPARK

- Use approved spark plug tester.
- **DO NOT** check for spark with spark plug removed.



Starter and other rotating parts could entangle hands, hair, clothing, or accessories resulting in serious injury.

- **NEVER** operate generator without protective housing or covers.
- **DO NOT** wear loose clothing, jewelry or anything that could be caught in the starter or other rotating parts.
- Tie up long hair and remove jewelry.



Excessively high operating speeds could result in minor injury. Excessively low operating speeds impose a heavy load.

- **DO NOT** tamper with governor spring, links or other parts to increase engine speed. Generator supplies correct rated frequency and voltage when running at governed speed.
- **DO NOT** modify generator in any way.

NOTE:

Exceeding generators wattage/amperage capacity could damage generator and/or electrical devices connected to it.

- **DO NOT** exceed the generator's wattage amperage capacity.
- Start generator and let engine stabilize before connecting electrical loads.
- Connect electrical loads in OFF position, then turn ON for operation.
- Turn electrical loads OFF and disconnect from generator before stopping generator.

NOTE:

Improper treatment of generator could damage it and shorten its life.

- Use generator only for intended uses.
- If you have questions about intended use, ask dealer or contact local service center.
- Operate generator only on level surfaces.
- DO NOT expose generator to excessive moisture, dust, dirt, or corrosive vapors.
- DO NOT insert any objects through cooling slots.
- If connected devices overheat, turn them off and disconnect them from generator.
- Shut off generator if:
 - Electrical output is lost.
 - Equipment sparks, smokes, or emits flames.
 - Unit vibrates excessively.

**Medical and Life Support Uses.**

- In case of emergency, call 911 immediately.
- NEVER use this product to power life support devices or life support appliances.
- NEVER use this product to power medical devices or medical appliances.
- Inform your electricity provider immediately if you or anyone in your household depends on electrical equipment to live.
- Inform your electrical provider immediately if a loss of power would cause you or anyone in your household to experience a medical emergency.

INTRODUCTION

Thank you for purchasing products from A-iPOWER. We appreciate your business. Our generator is driven by a compact air-cooled engine with high performance, which can supply electrical power to operate power tools on job sites, or to run home appliances during outage, or provide power to remote locations where utility power is unavailable.

This manual contains safety information to make you aware of hazards and risks associated with generator products and how to avoid them. It is important that you read and understand these instructions thoroughly before attempting to start or operate this equipment. **Save this original instruction for future reference.**

If any portion of this manual is not understood, please contact the nearest authorized dealer for starting, operating and servicing procedures. We also strongly recommend you to instruct any other people who may operate the generator in an emergency.

The Emission Control System within this generator is warranted for standards set by the Environmental Protection Agency (EPA). Every effort has been made to ensure that information in this manual is both accurate and current. However A-iPOWER Corp. reserves all rights to change, alter, or otherwise to improve the generator and this documentation at any time without prior notice.

SAFETY RULES



Read this manual carefully and become familiar with your generator. Know its applications, its limitations, and any hazards involved.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE symbols are used to alert personnel with special instructions about a particular operation that may be hazardous if performed incorrectly, or carelessly. Observe them carefully. Their definitions are as follows:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE

NOTE provides additional information that is useful for proper use and maintenance of this tool. If a NOTE is indicated, make sure it is fully understood.

Safety Symbols and Meanings



Toxic Fumes



Electrical Shock



Kickback



Fire



Explosion



Hot Surface



Flying Objects



Moving Parts



Owner's Manual

DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES.**

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.



NEVER use inside a home or garage, **EVEN IF** doors and windows are open.



Only use **OUTSIDE** and far away from windows, doors, and vents.

WARNING



A running engine gives off carbon monoxide, an odorless, colorless, poison gas. Breathing carbon monoxide could result in death, serious injury, headache, fatigue, dizziness, vomiting, confusion, seizures, nausea or fainting.

- Operate this product **ONLY** outdoors.
- Install a battery operated carbon monoxide alarm near the bedrooms.
- Keep exhaust gas away from entering a confined area through windows, doors, ventilation intakes, or other openings.
- **NEVER** operate this product inside any building, carport, porch, mobile equipment, marine applications, or enclosure, even if windows and doors are open.

⚠ WARNING The engine exhaust from this product, certain components in this product and related accessories contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

⚠ WARNING This generator does not meet U.S. Coast Guard Regulation 33CFR-183 and can not be used on marine applications. Incorrect use of the appropriate U.S. Coast Guard approved generator could result in death or serious injury and/or property damage.

⚠ WARNING Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.



- When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.
- NEVER start or stop engine with electrical devices plugged in and turned on.

⚠ WARNING Fuel and its vapors are extremely flammable and explosive which could cause burns, fire or explosion resulting in death, serious injury and/or property damage.



WHEN ADDING OR DRAINING FUEL

- Turn generator engine OFF and let it cool at least 2 minutes before removing fuel cap. Loosen cap slowly to relieve pressure in tank.
- Fill or drain fuel tank outdoors.
- DO NOT overfill tank, Allow space for fuel expansion.
- If fuel spills, wait until it evaporates before starting engine.
- Keep fuel away from sparks, open flames, pilot light, heat, and other ignition sources.
- Check fuel lines, tank, cap and fittings frequently for cracks or leaks. Replace if necessary.
- DO NOT light a cigarette or smoke.

⚠ WARNING

WHEN STARTING EQUIPMENT

- Ensure spark plug, muffler, fuel cap, and air cleaner are in place.
- DO NOT crank engine with spark plug removed.

WHEN OPERATING EQUIPMENT

- DO NOT operate this product inside any building, carport, porch, mobile equipment, marine applications, or enclosure.
- DO NOT tip engine or equipment at angle which cause fuel to spill.
- DO NOT stop engine by moving choke control to "OFF" position.

WHEN TRANSPORTING, OR REPAIRING EQUIPMENT

- Transport/move/repair with fuel tank EMPTY or with fuel valve OFF.
- DO NOT tip engine or equipment at angle which cause fuel to spill.
- Disconnect spark plug wire.

WHEN STORING FUEL OR EQUIPMENT WITH FUEL IN TANK

- Store away from furnaces, stoves, water heaters, clothes dryers, or other appliances that have light or other ignition source because they could ignite fuel vapors.

⚠ WARNING



Generator voltage could cause electrical shock or burn resulting in death or serious injury.

- Use approved transfer equipment to prevent back feed by isolating generator from electric utility workers.
- When using generator for backup power, notify utility company.
- Use a ground fault circuit interrupter in any damp or highly conductive area, such as metal decking or steel work.
- DO NOT touch bare wires or receptacles.
- DO NOT use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- DO NOT operate generator in the rain or wet weather.
- DO NOT handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- DO NOT allow unqualified persons or children to operate or service generator.

⚠ WARNING



Exhaust heat/gases could ignite combustibles, structures or damage fuel tank causing a fire, resulting in death, serious injury and/or property damage. Contact with muffler area could cause burns resulting in serious injury.

- DO NOT touch hot parts and AVOID hot exhaust gases.
- Allow equipment to cool before touching.
- Keep at least 5 feet (1.5m) of clearance on all sides of generator including overhead.
- It is violation of California Public Resource Code, Section 4442, to use or operate the engine on any frost - covered, brush - covered, or grass - covered land unless the exhaust system is equipped with a spark arrester, as defined in Section 4442, maintained in effective working order. Other states or federal jurisdictions may have similar laws.
- Contact the original equipment manufacturer, retailer, or dealer to obtain a spark arrester designed for the exhaust system installed on this engine.
- Replacement parts must be the same and installed in the same position as the original parts.

⚠ WARNING



Unintentional sparking could cause fire or electric shock resulting in death or serious injury.

WHEN ADJUSTING OR MAKING REPAIRS TO YOUR GENERATOR

- Disconnect the spark plug wire from the spark plug and place the wire where it cannot contact spark plug.

WHEN TESTING FOR ENGINE SPARK

- Use approved spark plug tester.
- DO NOT check for spark with spark plug removed.

⚠ WARNING

- Starter and other rotating parts could entangle hands, hair, clothing, or accessories resulting in serious injury.
- NEVER operate generator without protective housing or covers.
 - DO NOT wear loose clothing, jewelry or anything that could be caught in the starter or other rotating parts.
 - Tie up long hair and remove jewelry.

⚠ CAUTION

Excessively high operating speeds could result in minor injury and/or generator damage.

Excessively low speeds impose a heavy load.

- DO NOT tamper with governor spring, links or other parts to increase engine speeds. Generator supplies correct rated frequency and voltage when running at governed speed.
- DO NOT modify generator in any way.

NOTE

Exceeding generators wattage/ amperage capacity could damage generator and/or electrical devices connected to it.

- DO NOT exceed the generator's wattage/ amperage capacity. See Don't Overload Generator in the Operation section.
- Start generator and let engine stabilize before connecting electrical loads.
- Turn electrical loads OFF and disconnect from generator before stopping generator.

NOTE

Improper treatment of generator could damage it and shorten its life.

- Use generator only for intended uses.
- If you have questions about intended use, ask dealer or contact local service center.
- Operate generator only on level surfaces.
- DO NOT expose generator to excessive moisture, dust, dirt, or corrosive vapor.
- DO NOT insert any object through cooling slots.
- If connected devices overheat, to turn them off and disconnect them from generator.
 - or electrical output is lost.
 - or equipment sparks, smokes, or emits flames.
 - or unit vibrates excessively.
- to turn them off and disconnect them from generator.


SECTION 2 —GENERAL INFORMATION

2.1 UNPACKING

- Set the carton on a rigid, flat surface.
- Remove everything from carton except generator.
- Open carton completely by cutting each corner from top to bottom.
- Leave generator on carton to install wheel kit.

2.1.1 PACKING CONTENTS

1-Owner's Manual
2-Wheels (For 2.5kW and up)
2-Wheel Axle (For 2.5kW and up)
1-Hardware Bag
(Including 1-Spark Plug Socket; 1-Extension)

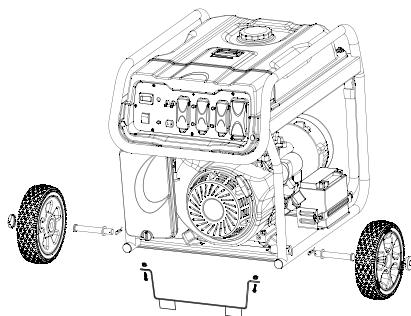

2.2 ASSEMBLY

The generator requires some assembly prior to using it.

2.2.1 ASSEMBLING THE ACCESSORY KIT

The wheels are designed to greatly improve the portability of the generator.

NOTE The wheels are Not intended for over-the-road use.

Refer to Figure to install the leg supports as shown.

- Unscrew nut on leg support, install bolt through the generator frame, secure the bolt tightly with wrench(not included).

Refer to Figure to install wheels as shown.

- Slide the axle through the wheel hub, then insert the flat washer.
- Slide the axle through the frame brackets.
- Bend the cotter pin tabs outward to lock the pin in place.

IMPORTANT: Before operating the generator the shock-absorbing seat (cushion) must be adjusted for proper clearance (figure 1). Loosen the lock nut and adjust the shock-absorbing seat so there is a 3mm gap between the top of the seat and the bottom of the motor bracket (figure 2). Re-tighten the lock nut.

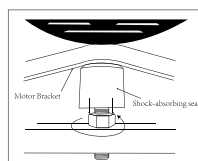
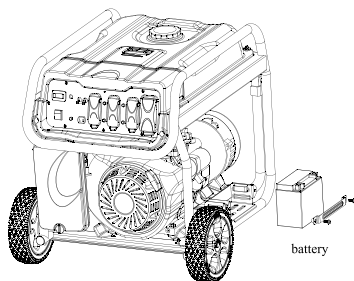


Figure 1


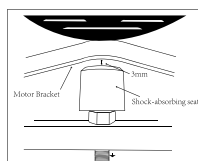


Figure 2

SECTION 3 —FEATURES AND CONTROLS



Read this Owner's Manual and safety rules before operating your generator. Compare the illustrations with your generator, to familiarize yourself with the locations of various controls and adjustments. Save this manual for future reference.

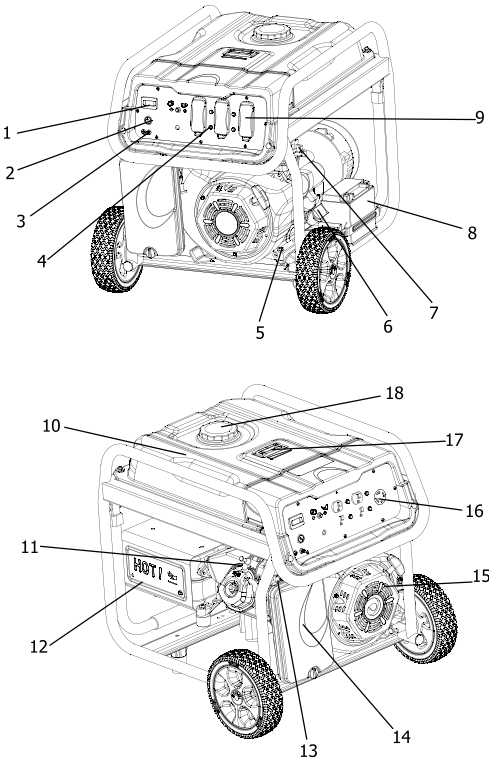

1	TIME METER	10	FUEL TANK
2	ENGINE SWITCH	11	SPARK PLUG
3	GROUND TERMINAL	12	MUFFLER
4	AC CIRCUIT BREAKER	13	CHOKE LEVER
5	OIL DRAIN PLUG	14	AIR FILTER
6	OIL FILL CAP/DIPSTICK	15	RECOIL STARTER
7	FUEL VALVE	16	L14-30R
8	BATTERY	17	FUEL GAUGE
9	COVER	18	FUEL TANK CAP

NOTE

Pictures and drawings used in this manual are for reference only and do not represent any specific model.

SECTION 4 — PREPARATION BEFORE OPERATION


4.1 ADDING ENGINE OIL

All oil should meet minimum American Petroleum Institute (API) Service Class SJ, SL or better. Use no special additives. Select the oil's Viscosity grade according to the expected operating temperature (also see chart).

Above 40 °F, use SAE 30

Between 40 °F to 10 °F, use 10W-30

Below 10 °F, use synthetic 5W-30

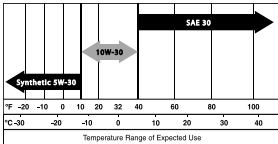

NOTE Improper treatment of generator could damage it and shorten its life. DO NOT attempt to crank or start the engine before it has been properly serviced with the recommended oil. This could result in an engine failure.

- Place generator on a flat, level surface.
- Clean area around oil fill and remove oil fill cap and dipstick. Wipe dipstick clean.
- Slowly fill engine with oil through the oil filter open until it reaches the full mark on the dipstick. Stop filling occasionally to check oil level. Be careful do not over fill.
- Install oil fill cap and finger tighten securely.
- Check engine oil level before starting each time thereafter.


4.2 ADDING FUEL

DANGER Never fill tank indoors. Never fill fuel tank when engine is running or hot. Turn generator engine

OFF and allow engine to cool entirely before filling fuel tank. Avoid spilling gasoline on HOT engine. Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources. DO NOT light a cigarette or smoke when filling the fuel tank. Fuel is highly FEAMMABLE and its vapors are EXPLOSIVE.

- Use regular UNLEAD gasoline with the generator engine. Do not use any fuel with more than 10% added ethanol, and never use E85 fuel.
- Do not mix oil with gasoline.
- Install fuel cap and wipe up any spilled gasoline.

CAUTION Do not overfill the fuel tank. Allow space for fuel expansion. IF the fuel tank is overfilled, fuel can overflow onto a HOT engine and cause FIRE or EXPLOSION. If fuel spills, wait until it evaporates before starting engine. Check fuel lines, tank, cap and fittings frequently for cracks or leaks. Replace if necessary.

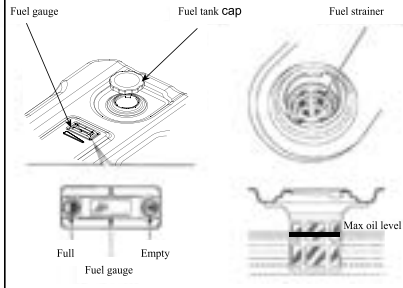

IMPORTANT: It is important to prevent gum deposits from forming in fuel system parts such as the carburetor, fuel hose or tank during storage. Alcohol-blended fuels (called gasohol), ethanol or methanol) can attract moisture, which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system. So the fuel should be emptied before storage of 30 days or longer. See the "Storage" section. Never use engine or carburetor cleaner products in the fuel tank as permanent damage may occur.

4.3 GROUNDING THE GENERATOR

The national Electrical Code requires that the frame and external electrically conductive part of this generator be properly connected to an approved earth ground.

Local electrical codes may also require proper grounding of the unit. For that purpose, connecting a No. 10 AWG (American Wire Gauge) stranded copper wire to the grounding lug and to an earth-driven copper or brass grounding rod (electrode) provides adequate protection against electrical shock. However, local codes may vary widely. Consult with a local electrician for grounding requirement in the area.

Proper grounding of the generator will help prevent electrical shock in the event of ground fault condition in the generator or in connected electrical devices. Proper grounding also helps dissipate static electricity, which often builds up in ungrounded devices.

WATTAGE REFERENCE GUIDE


Wattage Reference Guide		
Tool or Appliance	Running* (Rated) Watts	Additional Starting (Surge) Watts
Essentials		
Light Bulb - 75 watt	75	—
Furnace Fan Blower - 1/2 HP	800	2350
Sump Pump - 1/3 HP	800	1300
Refrigerator/Freezer	700	2200
Water Well Pump - 1/2 HP	1000	2100
Heating/Cooling		
Window AC - 10,000 BTU	1200	3600
Humidifier - 13 Gal	175	—
Central AC - 24,000 BTU	3800	11400
Kitchen		
Microwave Oven - 1000 Watt	1000	—
Coffee Maker	1000	—
Electric Stove - 8" Element	2100	—
Toaster	850	—
Family Room		
DVD/CD Player	100	—
VCR	100	—
Stereo Receiver	450	—
Color Television - 27 in	500	—
Personal Computer w/17 in monitor	800	—
Other		
Security System	500	—
AM/FM Clock Radio	100	—
Garage Door Opener - 1/2 HP	875	2350
Electric Water Heater	4700	11700
DIY/Job Site		
Quartz Halogen Work Light	1000	—
Airless Sprayer - 1/3 HP	600	1200
Reciprocating Saw	960	—
Electric Drill - 1/2 HP, 5.4 Amps	600	900
Circular Saw - 7-1/4 in	1400	2300
Miter Saw - 10 in	1800	1800
Table Planer - 6 in	1800	1800
Table Saw/Radial Arm Saw - 10 in	2000	2000
Air Compressor - 1 HP	1600	4500

SECTION 5 — OPERATION


5.1 STARTING THE ENGINE

⚠ WARNING Never start or stop engine with electrical devices plugged into the receptacles AND devices turned on.


Unplug all electrical loads from the unit's receptacles before starting the engine. Make sure the unit is in a level position.

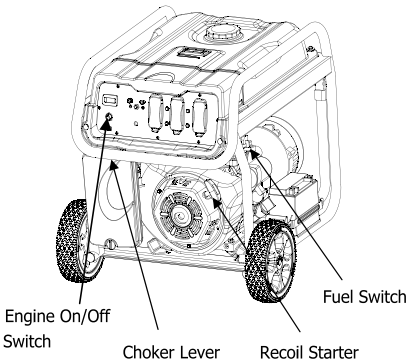


Turn engine switch to ON position for Recoil start.

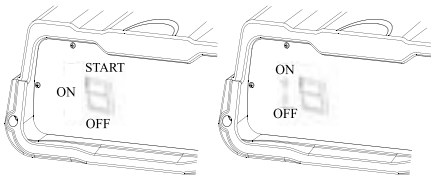

Turn Fuel switch to ON position.

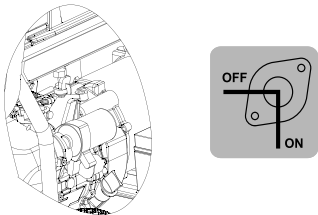

Move engine choke lever to the CHOKE position.

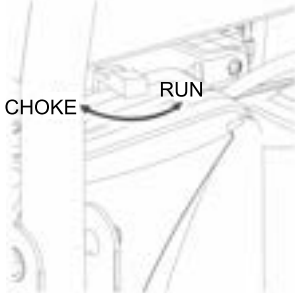


For Recoil start, firmly grasp the recoil handle and pull slowly until increased resistance is felt. Pull rapidly up and away.



Recoil Starter

For electric start, push the switch to “START” position, hold in start position until generator starts. Caution: to prolong the life of starter components, DO NOT hold for more than 10 seconds. Pause and retry as necessary. After generator starts, release switch and it will return to the “ON” position automatically.

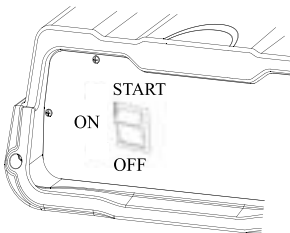

When engine starts, move choke lever to 1/2-CHOKE position until engine runs smoothly and then fully into RUN position. If engine falters, move choke back out to 1/2- CHOKE position until engine runs smoothly and then fully into RUN position.

NOTE If battery is discharged, use manual starting instructions.

NOTE If engine fires, but does not continue to run, move choke lever to the CHOKE position and repeat starting instructions.

WARNING Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury. When starting engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback. Never start or stop engine with electrical devices plugged in and turned on.

NOTE If engine fails to start after 3 pulls, or if unit shut down during operation, make sure unit is on a level surface and check for proper oil level in crankcase. This unit may be equipped with a low oil protection device. If so, oil must be checked at proper level for engine to start and run.

WARNING Exhaust heat/ gases could ignite combustible, structures or damage fuel tank causing a fire, resulting in death, serious injury and/or property damage. Contact with muffler area could cause burn resulting in serious injury. DO NOT touch hot part and AVOID hot exhaust gases. Allow equipment to cool before touching. Keep at least 5 feet (152 cm) of clearance on all sides of generator including overhead. Contact the original equipment manufacturer, retailer , or dealer to obtain a spark arrester designed for the exhaust system installed on this engine. Replacement parts must be the same and installed in the same position as the original parts.

IMPORTANT: Do not overload the generator. Also, do not overload individual panel receptacles. These outlets are protected against overload with push-to-reset-type circuit breakers. If amperage rating of any circuit breaker is exceeded, that breaker opens and electrical output to that receptacle is lost.

5.2 CONNECTING ELECTRICAL LOADS

- Let engine run stable and warm up for a few minutes after starting.
- Plug in and turn on the desired 120 and/or 240 Volt AC, single phase, 60 Hz electrical loads.
- Add up the rated watts (or amps) of all loads to be connected at one time. This total should not be greater than (a) the rated wattage/amperage capacity of the generator or (b) circuit breaker rating of the receptacle supplying the power.

NOTE

DO NOT connect 240 Volt loads to the 120 Volt duplex receptacles, and do not do vice versa also. DO NOT connect 3 phase loads to the generator. DO NOT connect 50 Hz loads to the generator.

NOTE

Start generator and let engine stabilize before connecting electrical loads. Connect electrical loads in OFF position then turn ON for operation. Turn electrical loads OFF and disconnect from generator before stopping generator.

NOTE

Exceeding generators wattage/amperage capacity could damage generator and/or electrical devices connected DO NOT exceed the generator's wattage/amperage capacity.

- Overloading a generator in excess of its rated wattage capacity can result in damage to the generator and to connected electrical devices. Observe the following to prevent overloading the unit:
 - Add up the total wattage of all electrical devices to be connected at one time. This total should NOT be greater than the generator's wattage capacity.
- The rated wattage of lights can be taken from light bulbs. The rated wattage of tools, appliances and motors can usually be found on a data label

NOTE

or decal affixed to be the device.

If the appliance, tool or motor does not give wattage, multiply volts times ampere rating to determine watts (volts $\times$ amps = watts).

Some electric motors, such as induction types, require about three times more watts of power for starting than for running. This surge of power lasts only a few seconds when starting such motors. Make sure to allow for high starting wattage when selecting electrical devices to connect to the generator:

- Figure the watts needed to start the largest motor.
- Add to that figure the running watts of all other connected loads.

The wattage reference guide is provided to assist in determining how many items the generator can operate at one time.

5.3 STOPPING THE ENGINE

Shut off all loads then unplug the electrical cables from generator panel receptacles. Never start or stop the engine with electrical devices plugged in and turned on.

Let engine run at no-load for several minutes to stabilize the internal temperatures of engine and generator.

Move ON/OFF switch to OFF position.

Close fuel valve.

5.4 LOW OIL LEVEL SHUT DOWN SYSTEM

The engine is equipped with a low oil level sensor that shuts down the engine automatically when the oil level drops below a specified level. If the engine shuts down by itself and the fuel tank has enough gasoline, check engine oil level.

5.5 HIGH ALTITUDE

At altitudes over 5,000 feet (1524 meters), a minimum 85 octane / 85 (89 RON) gasoline is acceptable. To remain emissions compliant, high altitude adjustment is required. Operation without this adjustment will cause decreased performance, increased fuel consumption, and increased emissions. See an authorized dealer for high altitude adjustment information. Operation of the engine at altitudes below 2,500 feet (762 meters) with the high altitude kit is not recommended.

SECTION 6 — MAINTENANCE

6.1 MAINTENANCE SCHEDULE

Follow the calendar intervals shown below. More frequent service is required when operating in adverse conditions.

First 5 Hours
• Change engine oil
Every 8 Hours or Daily
• Clean debris
• Check engine oil level
Every 25 Hours or Yearly
• Clean engine air filter
Every 50 Hours or Yearly
• Change engine oil
Yearly
• Replace engine air filter
• Service fuel valve
• Service spark plug
• Inspect muffler and spark arrester
• Clean cooling system

6.2 GENERAL RECOMMENDATIONS

The warranty of the generator does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, the operator must maintain the generator as instructed in this manual.

Some adjustments will need to be made periodically to properly maintain the generator.

All adjustments in the Maintenance section of this manual should be made at least once each season. Follow the requirements in the “Maintenance Schedule”.

NOTE Once a year replace the spark plug and replace the air filter. A new spark plug and clean air filter assure proper fuel-air mixture and help the engine run better and last longer.

6.2.1 GENERATOR MAINTENANCE

Generator maintenance consists of keeping the unit clean and dry. Operate and store the unit in a clean dry environment where it will not be exposed to excessive dust, dirt, moisture or any corrosive vapors. Cooling air slots in the generator must not become clogged with snow, leaves, or any other foreign material. Check the cleanliness of the generator frequently and clean when dust, dirt, oil, moisture or other foreign substances are visible on its exterior surface.

CAUTION Never insert any object or tool though the air cooling slots, even if the engine is not running.

NOTE DO NOT use a garden hose to clean generator. Water can enter the engine fuel system and cause problem. In addition, if water enters the generator though cooling air slots, some water will be retained in voids and crevices of the rotor and stator winding insulation. Water and dirt buildup on the generator internal windings will eventually decrease the insulation resistance of these windings.

6.2.2 TO CLEAN THE GENERATOR


- Use a damp cloth to wipe exterior surfaces clean.
- A soft, bristle brush may be used to loosen caked on dirt, oil etc.
- A vacuum cleaner may be used to pick up loose dirt and debris.
- Low pressure air (not to exceed 25 psi) may be used to blow away dirt. Inspect cooling air slots and openings on the generator. These openings must be kept clean and unobstructed.

6.2.3 ENGINE MAINTENANCE

DANGER When working on the generator, always disconnect spark plug wire from spark plug and keep wire away from spark plug.

6.2.4 CHANGING THE OIL

Change the oil after the first five hours of operation, then every 50 hours thereafter. If running this unit under dirty or dusty conditions, or in extremely hot weather, to change the oil more often.

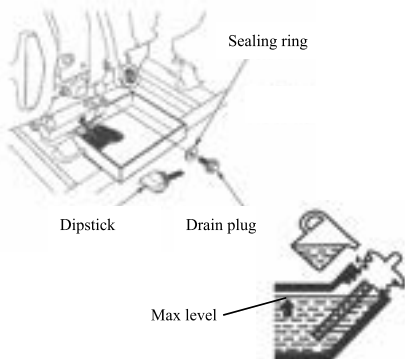

CAUTION

Hot oil may cause burns. Allow engine to cool before draining oil. Avoid prolonged or repeated skin exposure with used oil. Thoroughly wash exposed areas with soap.


Use the following instructions to change the oil while the engine is still warm:

- Clean area around oil drain plug.
- Remove oil drain plug from engine and oil fill plug to drain oil completely into a suitable container.
- When oil has completely drained, install oil drain plug and tighten securely.
- Fill engine with recommended oil. (See “Before Starting the Generator” for oil recommendations).
- Wipe up any spilled oil.
- Dispose of used oil at a proper collection center.

6.2.5 REPLACING THE SPARK PLUG

Use spark plug F6TC, F7TC, BPR4ES or Champion RN14YC. Replace the plug once each year. This will help the engine start easier and run better.

- Stop the engine and pull the spark plug wire off of the spark plug.
- Clean the area around the spark plug and remove it from the cylinder head.
- Set the spark plug’s gap to 0.70-0.80 mm (0.028-0.031 in.). Install the correctly gapped spark plug into the cylinder head and torque to 15 ft/lbs.

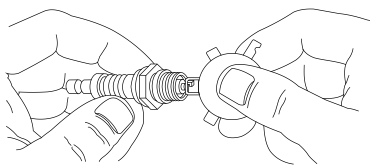



6.2.6 SPARK ARRESTER

- Shut off generator and allow the engine and muffler to cool down completely before servicing spark arrester (located on the back of the muffler).
- Remove the clamp and spark arrester screen.
- Clean the spark arrester screen with a small wire brush.
- Replace the spark arrester if it is damaged.
- Installation of the spark arrester screen is the reverse of the removal.

6.3 SERVICE AIR FILTER

The engine will not run properly and may be damaged if using a dirty air filter. Replace the air filter once a year. Clean or replace more often if operating under dusty conditions.

- Remove air filter cover.
- Wash in soapy water. Squeeze filter dry in clean cloth (DO NOT TWIST).
- May drop a bit of engine-oil to avoid ice blocked during winter season.
- Clean air filter cover before re-installing it.

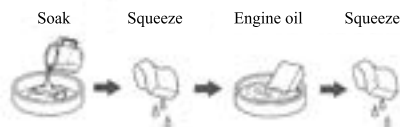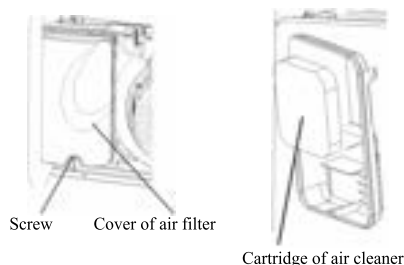

6.4 VALVE CLEARANCE

After the first 50 hours of operation, check the valve clearance in the engine and adjust if necessary.

Valve Clearance

- Intake: 0.10-0.15mm (0.004-0.006 in)
- Exhaust: 0.15-0.20mm (0.006-0.008 in)

Important: If feeling uncomfortable about doing this procedure or the proper tools are not available, please take the generator to the nearest service center to have the valve clearance adjusted. This is a very important step to ensure longest life for the engine.

SECTION 7 — STORAGE

7.1 GENERAL

The generator should be started at least once every seven days and be allowed to run at least 30 minutes. If this cannot be done and the unit must be stored for more than 30 days, use the following information as a guide to prepare it for storage.

⚠ DANGER NEVER store engine with fuel in tank indoors or in enclosed, poorly ventilated areas where fumes may reach an open flame, spark or pilot light as on a furnace, water heater, clothes dryer or other gas appliance.


⚠ CAUTION Avoid spray from spark plug holes when cranking engine.

⚠ DANGER Drain fuel into approved container outdoors, away from open flame. Be sure engine is cool. Do not smoke.

7.2 LONG TERM SHORTAGE INSTRUCTIONS

It is important to avoid gum deposits from forming in essential fuel system parts such as the carburetor, fuel hose or tank during storage. Also, experience indicates that alcohol-blended fuels (called gasohol, ethanol or methanol) can attract moisture, which leads to separation and formation of acids storage. Acidic gas can damage the fuel system of an engine while in storage.

To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer, as follows:

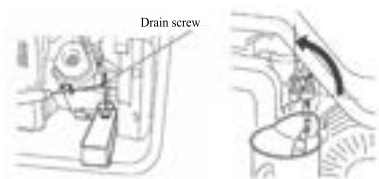

- Remove all gasoline from the fuel tank.
- Start and run engine until engine stops from lack of fuel.
- While engine is still warm, drain oil from crankcase. Refill with recommended grade.
- Remove spark plugs and pour about 1/2 ounce (15 ml) of engine oil into the cylinders. Cover spark plug hole with rag. Pull the recoil starter a couple times to lubricate the piston rings and cylinder bore.

7.3 OTHER STORAGE TIPS

- Do not store gasoline from one season to another.
- Replace the gasoline can if it starts to rust. Rust and/or dirt in the gasoline will cause problems with the carburetor and fuel system.
- If possible, store the unit indoors and cover it to give protection from dust and dirt. BE SURE TO EMPTY THE FUEL TANK.
- If it is not practical to empty the fuel tank and the unit is to be stored for some time, use a commercially available fuel stabilizer added to the gasoline to increase the life of the gasoline.
- Cover the unit with a suitable protective cover that does not retain moisture.

⚠ DANGER NEVER cover the generator while engine and exhaust area are warm.

- Install and tighten spark plugs. Do not connect spark plug wires.
- Clean the generator outer surfaces. Check that cooling air slots and openings on generator are open and unobstructed.
- Store the unit in clean, dry place.

SECTION 8 — TROUBLESHOOTING

Problem	Cause	Correction
Engine is running, but no AC output is available.	1. One of the circuit breakers is off. 2. Fault in generator. 3. Poor connection or defective cord set. 4. Connected device is bad.	1. Turn circuit breaker to ON. 2. Contact authorized service facility. 3. Check and repair. 4. Connect another device that is in good condition.
Engine runs good without loading, but "bogs down" when loads are connected.	1. Short circuit in a connected load. 2. Engine speed is too slow. 3. Generator is overloaded. 4. Shorted generator circuit. 5. Clogged or dirty fuel filter.	1. Disconnect shorted electrical load. 2. Contact authorized service facility. 3. See Don't Overload Generator. 4. Contact authorized service facility. 5. Clean or replace fuel filter.
Engine can't be started, or runs rough or shuts down while running.	1. Start switch in off position. 2. Fuel valve is in "Off" position. 3. Failed battery. 4. Low oil level. 5. Dirty air cleaner. 6. Clogged or dirty fuel filter. 7. Out of fuel. 8. Stale fuel. 9. Spark plug wire not connected to spark plug. 10. Bad spark plug. 11. Water in fuel. 12. Flooded. 13. Excessively rich fuel mixture. 14. Intake valve stuck open or closed. 15. Engine has lost compression.	1. Turn key in start switch to on . 2. Turn fuel valve to "On" position. 3. Replace battery. 4. Fill crankcase to proper level or place generator on level surface. 5. Clean or replace air cleaner. 6. Clean or replace fuel filter. 7. Fill fuel tank. 8. Drain fuel tank and carburetor; fill with fresh fuel. 9. Connect wire to spark plug. 10. Replace spark plug. 11. Drain fuel tank and carburetor; fill with fresh fuel. 12. Wait 5 minutes and re-crank engine. 13. Contact authorized service facility. 14. Contact authorized service facility. 15. Contact authorized service facility.
Engine lacks power.	1. Load is too high. 2. Dirty air filter. 3. Clogged or dirty fuel filter.	1. See Don't Overload Generator. 2. Replace air filter. 3. Clean or replace fuel filter.
Engine "hunts" or falters	1. Carburetor is running too rich or too lean. 2. Clogged or dirty fuel filter.	1. Contact authorized service facility. 2. Clean or replace fuel filter.

SECTION 9 — PARAMETER


Specification

Model	SU1500	SUA1500	SUA2800	SUA4500 SUA4500E	SUA5000
Engine	3HP	3HP	6.5HP	7.5HP	7.5HP
Displacement	98cc	98cc	196cc	223cc	223cc
Rated frequency	60Hz	60Hz	60Hz	60Hz	60Hz
Rated voltage	120V	120V	120V	120V/240V	120V/240V
Rated power	1.2KW	1.2KW	2.5KW	3.5KW	4.25KW
Max power	1.5KW	1.5KW	2.8KW	4.0KW	5.0KW
Fuel tank capacity	1.6Gallon	1.6Gallon	4Gallon	4Gallon	4Gallon
Full load continuum running time	10h	10h	9h	7h	6h
1/2 load continuum running time	17h	17h	16h	13h	11h


Model	SUA7000 SUA7000E	SUA8250E	SUA9000E	SUA10000E SUA10000EC	SUA12000E SUA12000EC
Engine	13HP	14HP	14HP	16HP	16HP
Displacement	389cc	420cc	420cc	459cc	459cc
Rated frequency	60Hz	60Hz	60Hz	60Hz	60Hz
Rated voltage	120V/240V	120V/240V	120V/240V	120V/240V	120V/240V
Rated power	6.0KW	7.25KW	7.0KW	8.2KW	9.0KW
Max power	7.0KW	8.25KW	9.0KW	10KW	12.0KW
Fuel tank capacity	7Gallon	7Gallon	7Gallon	7Gallon	7Gallon
Full load continuum running time	8h	4.75h	6.5	6h	6h
1/2 load continuum running time	12h	8.5h	9.5h	9h	9h

SECTION 10 — DIAGRAM


SU1500

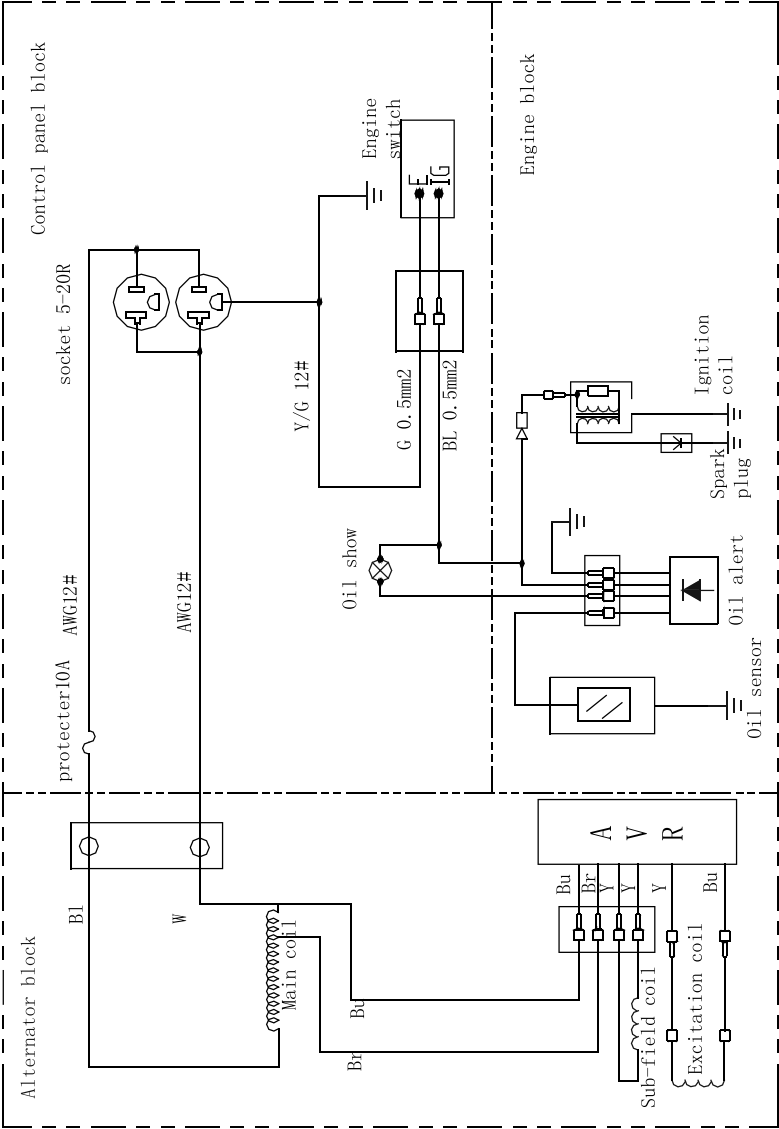


SUA1500

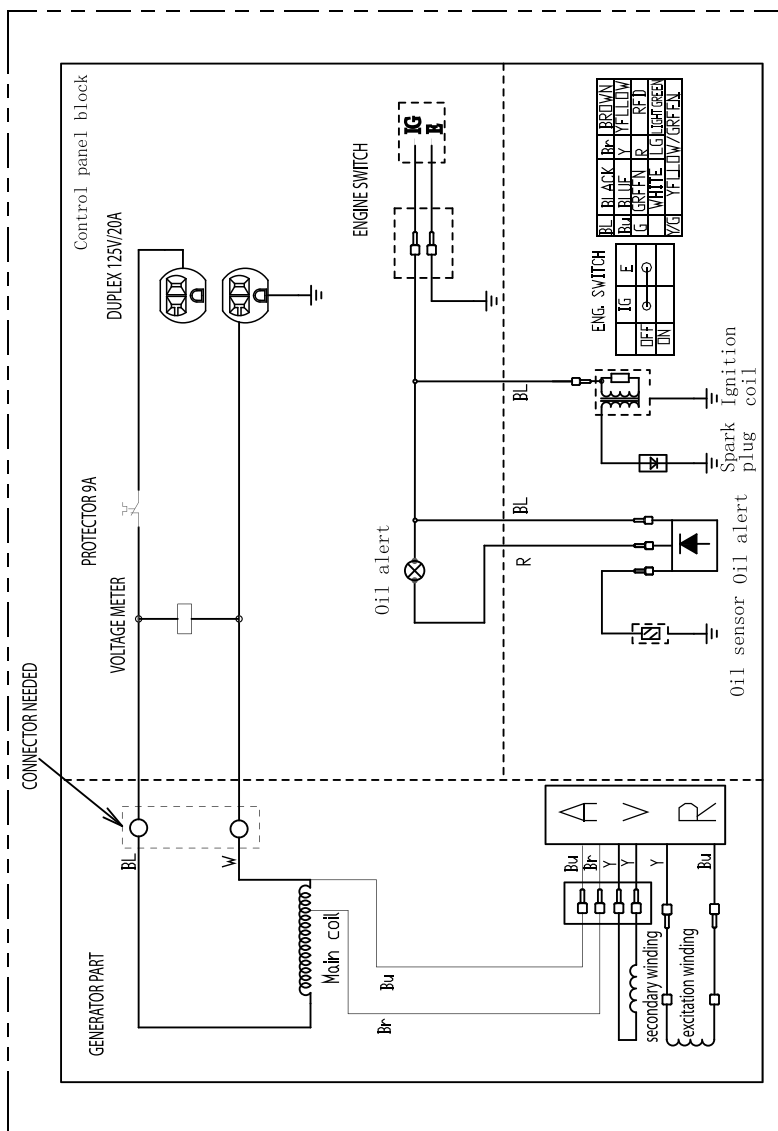


SUA2800

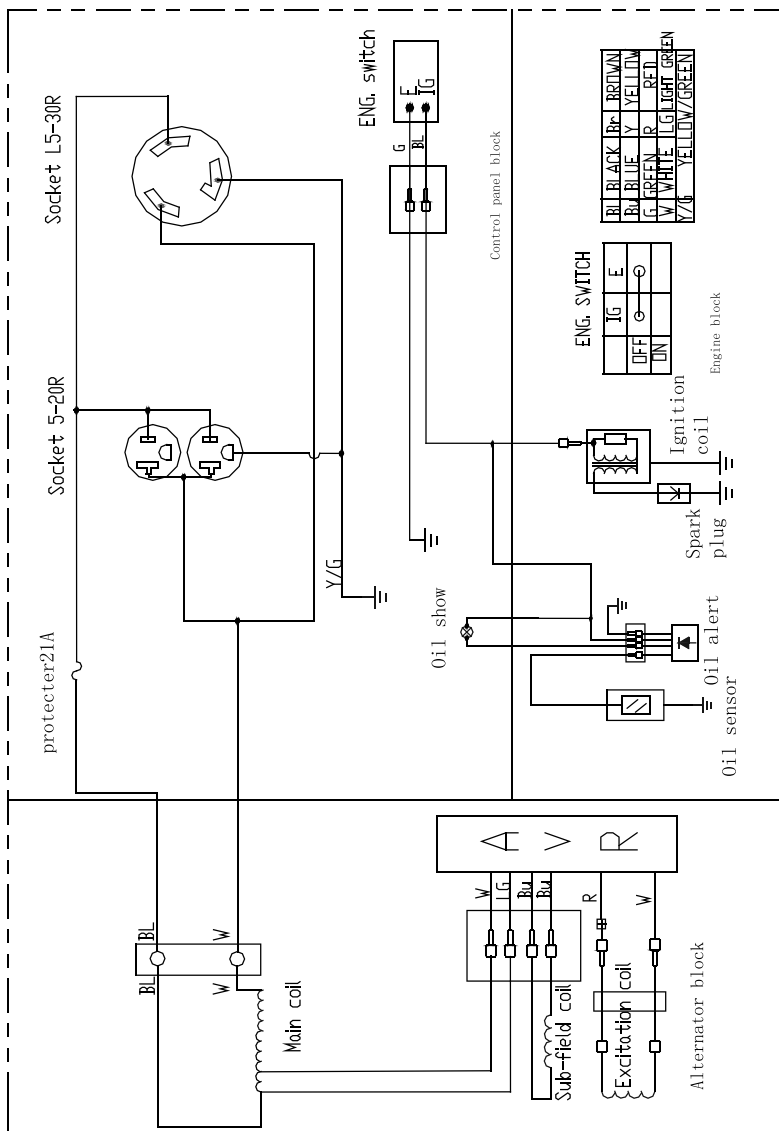


SUA4500

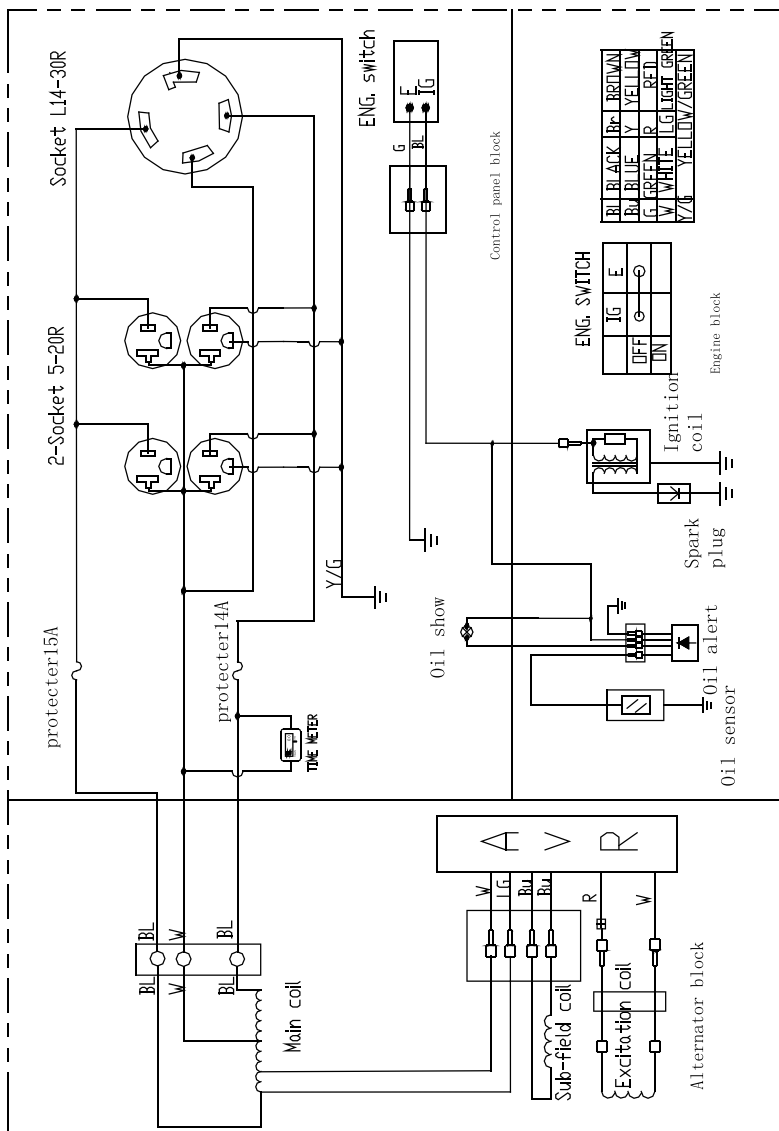


SUA4500E

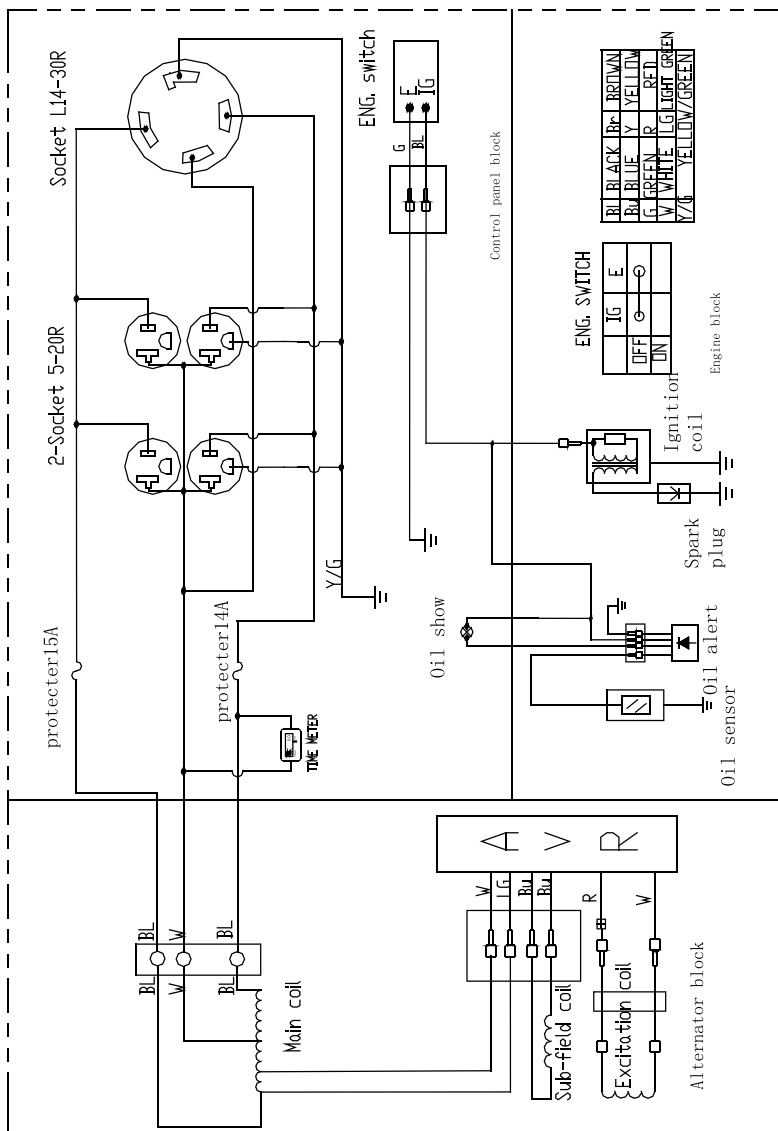

SUA5000/SUA5000C

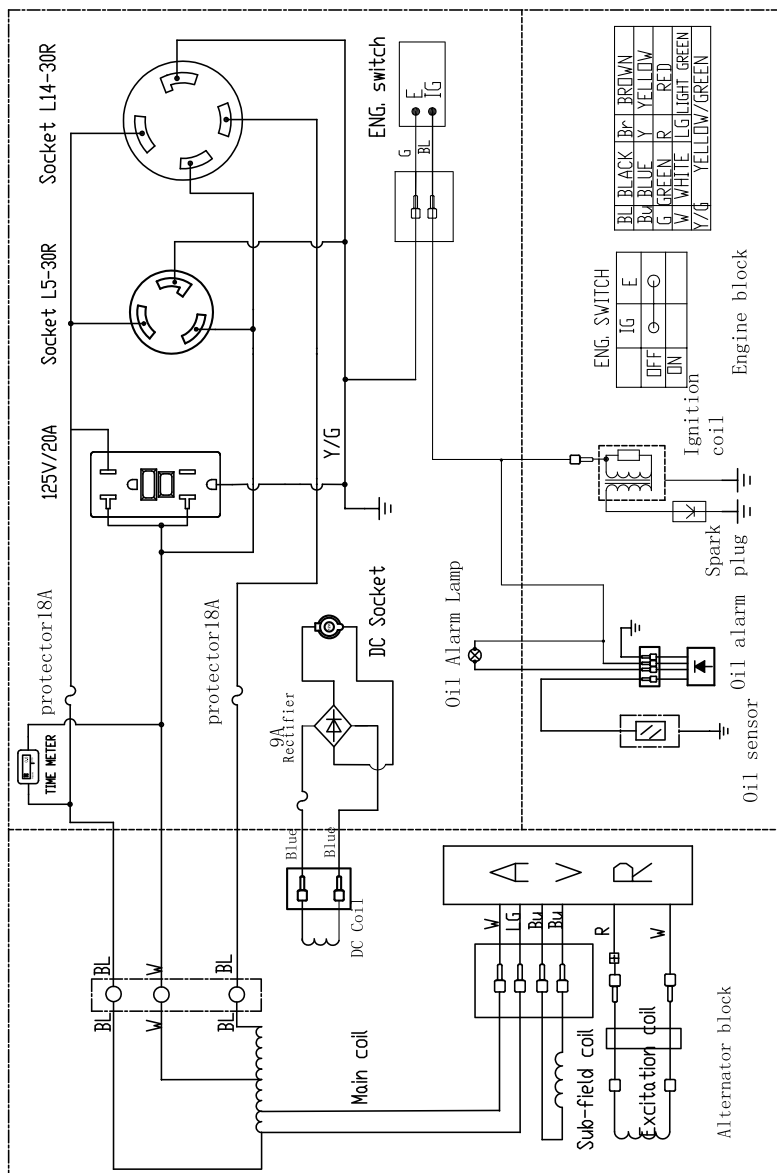


SUA7000

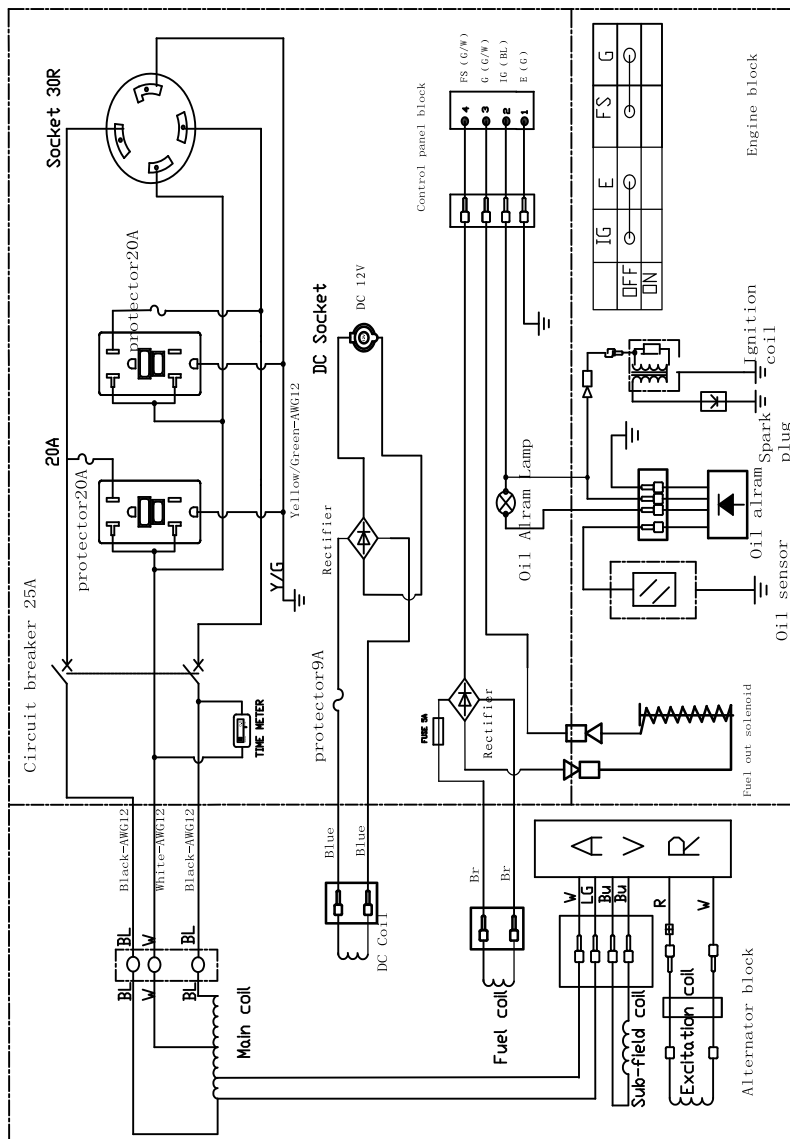


The diagram illustrates the internal wiring of a 25A circuit breaker. Key components and their connections include:

- 25A Circuit Breaker:** The main unit with a 20A fuse and a 30R socket.
- 30R Socket:** A table showing the wiring for the 30R socket, including LG, E, F, G, S, T, and a common ground.
- Main Coil:** A coil connected to the 25A circuit breaker.
- DC Coil:** A coil connected to the 25A circuit breaker.
- Battery:** A battery connected to the 25A circuit breaker.
- Alternator Block:** A block containing a sub-field coil, an excitation coil, and a fuel out solenoid.
- Oil Sensor:** A sensor connected to the 25A circuit breaker.
- Spark Plug Coil:** A coil connected to the 25A circuit breaker.
- Oil Alarm Lamp:** A lamp connected to the 25A circuit breaker.
- FUSE 8A:** A fuse connected to the 25A circuit breaker.
- Oil Alarm:** A component connected to the 25A circuit breaker.
- Recifier:** A component connected to the 25A circuit breaker.
- protector20A:** A component connected to the 25A circuit breaker.
- protector30R:** A component connected to the 25A circuit breaker.
- Y/G:** A component connected to the 25A circuit breaker.
- DC 12V:** A component connected to the 25A circuit breaker.
- DC Socket:** A component connected to the 25A circuit breaker.
- Yellow/Green-WG12:** A component connected to the 25A circuit breaker.
- Blue:** A component connected to the 25A circuit breaker.
- White-WG12:** A component connected to the 25A circuit breaker.
- Black-WG12:** A component connected to the 25A circuit breaker.
- TIME METER:** A component connected to the 25A circuit breaker.
- Oil Alarm Lamp:** A lamp connected to the 25A circuit breaker.
- FUSE 8A:** A fuse connected to the 25A circuit breaker.
- Oil Alarm:** A component connected to the 25A circuit breaker.
- Recifier:** A component connected to the 25A circuit breaker.
- protector20A:** A component connected to the 25A circuit breaker.
- protector30R:** A component connected to the 25A circuit breaker.
- Y/G:** A component connected to the 25A circuit breaker.
- DC 12V:** A component connected to the 25A circuit breaker.
- DC Socket:** A component connected to the 25A circuit breaker.
- Yellow/Green-WG12:** A component connected to the 25A circuit breaker.
- Blue:** A component connected to the 25A circuit breaker.
- White-WG12:** A component connected to the 25A circuit breaker.
- Black-WG12:** A component connected to the 25A circuit breaker.
- TIME METER:** A component connected to the 25A circuit breaker.


SUA8250E

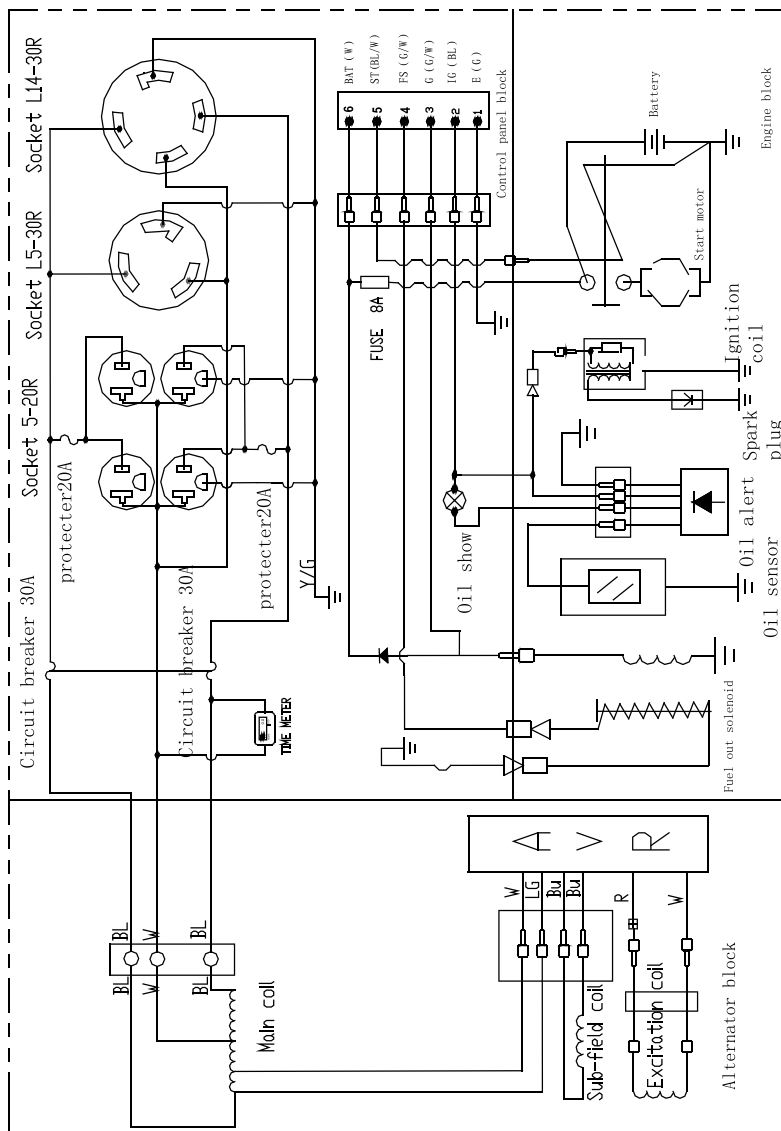


SUA9000E

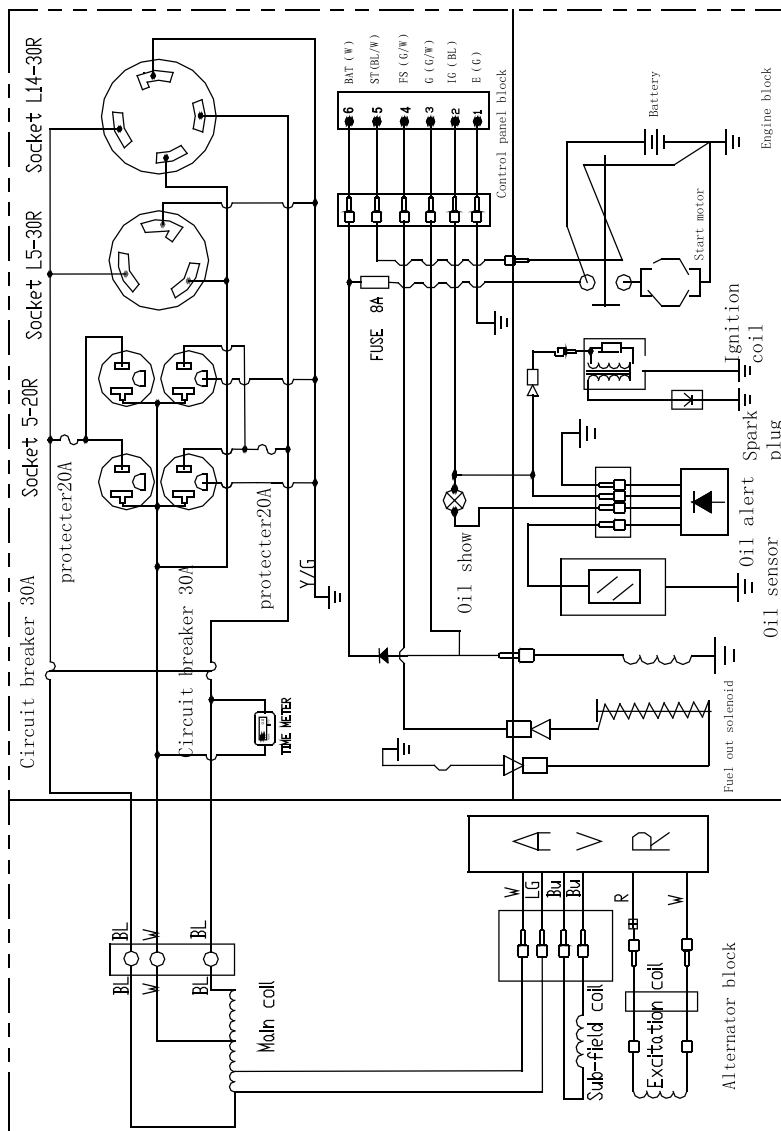

SUA10000E SUA10000EC

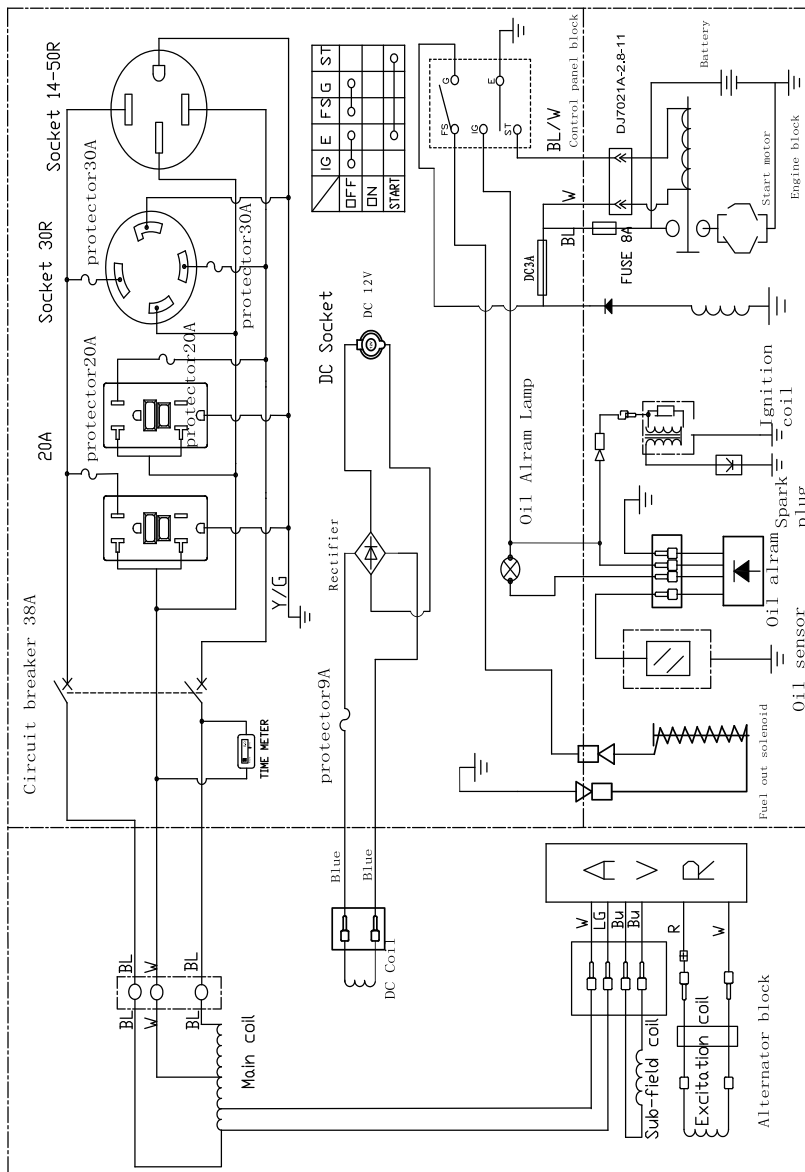

SUA12000E SUA12000EC

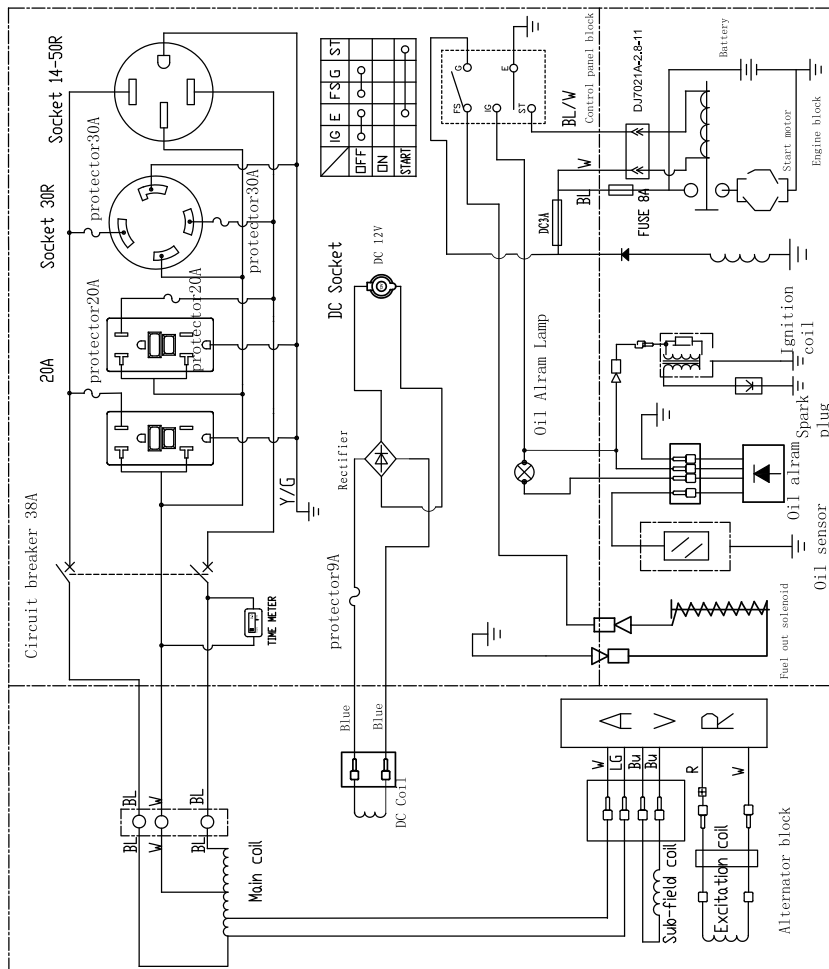

WARRANTY

A-IPOWER LIMITED WARRANTY-2 YEARS RESIDENTIAL AND 1 YEAR COMMERCIAL

Thank you for choosing A-iPower products. To ensure proper registration of your product warranty, please submit your warranty registration along with proof of purchase within 10 days of the date of purchase, this can be done by

a) Completing the Warranty Registration form at the back of this manual and mailing to:

A-IPOWER CORP
10887 Commerce Way Unit A
Fontana CA 92337

b) Visit us at www.a-ipower.com and click the product registration icon

WARRANTY TERM

A-iPower will provide warranty for any of its products purchased through any authorized A-iPower dealer in North America to the original purchaser and will be warranted against defects in material or workmanship for a period of two (2) years for Consumer use from date of purchase, subject to exclusions noted herein.

Commercial and Rental applications are warranted for a period of one (1) year from date of purchase.

“Consumer Use” – residential household use by a retail consumer

“Commercial Use” – all other use – commercial, business, industrial, or rental purpose

HOW TO OBTAIN WARRANTY SERVICE

Please call our Customer Service Dept.

855-888-3598 or e-mail to

support@a-ipower.com Please have necessary information available – Model Number, Serial Number, Proof of Purchase
DO NOT RETURN THE PRODUCT TO THE PLACE OF PURCHASE

A-iPower Customer Service Dept will assist with all product related questions and will help troubleshoot issues and will send any replacement parts as necessary while product is within the warranty

period at no charge. If the issue cannot be resolved then A-iPower Customer Service Dept at its discretion determine and authorize diagnosis and repair through one of its authorized Service Centers. A-iPower Corp at its discretion may choose to provide replace of part, component, or product. Service or replacement of parts at any unauthorized repair facility without prior authorization will not be covered by this warranty.

WARRANTY EXCLUSIONS

This warranty does not cover the following Regular wear and maintenance – this warranty will not cover repair when normal use has exhausted the lifetime of a part(s) or engine

Installation and Maintenance - this warranty does not cover improper or unauthorized assembly, alteration, modification or any other damage resulting from misuse or neglect.

Normal maintenance parts - this warranty does not cover spark plugs, air filters, adjustments, or other related service due to obstructions and other build ups resulting from improper maintenance

Additional exclusions – this warranty does not cover wearable parts such as filters, spark plugs, o-rings, batteries etc. It does not cover any cosmetic defects such as scratches to paint, decals etc. It does not cover any damage resulting from use of non-original manufacturer's parts, use of aftermarket parts. It does not cover any failures due to acts of God and other force majeure events beyond the control of the manufacturer.

WARRANTY LIMITS AND IMPLICATIONS AND CONSEQUENTIAL DAMAGES

A-iPower is not obligated to cover any loss of time, use of product, freight cost, or any other incidental or consequential claim from the use of this product. This warranty is in Lieu of all other warranties, express or implied

This warranty gives you specific legal rights which vary from state to state.

A-iPOWER WARRANTY REGISTRATION FORM

Product registration states to complete and should be mailed to our address or go on line to support@a-ipower.com

Registering your product is important , it provides protection

- 1) You have record of product purchased
- 2) Customer Service can Better serve you for Warranty related issues
- 3) We can contact you in the unlikely event should notification is necessary
- 4) Always keep copy of your original receipt

Primary Information	Generator Information
Name: _____	Serial # _____
Phone: _____	
E-mail: _____	Model # _____
Address: _____	
City, State, Zip code: _____	
Date of purchase: _____	
Where: _____	

The serial No. can be found on the engine.
PLEASE NOTE: Your generator cannot be registered without model & serial numbers.

1. THE PRODUCT WAS PURCHASED FOR:

A. ☐ Home back-up	G. ☐ Jobsite/construction
B. ☐ Business back-up	H. ☐ Outdoor activities (Hunting)
C. ☐ Camping	I. ☐ Special Events
D. ☐ Tailgating	J. ☐ Battery Charging
E. ☐ Rental	K. ☐ Other _____
F. ☐ Farming/Agriculture	

2. THIS PRODUCT IS A: (select one)

A. ☐ First Time Purchase	B. ☐ Replacement
---	---

3. HOW DID YOU FIRST LEARN OF THIS PRODUCT: (select one)

A. ☐ Magazine Ad	G. ☐ Trade Show
B. ☐ Newspaper	H. ☐ Direct Mail
C. ☐ Radio	I. ☐ From Friend/Relative/Neighbor
D. ☐ TV	J. ☐ Catalog
E. ☐ Store Display	K. ☐ Internet
F. ☐ Contractor	L. ☐ Other _____

4. PLEASE RATE YOUR SATISFACTION LEVEL WITH THE FOLLOWING:

	Completely Satisfied	5	4	3	2	Not at all Satisfied
Product Value for Price Paid	☐	☐	☐	☐	☐	☐
Performance	☐	☐	☐	☐	☐	☐
Features	☐	☐	☐	☐	☐	☐
Product Appearance	☐	☐	☐	☐	☐	☐
Warranty	☐	☐	☐	☐	☐	☐
Ease of Maintenance	☐	☐	☐	☐	☐	☐
Noise Level	☐	☐	☐	☐	☐	☐

5. HOW LIKELY ARE YOU TO RECOMMEND A-iPOWER TO FAMILY OR FRIENDS?

	Extremely Likely	5	4	3	2	Not likely at all
	☐	☐	☐	☐	☐	☐

Privacy Statement: A-ipower is committed to respecting your privacy and to complying with the regulations regarding the protection of personal data. The survey data we collect is for the purposes of marketing or product support and demographic information about the entire audience registering their products.

We are professional generators!



**10887 Commerce Way
Unit A Fontana CA 92337
Phone: 1-855-888-3598
support@a-ipower.com
www. a-ipower.com**

Somos generadores profesionales.



10887 Commerce Way
Unit A Fontana CA 92337
Phone: 1-855-888-3598
support@a-ipower.com
www.a-ipower.com

FORMULARIO DE RECLAMO DE GARANTÍA DE A-IPOWER

www.a-ipower.com
support@a-ipower.com

Uso interno

Número de serie

Color

Modelo

Número de reclamo

Número de registro

Marque una opción: Cliente Concesionario Servicio

¿Envío su credencial de garantía? Si no es así, se requiere una evidencia de compra.

¿Ha tenido algún asunto relacionado con la garantía previamente con la misma unidad?

Por favor registre su tarjeta de garantía en línea en www.a-ipower.com

Nombre: _____

Teléfono: _____

Dirección: _____

Ciudad, estado, código postal: _____

Fecha de la compra: _____

Lugar de la compra: _____

Descripción del problema

Acciones tomadas

A-iPower no está obligado a cubrir pérdidas de tiempo, uso del producto, costo de carga o cualquier otra reclamación incidental o consecuente del uso de este producto. Esta garantía está en lugar de todas las demás garantías, expresas o implícitas. Esta garantía le otorga derechos legales específicos que varían de estado a estado.

Límites de Garantía e Implicaciones y Daños Consecutivos

Esta garantía no cubre los siguientes

Desgaste y mantenimiento regular - esta garantía no cubre la reparación cuando el uso normal ha agotado la vida útil de una pieza o motor

Instalación y Mantenimiento Norma - esta garantía no cubre las bujías, los filtros de aire, el montaje incorrecto o no autorizado, alteración, modificación o cualquier otro daño resultante de mal uso o negligencia.

Exclusiones adicionales - esta garantía no cubre las piezas usables tales como limadoras, bujías, anillos tóricos, baterías, etc. No cubre defectos cosméticos tales como arañazos de pintura, calcomanías, etc. No cubre daños resultantes del uso de partes no originales del fabricante, uso de piezas de recambio. No cubre fallas debidas a actos de fuerza mayor y otros eventos de fuerza mayor fuera del control del fabricante.

Exclusiones de la garantía

Esta garantía no cubre los siguientes

El servicio o el reemplazo de piezas en cualquier instalación de reparación no autorizada sin autorización previa no estará cubierto por esta garantía

de reemplazo según sea necesario mientras el producto esté dentro del período de garantía sin costo alguno. Si el problema no puede resolverse, el Departamento de Servicio al Cliente de A-iPower, a su discreción, determinará y autorizará el diagnóstico y la reparación a través de uno de sus Centros de Servicio autorizados. A-iPower Corp a su discreción puede optar por proporcionar reemplazo de parte, componente o producto.

Garantía

AiPower Garantía Limitada- 2 años Residencia y 1 años Comercial

Gracias por elegir los productos A-iPower. Para asegurar el registro adecuado de la garantía de su producto, envíe su registro de garantía junto con la prueba de compra dentro de los 10 días de la fecha de compra, esto puede hacerlo solo con

1. Completar el formulario de registro de garantía al final de este manual y enviarlo por correo a:

2. A-IPOWER CORP
10887 COMMERCE
WAY UNIT A FONTANA CA 92337

Visítenos en nuestra pagina web al www.a-ipower.com y seleccione el ícono de registro del producto

Termino De Garantía

A-iPower proporcionará garantía para cualquier producto adquirido a través de cualquier distribuidor autorizado de A-iPower en Norteamérica al comprador original y estará garantizado contra defectos de material o mano de obra por un periodo de dos (2) años para uso del Consumidor desde la fecha de compra, Sujeto a exclusiones señaladas aquí. Las aplicaciones comerciales y de alquiler están garantizadas por un periodo de un (1) año a partir de la fecha de compra.

Uso del consumidor "- uso doméstico residencial por un consumidor minorista "Uso comercial" - todo otro uso - comercial, industrial o de alquiler

Cómo Obtener servicio De Garantía

Por favor llame a nuestro Departamento de Servicio al Cliente 855-888-3598 o envíe un e-mail a support@a-ipower.com Por favor tenga disponible la información necesaria - Número de Modelo, Número de Serie, Prueba de Compra

CÓMO OBTENER EL SERVICIO DE LA GARANTÍA

Lláme al número de teléfono de nuestra atención al cliente al 1- 855-888-3598 o envíe un correo electrónico a:

support@i-power.com para comunicarse primero con nuestro equipo de soporte en caso de que necesite el servicio. Prepare y brinde el número de modelo, el número de serie y el comprobante de compra cuando se comuniqué con nosotros o envíe una solicitud a:


I-POWER Corp.
10887 Commerce
Way Unit A Fontana
CA 92337

ACERCA DE SU GARANTÍA


Realizamos las reparaciones cubiertas por la garantía y nos disculpamos por los inconvenientes provocados. Cualquier concesionaria de servicio autorizada puede llevar a cabo las reparaciones cubiertas por la garantía. La mayor parte de las reparaciones cubiertas por la garantía se manejan de forma rutinaria, pero a veces las solicitudes para el servicio cubierto por la garantía pueden no ser apropiadas. Por ejemplo, el servicio cubierto por la garantía podría no aplicarse si el daño del equipo fue ocasionado por el mal uso, la falta de mantenimiento de rutina, el envío, la manipulación, el almacenamiento o la instalación incorrectas. De forma similar, la garantía se anula si la fecha de fabricación o el número de serie en el generador portátil se ha eliminado o si el equipo se ha alterado o modificado. Durante el período de garantía, el concesionario de servicio autorizado, a su criterio, reparará o reemplazará cualquier pieza que, luego de su evaluación, sea considerada defectuosa bajo el uso y el servicio normal. Esta garantía no cubrirá las siguientes reparaciones y equipo:

- **USO REGULAR:** El equipo eléctrico exterior, como con todos los dispositivos mecánicos, necesita el mantenimiento y reemplazo periódico de piezas para funcionar como debe. Esta garantía no cubrirá la reparación cuando el uso normal ha agotado la vida útil de la pieza o del motor.
- **INSTALACIÓN Y MANTENIMIENTO:** Esta garantía no cubre los generadores o las piezas que han estado sujetos a armado, alteración, modificación o daño incorrectos o no autorizados debido a mal uso, negligencia, accidente, sobrecarga, exceso de velocidad, mantenimiento incorrecto, reparación o almacenamiento que, a nuestro juicio, afecta de forma adversa su rendimiento y confiabilidad. Esta garantía y las piezas como filtros de aire,


SUA12000E SUA12000EG

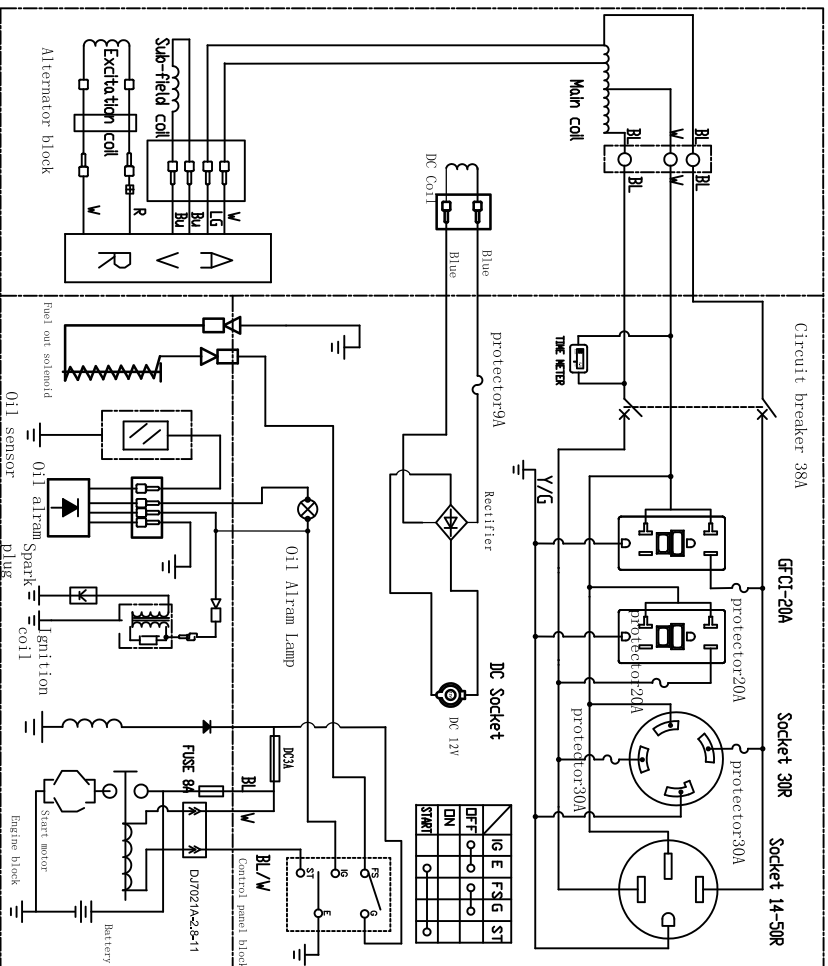


SUA10000E SUA10000EC

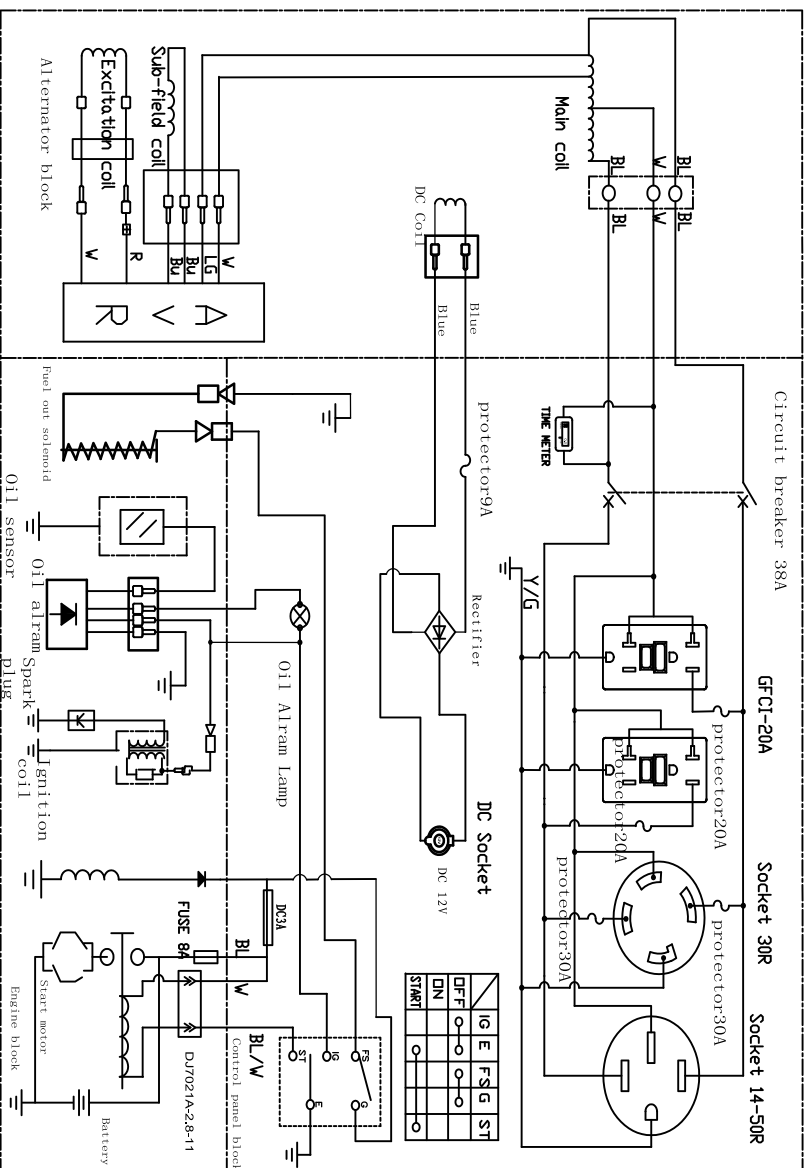


SUA9000E

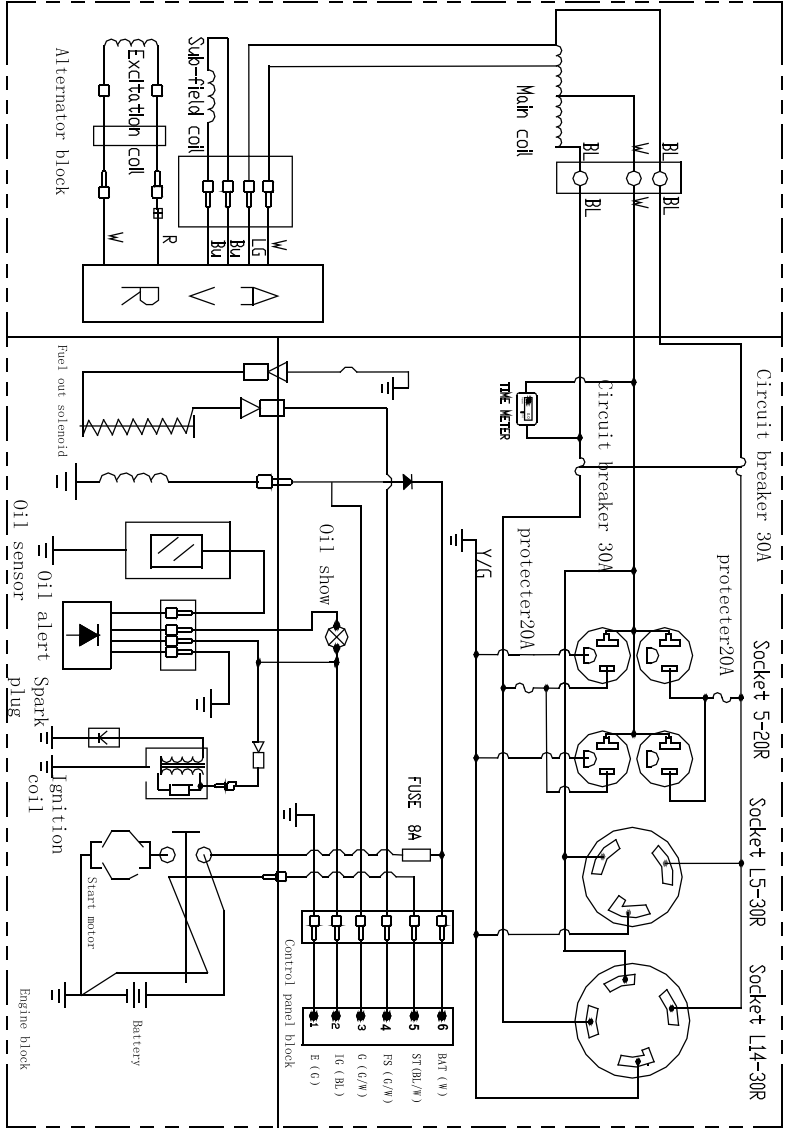


SUA8250E

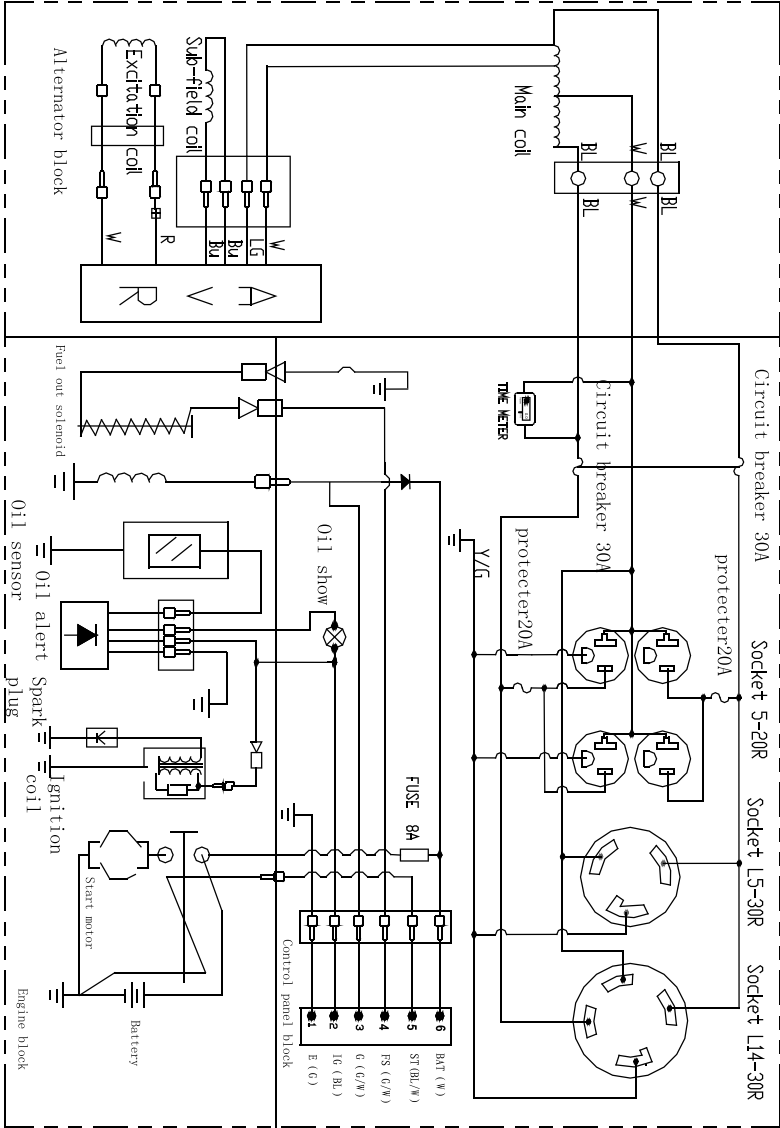


SUA7000E

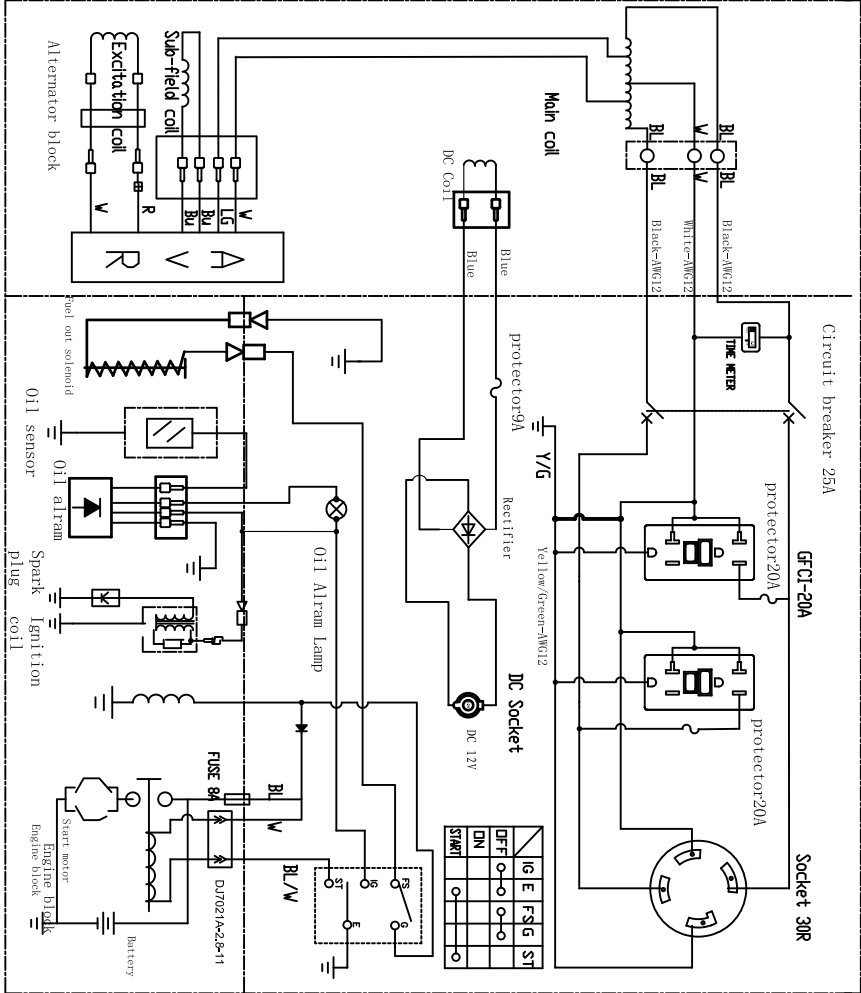


SUA7000

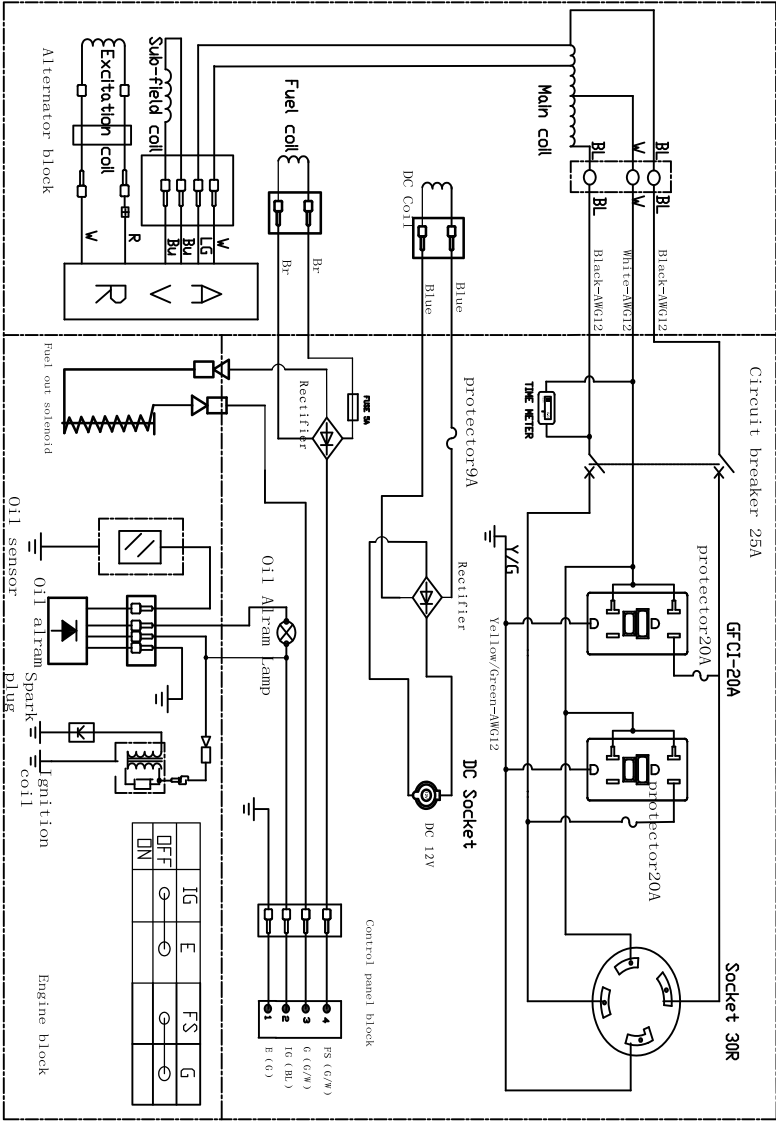


SUA5000/SUA5000C

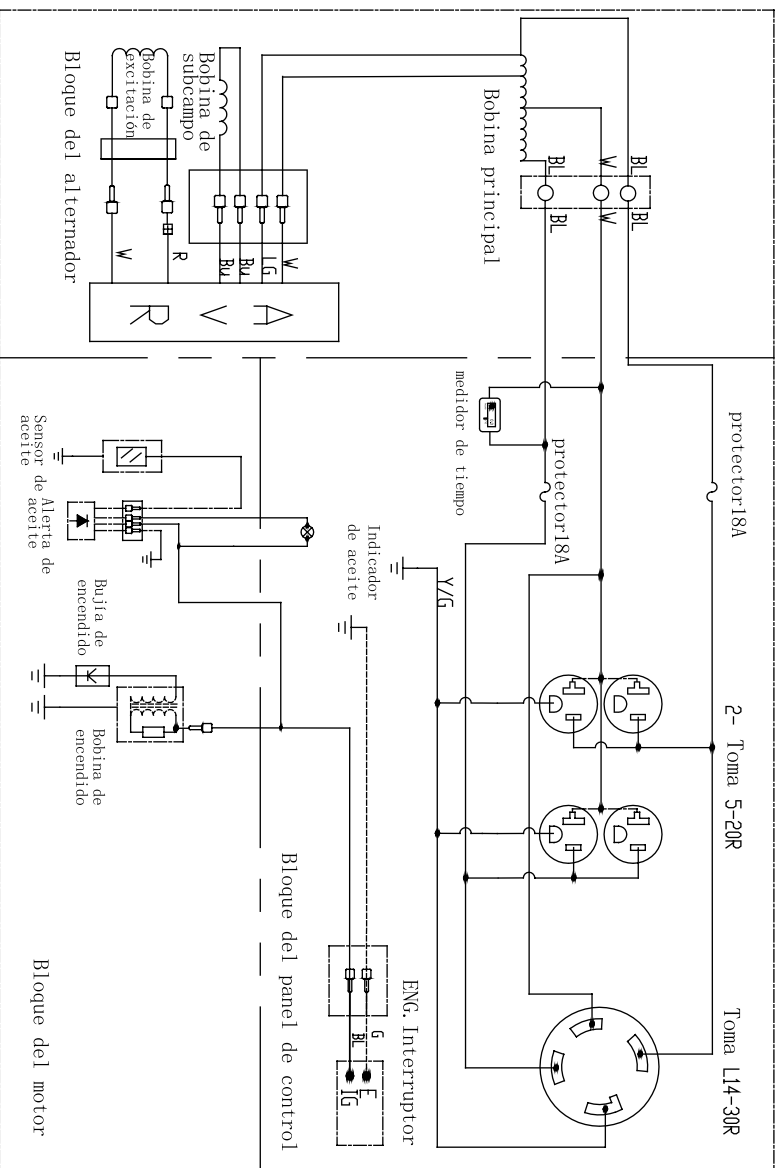


SUA4500E

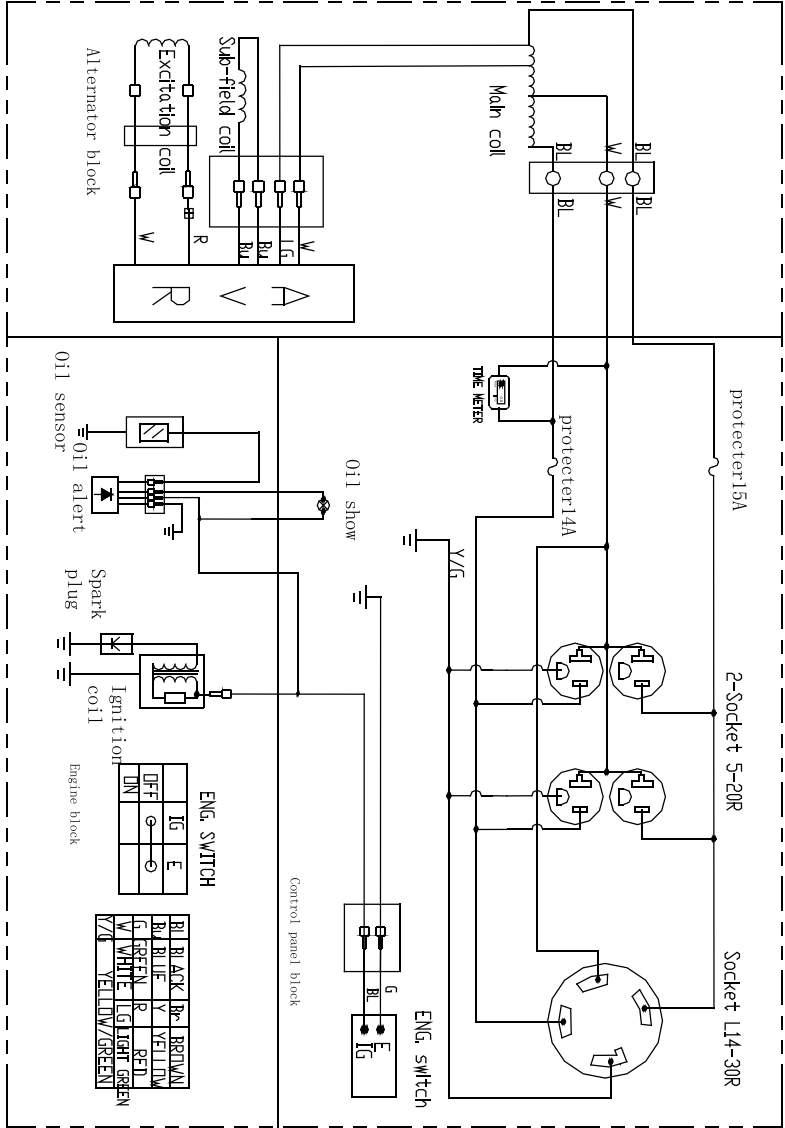


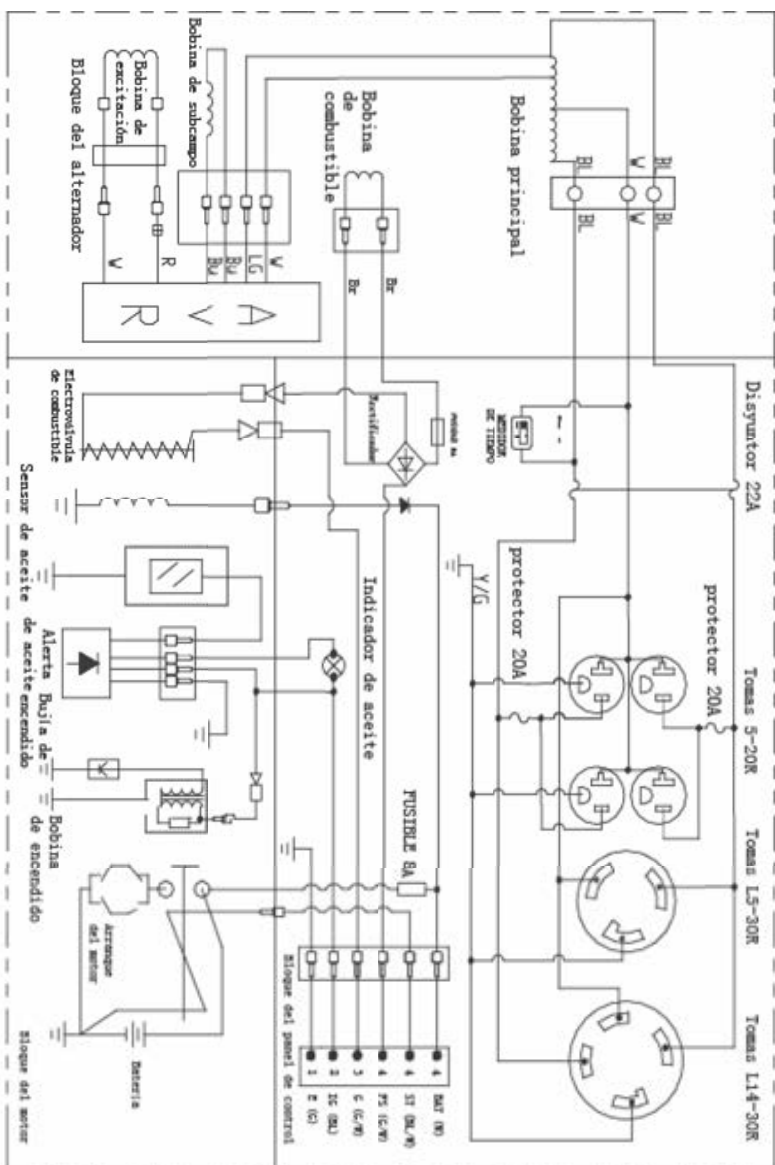


SUA2800

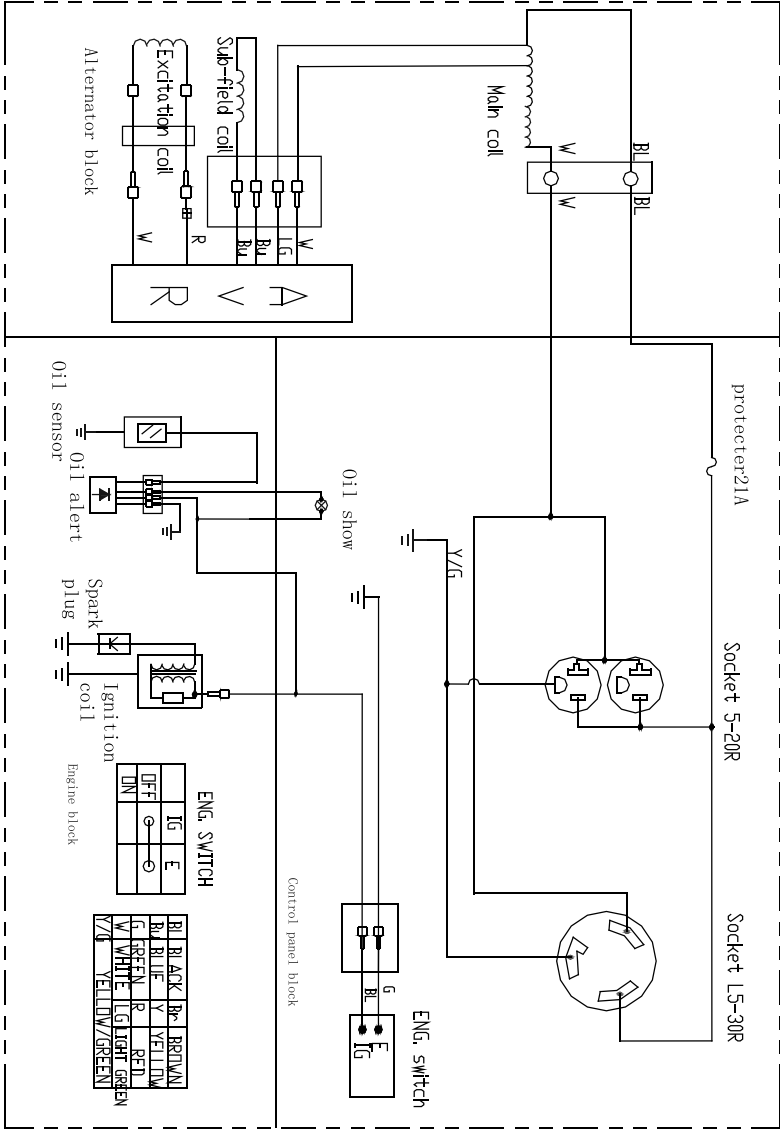

SUA1500

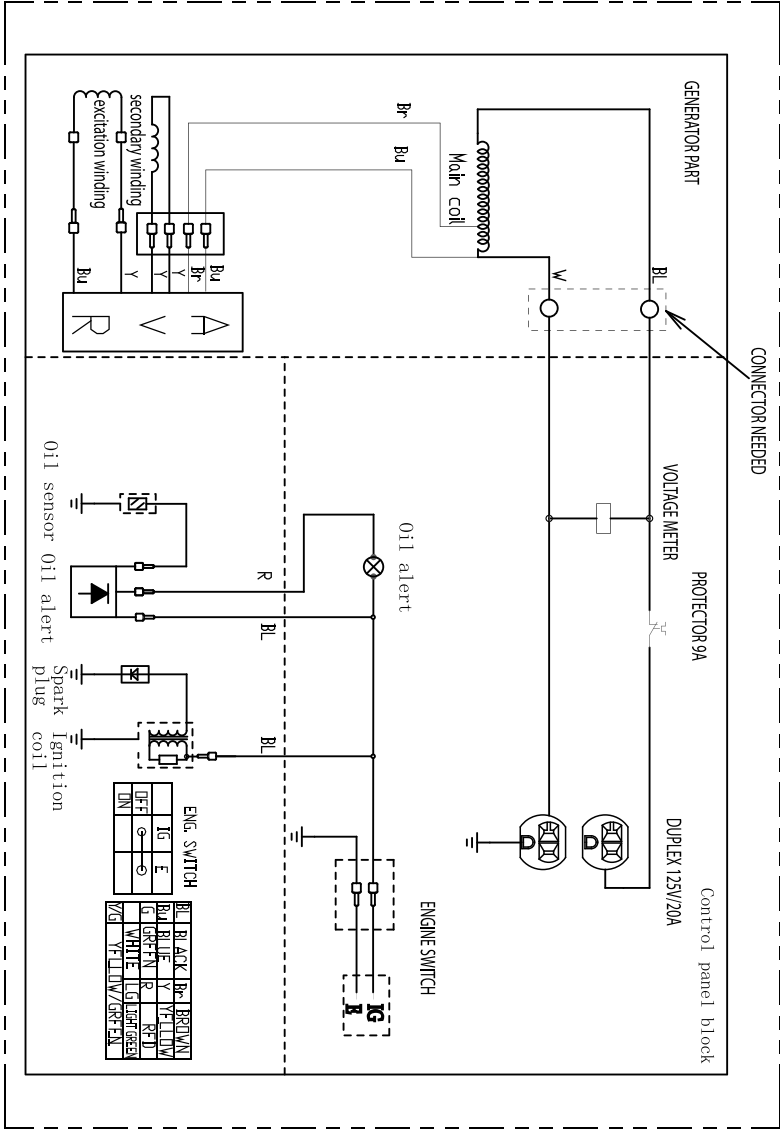

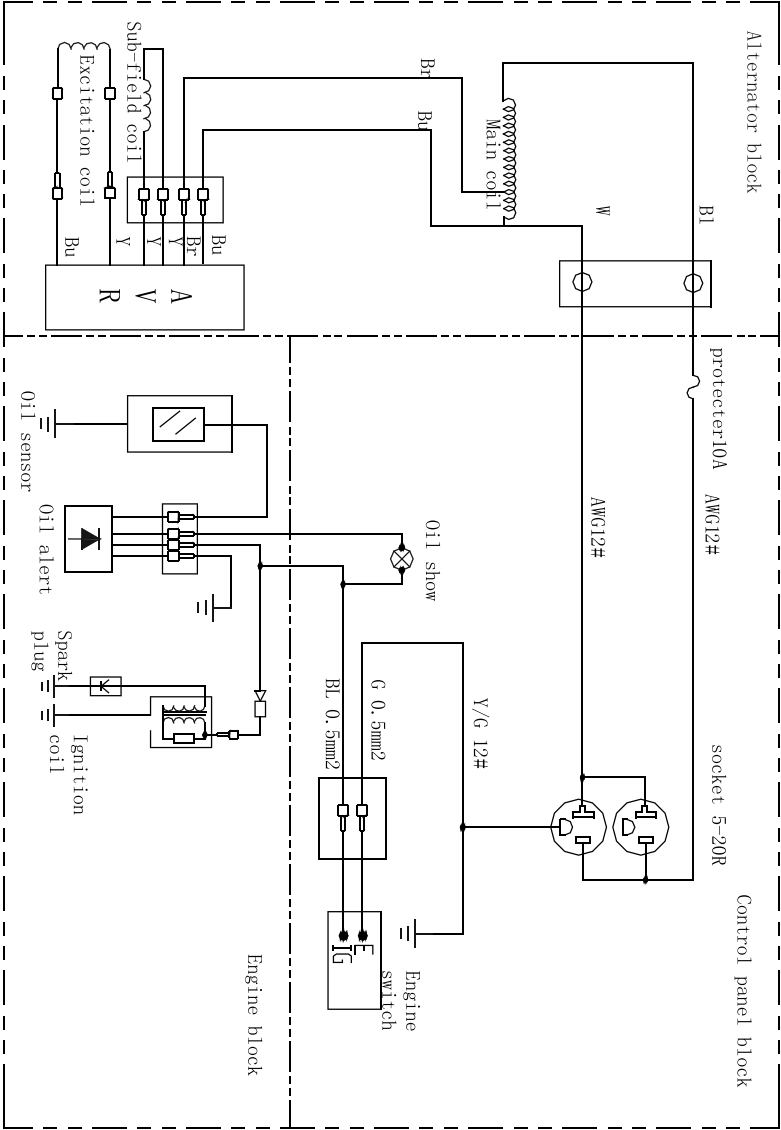

SECCIÓN 9: PARÁMETROS

Especificaciones

Model	SU1500	SUA1500	SUA2800	SUA4500	SUA4500E	SUA5000
Engine	3HP	3HP	6.5HP	7.5HP	7.5HP	7.5HP
Displacement	98cc	98cc	196cc	223cc	223cc	223cc
Rated frequency	60Hz	60Hz	60Hz	60Hz	60Hz	60Hz
Rated voltage	120V	120V	120V	120V/240V	120V/240V	120V/240V
Rated power	1.2KW	1.2KW	2.5KW	3.5KW	4.25KW	5.0KW
Max power	1.5KW	1.5KW	2.8KW	4.0KW	5.0KW	
Fuel tank capacity	1.6Gallon	1.6Gallon	4Gallon	4Gallon	4Gallon	
Full load continuum running time	10h	10h	9h	7h	6h	
1/2 load continuum running time	17h	17h	16h	13h	11h	

Model	SUA7000	SUA8250E	SUA9000E	SUA10000E	SUA10000EC	SUA12000E
Engine	13HP	14HP	14HP	16HP	16HP	16HP
Displacement	389cc	420cc	420cc	459cc	459cc	459cc
Rated frequency	60Hz	60Hz	60Hz	60Hz	60Hz	60Hz
Rated voltage	120V/240V	120V/240V	120V/240V	120V/240V	120V/240V	120V/240V
Rated power	6.0KW	7.25KW	7.0KW	8.2KW	9.0KW	
Max power	7.0KW	8.25KW	9.0KW	10KW	12.0KW	
Fuel tank capacity	7Gallon	7Gallon	7Gallon	7Gallon	7Gallon	
Full load continuum running time	8h	4.75h	6.5	6h	6h	
1/2 load continuum running time	12h	8.5h	9.5h	9h	9h	

SECCIÓN 8: RESOLUCIÓN DE PROBLEMAS

Problema	Causa	Corrección
El motor está encendido, pero no se hay una salida de CA.	1. Uno de los disyuntores está apagado. 2. Existe una falla en el generador 3. La conexión es incorrecta o el conjunto de cables es defectuoso. 4. El dispositivo conectado es incorrecto.	1. ENCENDEN el disyuntor. 2. Comuníquese con un centro de servicio autorizado. 3. Revise y repare. 4. Conecte otro dispositivo que se encuentre en buenas condiciones.
El motor funciona bien sin carga, pero se "atora" cuando se conectan las cargas.	1. Existe un cortocircuito en una carga conectada. 2. La velocidad del motor es muy baja. 3. El generador está sobrecargado. 4. Existe un cortocircuito en el circuito del generador. 5. El filtro de combustible está sucio u obstruido.	1. Desconecte la carga eléctrica en cortocircuito. 2. Comuníquese con un centro de servicio autorizado. 3. Consulte la sección No sobrecargar el generador. 4. Comuníquese con un centro de servicio autorizado. 5. Limpie o reemplace el filtro de combustible.
El motor no arranca, funciona mal o se apaga luego de arrancar.	1. El interruptor de arranque está en la posición "apagado". 2. La válvula de combustible está en la posición "apagada". 3. La batería es defectuosa. 4. Bajo nivel de aceite. 5. Limpie el depurador de aire. 6. El filtro de combustible está sucio u obstruido. 7. No hay combustible. 8. Combustible vencido. 9. El cable de la bujía no está conectado a la bujía. 10. La bujía es defectuosa. 11. Hay agua en el combustible. 12. Inundado. 13. La mezcla de combustible es excesivamente rica. 14. La válvula de admisión permanece abierta o cerrada. 15. El motor ha perdido la compresión.	1. Coloque la llave de arranque en la posición de encendido. 2. Coloque la válvula de combustible en la posición "encendido". 3. Reemplace la batería. 4. Llene el cárter al nivel correcto o coloque el generador en una superficie nivelada. 5. Limpie o reemplace el depurador de aire. 6. Limpie o reemplace el filtro de combustible. 7. Llene el tanque de combustible. 8. Drene el tanque de combustible y el carburador; llene con combustible nuevo. 9. Conecte el cable a la bujía. 10. Reemplace la bujía. 11. Drene el tanque de combustible y el carburador; llene con combustible nuevo. 12. Espere 5 minutos y vuelva a arrancar el motor. 13. Comuníquese con un centro de servicio autorizado. 14. Comuníquese con un centro de servicio autorizado. 15. Comuníquese con un centro de servicio autorizado.
Al motor le falta potencia.	1. La carga es demasiado alta. 2. El filtro de aire está sucio. 3. El filtro de combustible está sucio u obstruido.	1. Consulte la sección No sobrecargar el generador. 2. Reemplace el filtro de aire. 3. Limpie o reemplace el filtro de combustible.
El control de velocidad del motor flaquea o falla.	1. El carburador funciona con una mezcla demasiado rica o pobre. 2. El filtro de combustible está sucio u obstruido.	1. Comuníquese con un centro de servicio autorizado. 2. Limpie o reemplace el filtro de combustible.

6.4 HOLGURA DE LA VÁLVULA

Luego de las primeras 50 horas de funcionamiento, revise la holgura de la válvula del motor y ajústela si necesario.

Válvula de entrada

- Intake: 0.10-0.15mm (0.004-0.006 in)
- Exhaust: 0.15-0.20mm (0.006-0.008 in)

Importante: Si realizar este procedimiento le resulta incómodo o si no posee las herramientas correctas, lleve el generador al centro de servicio más cercano para ajustar la holgura de la válvula. Este es un paso muy importante para garantizar una mayor vida útil del motor.

SECCIÓN 7:

ALMACENAMIENTO

7.1 GENERAL

El generador se debe arrancar al menos una vez cada siete días y debe funcionar por al menos 30 minutos. Si no se puede hacer eso y la unidad debe almacenarse por más de 30 días, utilice la siguiente información como guía para prepararla para el almacenamiento.

PELIGRO Nunca almacene el motor en el interior o exterior con combustible en el tanque o emisiones pueden llegar a llamas abiertas, chispas o llamas de encendido como un horno, un calentador de agua, una secadora de ropa u otros electrodomésticos con gas.

PRECAUCIÓN Evite el rociado de los orificios de la bujía al arrancar el motor.

PELIGRO Drene el combustible en un contenedor aprobado en el exterior, lejos de llamas abiertas. Asegúrese de que el motor esté frío. No fume.

7.2 INSTRUCCIONES PARA CORTE A LARGO PLAZO

Es importante evitar que se formen depósitos de goma en las piezas esenciales del sistema de combustible como el carburador, la manguera o el tanque de combustible durante el almacenamiento. Además, la experiencia indica que los combustibles mezclados con alcohol (llamados gasohol etanol o metanol) pueden atraer la humedad, lo que conlleva la separación y formación de ácidos durante el almacenamiento. Los gases ácidos pueden dañar el sistema de combustible de un motor durante su almacenamiento. Para evitar problemas en el motor, el sistema de combustible debe vaciarse antes de un almacenamiento por mas 30 días de la siguiente forma:

- No almacene gasolina de una temporada a la otra.
- Reemplácese la lata de gasolina si comienza a oxidarse. El óxido y la suciedad en la gasolina provocarán problemas en el carburador y el sistema de combustible.
- Si es posible, almacene la unidad en el interior y cúbrala para protegerla del polvo y la suciedad.
- Asegúrese de vaciar el TANQUE DE COMBUSTIBLE.
- Si no resulta práctico vaciar el tanque de combustible y la unidad debe almacenarse por un tiempo, agregue un estabilizador de combustible a la unidad para aumentar su vida útil.
- Cubra la unidad con una cubierta protectora adecuada que no conserve la humedad.

7.3 OTROS CONSEJOS PARA EL ALMACENAMIENTO

- Retire toda la gasolina del tanque de combustible.
- Arranque y deje el motor en marcha hasta que se detenga por falta de combustible.
- Mientras el motor aún está tibio, drene el aceite del cárter. Vuelva a llenar al nivel recomendado.
- Retire las bujías de encendido y colóquelas aproximadamente 1/2 onza (15 ml) de aceite de motor en los cilindros. Cubra el orificio de la bujía de encendido con un paño. Tire del arranque manual un par de veces para lubricar los anillos del pistón y el orificio del cilindro.




PELIGRO Nunca cubra el generador mientras el área del motor y escape esté tibia.

- Instale y ajuste las bujías. No conecte los cables de la bujía.
- Limpie las superficies exteriores del generador. Revise que las ranuras y aberturas de ventilación estén abiertas y no posean obstrucciones.
- Almacene la unidad en un lugar limpio y seco.

6.2.4 CAMBIO DE ACEITE

Cambie el aceite luego de las primeras cinco horas de funcionamiento, luego, cada 50 horas. Si esta unidad funciona en ambientes con polvo o suciedad o en climas extremadamente calurosos, cambie el aceite con mayor frecuencia.

Anillo de retén

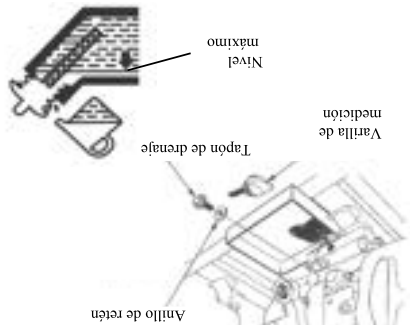

PRECAUCIÓN El aceite caliente puede provocar quemaduras. Permita que el motor se enfríe antes de drenar el aceite. Evite la exposición prolongada o repetida de la piel con el aceite usado. Lave exhaustivamente las áreas expuestas con jabón.


- Utilice las siguientes instrucciones para cambiar el aceite mientras el motor aún se encuentra tibio: Limpie el área alrededor del tapón de drenaje de aceite.
- Retire el tapón de drenaje de aceite del motor y el tapón de llenado de aceite para drenar el aceite por completo en un contenedor adecuado.
- Cuando haya drenado el aceite completamente, instale el tapón de drenaje de aceite y asegúrelo con firmeza.
- Llene el motor con un tipo de aceite recomendado. (Consulte la sección "Antes de encender el generador" para ver las recomendaciones de aceite).
- Limpie cualquier aceite derramado.
- Deseche el aceite usado en un centro de recolección adecuado.

6.2.5 REEMPLAZO DE LA BUJÍA. Utilice

una bujía F6TC, F7TC, BPR4ES o Champion RN14YC. Reemplace la bujía una vez al año.

Esto ayudará a que el motor arranque más fácilmente y funcione mejor.

- Detenga el motor y desconecte el cable de la bujía.
- Limpie el área alrededor de la bujía y extrágala del cabezal de cilindro.
- Ajuste la separación de la bujía a 0,70 a 0,80 mm (0,028 a 0,031 in). Instale la bujía con el espacio correcto en el cabezal de aire y ajuste al par de apriete de 15 ft/lbs.

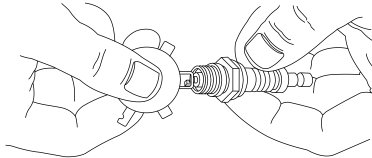



6.2.6 PROTECTOR CONTRA CHISPAS

- Apague el generador y permita que el motor y el silenciador se enfríen por completo antes de realizar tareas de mantenimiento en el protector contra chispas (ubicado en la parte posterior del silenciador).
- Retire la abrazadera y la placa protectora contra chispas.
- Limpie la placa protectora contra chispas con un cepillo metálico pequeño.
- Reemplace el protector contra chispas si está dañado.
- La instalación de la placa protectora contra chispas es la inversa de la extracción.

6.3 FILTRO DE AIRE DE SERVICIO

El motor no funciona de forma correcta y puede dañarse si se utiliza un filtro de aire sucio. Reemplace el filtro de aire una vez al año. Limpie o reemplace con mayor frecuencia si el funcionamiento ocurre en un entorno con mucho polvo.

- Extraiga la tapa del filtro de aire.
- Limpie con agua con jabón. Estrújelo el filtro presionándolo con un paño limpio. (NO LO RETUERZA).
- Puede colocar un poco de aceite de motor para evitar el bloqueo con hilo durante el lavado.
- Limpie la tapa del filtro de aire antes de volver a colocarla.

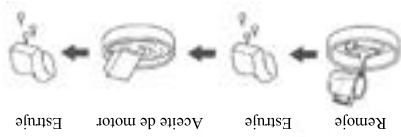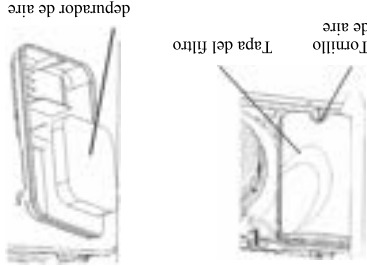

SECCIÓN 6: MANTENIMIENTO

6.1 CRONOGRAMA DE MANTENIMIENTO

Cumpla con los intervalos de calendario indicados a continuación. Se requiere un mantenimiento más frecuente al operar en condiciones adversas

Primeras 5 horas
• Cambiar el aceite de motor
Cada 8 horas o a diario
• Limpiar la suciedad
• Revisar el nivel de aceite
Cada 25 horas o anualmente
• Limpiar el filtro de aire del motor
Cada 50 horas o anualmente
• Cambiar el aceite de motor
Anualmente
• Reemplazar el filtro de aire del motor
• Realizar tareas de mantenimiento en la válvula de
• Realizar tareas de mantenimiento en la bujía
• Inspeccionar el silenciador y el protector contra chispas
• Limpiar el sistema de refrigeración

6.2 RECOMENDACIONES GENERALES

La garantía del generador no cubre los elementos que han estado sujetos al abuso o negligencia del operador. Para recibir el valor completo de la garantía, el operador debe mantener el generador como se indica en este manual.

Algunos ajustes deberán realizarse periódicamente para mantener de forma correcta el generador.

Todos los ajustes de la sección de mantenimiento de este manual deben realizarse al menos una vez por temporada. Cumpla los

requisitos del "Cronograma de mantenimiento".

NOTA

Reemplace la bujía y el filtro de aire una vez al año. Una bujía nueva y un filtro de aire y combustible y ayudan a que el motor funcione mejor y dure más.

6.2.1 MANTENIMIENTO DEL GENERADOR

El mantenimiento del generador consiste en mantener la unidad limpia y seca. Opere y almacene la unidad en un entorno seco y limpio en el que no esté expuesto al polvo, suciedad, humedad o vapores corrosivos en exceso. Las ranuras de ventilación del generador no se deben tapar con nieve, hojas o cualquier otro material extraño. Verifique la limpieza del generador con frecuencia y límpielo cuando la suciedad, el polvo, el aceite, la humedad y otras sustancias extrañas sean visibles en la superficie exterior.

PRECAUCIÓN

Nunca inserte ningún objeto o herramienta por las ranuras de ventilación, incluso si el motor no está en funcionamiento.

NOTA

NO utilice una manguera de jardín para el generador. El agua puede ingresar en el sistema de combustible del motor y provocar problemas. Además, si el agua ingresa al generador por las ranuras de ventilación, algo de agua puede quedar en los huecos y las gíetas del aislamiento del bobinado del rotor y del estator. La acumulación de agua y suciedad en los bobinados internos del generador eventualmente disminuirá la resistencia del aislante de estos bobinados.

- Utilice un paño húmedo para limpiar las superficies exteriores.
- Un cepillo de cerdas suaves puede utilizarse para aflojar las acumulaciones de aceite, suciedad, etc.
- Una aspiradora puede utilizarse para limpiar el polvo y los desechos.
- Puede utilizarse aire a baja presión (que no exceda los 25 psi) para soplar la suciedad.
- Inspeccione las ranuras y aberturas de ventilación del generador. Estas aberturas deben conservarse limpias y sin obstrucciones.

6.2.2 LIMPIEZA DEL GENERADOR

PELIGRO

Al trabajar en el generador, siempre desconecte el cable de la bujía y manténgalo lejos de la bujía.

6.2.3 MANTENIMIENTO DEL MOTOR

IMPORTANTE: No sobrecargue el generador. Además, no sobrecargue los tomacorrientes del panel individual. Estas tomas están protegidas contra la sobrecarga con disyuntores del tipo presionar para reiniciar. Si se excede el índice de amperaje de un disyuntor, ese disyuntor se abre y la salida eléctrica a ese tomacorriente se pierde.

5.2 CONEXIÓN DE CARGAS ELÉCTRICAS

• Permita que el motor se estabilice y caliente por unos minutos luego del arranque.

• Conecte y encienda las cargas eléctricas de a 120 o 240 V C.A. (o amperios) nominales de todas las cargas que se conectarán al mismo tiempo. Este total no debe ser mayor a (a) la capacidad de voltaje o amperaje nominal del generador o (b) a la capacidad nominal del disyuntor del tomacorriente que suministra la energía.

NOTA

NO conecte cargas de 240 V a tomacorrientes duplex de 120 V ni tampoco lo haga a la inversa. NO conecte cargas de 50 Hz al generador.

NOTA

Encienda el generador y permita que el motor se estabilice antes de conectar las cargas eléctricas. Conecte las cargas eléctricas en la posición APAGADO, luego colóquelas en la posición ENCENDIDO para el funcionamiento. APAGUE las cargas eléctricas y desconéctelas del generador antes de detenerlo.

NOTA

• Sobrecargar un generador excediendo su capacidad de voltaje nominal podría provocar daños al generador y a los dispositivos eléctricos conectados. Observe lo siguiente para evitar sobrecargar la unidad:

- Suma el voltaje total de todos los dispositivos eléctricos que se conectarán al mismo tiempo. Este total NO debe ser mayor a la capacidad de voltaje del generador.
- El voltaje nominal de las luces puede encontrarse en los focos. El voltaje nominal de las herramientas, electrodomésticos y motores puede encontrarse en la etiqueta o

NOTA

adhesivo de información incluido en el dispositivo.

Si el electrodoméstico, herramienta o motor no indica el voltaje, multiplique los voltios por la capacidad nominal de los amperios para determinar los vatios (voltios x amps = vatios). Algunos motores eléctricos como los de inducción, requieren aproximadamente tres veces más vatios de potencia para arrancar que para su funcionamiento. Este sobrevoltaje temporal solo dura algunos segundos al arrancar estos tipos de motores. Asegúrese de permitir el voltaje de arranque alto al seleccionar dispositivos eléctricos para conectarlos al generador.

- Calcule los vatios necesarios para arrancar el motor más grande.
- Suma a ese valor los vatios de funcionamiento de todas las demás cargas conectadas.

La guía de referencia de voltaje se brinda para asistirlo en la determinación de la cantidad de dispositivos que el generador puede operar al mismo tiempo.

5.3 DETENCIÓN DEL MOTOR

Apague todas las cargas, luego desconecte los cables eléctricos de los tomacorrientes del panel del generador. Nunca encienda o detenga el motor con dispositivos eléctricos conectados y encendidos. Permita que el motor funcione sin carga por varios minutos para estabilizar las temperaturas internas del motor y el generador. Mueva el interruptor de ENCENDIDO/APAGADO a la posición de APAGADO. Cierre la válvula de combustible.

5.4 SISTEMA DE APAGADO POR NIVEL DE ACEITE BAJO

El motor está equipado con un sensor de nivel bajo de aceite que apaga el motor de forma automática cuando el nivel de aceite se encuentra por debajo de un nivel específico. Si el motor se apaga y el tanque de combustible posee suficiente gasolina, verifique el nivel de aceite.

5.5 GRAN ALTITUD

En altitudes superiores a 5000 pies (1524 metros), un mínimo de 85 octanos/85 (89 RON) de gasolina es aceptable. Para que las emisiones cumplan con la normativa, se requiere el ajuste de alta altitud. El funcionamiento sin este ajuste provocará una disminución del rendimiento, un mayor consumo de aceite y mayores emisiones. Consulte con un concesionario autorizado para obtener información sobre el ajuste para gran altitud. No se recomienda el funcionamiento del motor con un kit de gran altitud en altitudes menores a 2500 pies (762 metros).

Quando el motor enciende, mueva la palanca del obturador a la posición media OBTURADOR hasta que el motor funcione sin problemas y luego en la posición MARCHA por completo. Si el motor falla, mueva el regulador marcha atrás a la posición media OBTURADOR hasta que el motor funcione sin problemas y luego en la posición MARCHA por completo.

NOTA Si la batería está descargada, utilice las instrucciones de arranque manual.


NOTA El motor arranca, pero no continua funcionando: mueva la palanca del obturador a la posición OBTURADOR y repita las instrucciones de arranque.

ADVERTENCIA El rebote (retroceso rápido) de la cuerda de arranque arrastrará la mano y el brazo hacia el motor más rápido de lo que usted lo pueda soltar, lo cual podría provocar fracturas, contusiones o esguinces que resulten en lesiones graves. Al arrancar el motor, tire de la cuerda lentamente hasta que sienta la resistencia y luego tire rápidamente para evitar el rebote. Nunca encienda o detenga el motor mientras hay dispositivos eléctricos conectados y encendidos.

NOTA Si el motor falla al arrancar en más de 3 intentos o si la unidad se apaga durante el funcionamiento, asegúrese de que la unidad se encuentra en una superficie nivelada y verifique que el cárter posee el nivel de aceite correcto. Esta unidad puede estar equipada con un dispositivo de protección de aceite bajo. Si es así, el aceite debe verificarse al nivel correcto para que el motor arranque y funcione.

ADVERTENCIA Los gases o el calor de escape pueden generar la combustión de combustibles y estructuras, o dañar el tanque de combustible provocando un incendio que puede resultar en la muerte, lesiones graves o daños a la propiedad. El contacto con el área del silenciador puede provocar quemaduras que resulten en lesiones graves. NO toque las piezas calientes y EVITE los gases de escape de alta temperatura. Deje que el equipo se enfríe antes de tocarlo. Mantenga una distancia de al menos 5 pies (152 cm) en todos los lados del generador, inclusive en la parte de arriba. Comuníquese con el fabricante, minorista o concesionario original del equipo para obtener un protector contra chispas diseñado para el sistema de escape instalado en este motor. Las piezas de repuesto deben ser las mismas y deben instalarse en la misma posición que las piezas originales.

Mueva la palanca del obturador a la posición OBTURADOR.

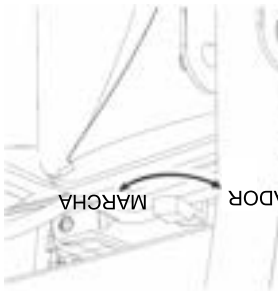


Para el arranque manual, tome la manija de encendido y jale lentamente hasta que sienta la resistencia. Tire rápidamente hacia arriba y afuera.



Arranque manual

Para el arranque eléctrico, empuje el interruptor a la posición "START", mantenga en la posición Start hasta que se inicie el generador. Precaución: para prolongar la vida de los componentes de arranque, no lo mantenga más de 10 segundos. Pause y vuelva a arrancar otra vez si es necesario. Después de arrancar el generador, libere el interruptor y se volverán a la posición "ON" de forma automática.

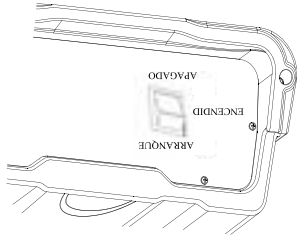


La conexión a tierra correcta del generador ayudará a evitar las descargas eléctricas en caso de una falla en la conexión a tierra del generador o en los dispositivos eléctricos conectados. La conexión a tierra correcta también ayuda a disipar la electricidad estática, que se forma con frecuencia en los dispositivos sin conexión a tierra.

Guía de referencia de viaje					
Herramienta o aplicación	Valios de funciones manuales adicionales (valor nominal)	Esenciales			
		Foco: 75 W	—		
Calefacción/refrigeración	3600	Ventilador de horno: 1/2 HP	800		
		Bomba de suministro: 1/3 HP	800		
		Hidratación/congelador	700		
		Bomba de agua de pozo: 1/2 HP	1000		
		Aire acondicionado de ventana: 10,000 BTU	1200		
		Humidificador: 13 gal	175		
		Aire acondicionado central: 24,000 BTU	3800		
		Cocina	1000	Horno microondas: 1000 W	—
				Cafetera	1000
				Estufa eléctrica: 8" elementos	2100
Sala de estar	850	Tostadora	—		
		Reproductor de DVD/CD	100		
		VCR	100		
Equipo estéreo	450	Equipo estéreo	—		
		Televisor a color: 27 in	500		
		Computadora personal con monitor de 17 in	800		
Otro	500	Sistema de seguridad	—		
		Radio relay AM/FM	100		
Taller/lugar de trabajo	4700	Abrepuente de garaje: 1/2 HP	875		
		Calefntador de agua eléctrico	4700		
		Luz de trabajo alógena de cuarzo	1000		
		Pulverizador a presión: 1/3 HP	600		
		Sernuico eléctrico	960		
		Taladro eléctrico: 1/2 HP, 5.4 A	600		
		Sierra circular: 7-1/4 in	1400		
		Sierra circular: 10 in	1800		
		Copliador de mesa: 6 in	1800		
		Sierra de mesa/sierra de brazo radial: 10 in	2000		
Compresor de aire: 1 HP	1600				
4500					


ADVERTENCIA Nunca encienda o detenga el motor con dispositivos eléctricos conectados en los tomacorrientes Y dispositivos encendidos.

Desconecte todas las cargas eléctricas de los tomacorrientes de la unidad antes de encender el motor. Asegúrese de que la unidad esté en una posición nivelada.

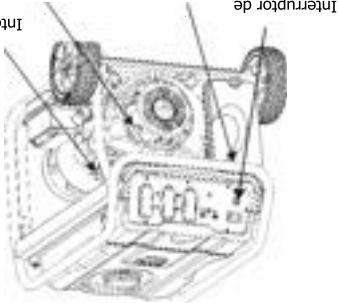

Interruptor de apagado del motor
 Palanca del encendido/apagado
 Obturador de combustible
 Arranque manual

Coloque el interruptor en la posición ENCENDIDO para el arranque manual.

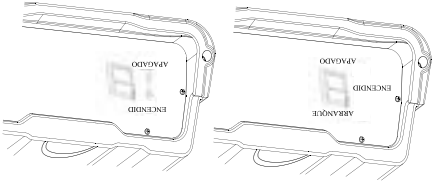

Coloque el interruptor de combustible en la posición ENCENDIDO.



SECCIÓN 5: FUNCIONAMIENTO


5.1 ARRANQUE DEL MOTOR

SECCIÓN 4: PREPARACIÓN ANTES DEL FUNCIONAMIENTO

4.1 AGREGADO DE ACEITE

DE MOTOR

Todos los aceites deben cumplir con la clase de servicio SJ, SL u otra del Instituto Americano de Petróleo (API). No utilice aditivos especiales. Seleccione el grado de viscosidad de aceite conforme a la temperatura de funcionamiento (también consulte el cuadro). Por encima de 40 °F, utilice SAE 30 Entre 40 °F y 10 °F, utilice 10W-30 Por debajo de 10 °F, utilice 5W-30 sintético

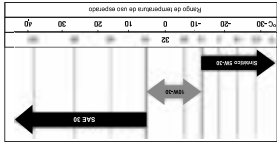

NOTA El tratamiento incorrecto del generador podría dañar y acortar su vida útil.

- NO intente poner en marcha o encender el motor antes de que se hayan realizado las tareas de mantenimiento adecuadas con el aceite recomendado. Esto podría resultar en una falla del motor.
- Coloque el generador en una superficie plana y nivelada.

- Despeje el área alrededor del llenador de aceite y retire el tapón y la varilla para medir el aceite.
- Limpie la varilla para medir el aceite.
- Llene el motor lentamente con aceite a través de la abertura del filtro de aceite hasta que alcance la marca de llenado en la varilla para medir aceite. Dejen que el llenado ocasionalmente para verificar el nivel de aceite. Tenga cuidado de no llenarlo en exceso.
- Verifique el nivel de aceite de motor antes de arrancar todas las veces.

4.2 AGREGADO DE COMBUSTIBLE

- Nunca llene el tanque en interiores.
- Nunca llene el tanque de combustible cuando el motor está en funcionamiento o está caliente.

y permita que se enfríe por completo antes de llenar el tanque de combustible. Evite derramar gasolina en el motor CALIENTE. Mantenga el combustible lejos de las chispas, llamas expuestas, llama de encendido, calefacción y otras fuentes de encendido. NO encienda un cigarrillo ni fume al llenar el tanque de combustible. El combustible es sumamente INFLAMABLE y sus vapores son EXPLOSIVOS. Utilice gasolina regular SIN PLOMO con el motor del generador. No utilice ningún combustible con más de 10 % de etanol agregado y nunca utilice combustible E85.- No mezcle aceite con gasolina.
- Instale el tapón de combustible y limpie la gasolina derramada.


4.3 CONEXIÓN A TIERRA

DEL GENERADOR

El Código eléctrico nacional requiere que la estructura y las piezas eléctricamente conectadas de este generador estén conectadas de forma correcta a una conexión a tierra aprobada. Los códigos eléctricos locales también pueden requerir la conexión correcta de la unidad. Para tal fin, conecte un cable de cobre trenzado de 10 AWG (Medida de cable americano) a la terminal con conexión a tierra y a una barra (electrodo) de latón o cobre con conexión a tierra, que brinda la protección adecuada contra descargas eléctricas. Sin embargo, los códigos locales pueden variar ampliamente. Consulte un electricista local para los requisitos de conexión a tierra en el área.



IMPORTANTE: Es importante evitar que se formen depósitos de goma en las piezas del sistema de combustible como el carburador, la manguera de combustible o el tanque durante el almacenamiento. Los combustibles mezclados con alcohol (llamados gasohol etanol o metanol) pueden atraer la humedad, lo cual conlleva la separación y formación de ácidos durante el almacenamiento. Los gases ácidos pueden dañar el sistema de combustible. Por lo tanto, el combustible debe extraerse antes de que los 30 días de almacenamiento. Consulte la sección "Almacenamiento".

Nunca utilice productos de limpieza de motor o carburador en el tanque de combustible ya que pueden ocasionar daños permanentes.

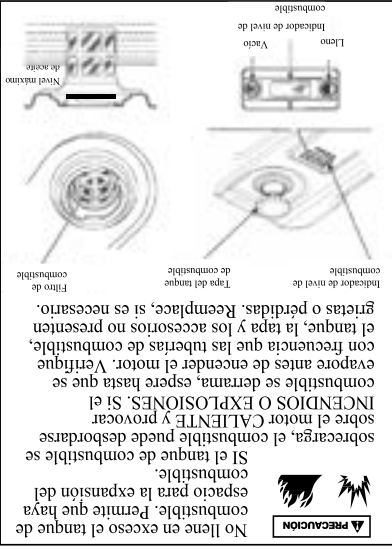

SECCIÓN 3: FUNCIONES Y CONTROLES

Lea este Manual del usuario y las reglas de seguridad antes de operar su generador. Compare las ilustraciones con su generador para familiarizarse con las ubicaciones de varios controles y ajustes. Conserve este manual para referencia futura.

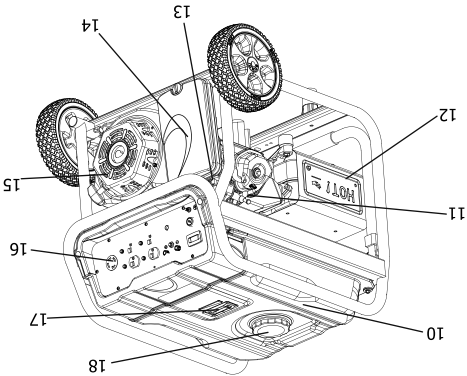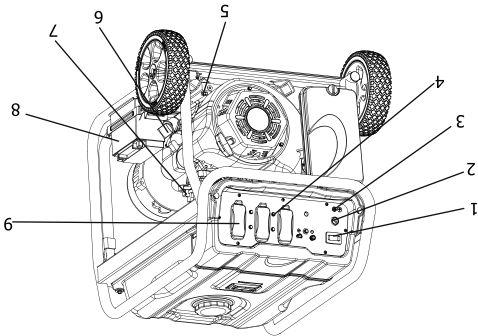

1	MEDIDOR DE TIEMPO	10	TANQUE DE COMBUSTIBLE
2	INTERRUPTOR DEL MOTOR	11	BUJIA
3	TERMINAL CON CONEXIÓN A TIERRA	12	SILENCIADOR
4	DISYUNTOR DE CA	13	PALANCA DEL OBTURADOR
5	TAPÓN DE DRENAJE DE ACEITE	14	FILTRO DE AIRE
6	TAPA/VARILLA PARA MEDIR EL ACEITE	15	ARRANQUE MANUAL
7	VÁLVULA DE COMBUSTIBLE	16	L14-30R
8	BATERÍA	17	INDICADOR DE NIVEL DE COMBUSTIBLE
9	CUBIERTA	18	TAPA DEL TANQUE DE COMBUSTIBLE

NOTA

Las imágenes e ilustraciones utilizadas en este manual son únicamente de referencia y no representan un modelo específico.

SECCIÓN 2: INFORMACIÓN GENERAL

2.1 DISEMPAQUE

- Coloque la caja en una superficie rígida y plana.
- Retire todo de la caja excepto el generador.
- Abra la caja por completo cortando cada esquina desde la parte superior a la inferior.
- Deje el generador en la caja para instalar el kit de ruedas.

2.1.1 CONTENIDOS DEL EMPAQUE

- 1-Manual del usuario
- 2-Ruedas (Para 2,5 kW y superior)
- 1- Conjunto de manija (Para 2,5 kW y superior)
- 2- Eje de ruedas (Para 2,5 kW y superior)
- 1- Bolsa de tornillería
- (incluye 1 toma de bujía y 1 extensión)

2.2 ARMADO

El generador requiere de armado para ser utilizado.

2.2.1 ARMADO DEL KIT DE

ACCESORIOS

Las ruedas están diseñadas para mejorar considerablemente la portabilidad del generador.

NOTA Las ruedas no están destinadas para el uso en la carretera.

Consulte la Figura para instalar los soportes de las patas como se indica.

- Retire la tuerca del soporte de la pata, instale el tornillo a través de la estructura del generador,

ajústelo firmemente con una llave (no incluida).



Consulte la Figura para instalar las ruedas como se indica.

- Deslice el eje por el cubo de rueda, luego

- Deslice el eje por los soportes de la estructura.
- Doble las lengüetas del pasador hacia afuera

para bloquear la clavija en su lugar.

Con el fin de evitar daños en el generador, por favor, antes de utilizar el generador, gira la Tuerca de amortiguación del asiento a la izquierda (Figura 1). Así que la amortiguación se encuentra al lado para mantener el soporte del motor mantener al menos la distancia de 3 mm (Figura 2).

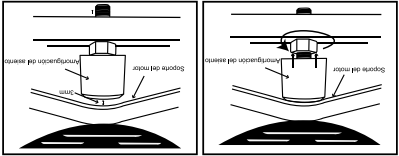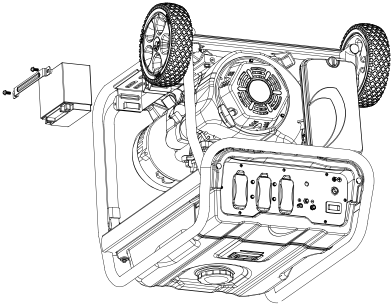



Los gases o el calor de escape pueden generar la combustión de combustibles y estructuras, o dañar



provocando un incendio que puede resultar en la muerte, lesiones graves o daños a la propiedad. El puede provocar quemaduras que resulten en lesiones graves. NO toque las piezas calientes y EVITE los gases de escape de alta temperatura.

- Deje que el equipo se enfríe antes de tocarlo.
- Mantenga una distancia de al menos 5 pies (1,5 m) en todos los lados del generador, inclusive en la parte de arriba.

- Utilizar u operar el motor en una superficie cubierta por hielo, malezas o césped es una violación del Código de recursos públicos de California, Sección 4442, salvo que el sistema de escape esté equipado con un protector contra chispas, como se define en la sección 4442, conservado en perfecto orden de trabajo. Otros estados o jurisdicciones federales pueden tener leyes similares.
- Comuníquese con el fabricante, minorista o conectorario original del equipo para obtener un protector contra chispas diseñado para el sistema de escape instalado en este motor.
- Las piezas de repuesto deben ser las mismas y deben instalarse en la misma posición que las piezas originales.



Las chispas no intencionales



podrían provocar incendios o descargas eléctricas que resulten en la muerte o lesiones graves.

AL AJUSTAR O REPARAR SU

GENERADOR

- Desconecte el cable de la bujía de la misma y coloque el cable donde no pueda hacer contacto con la bujía.

- Utilice el dispositivo de pruebas de bujías aprobado.
- NO verifique si existen chispas sin la bujía colocada.



El arrancador y otras piezas rotativas podrían enredar manos, cabellos, ropas o accesorios ocasionando lesiones graves. • NUNCA opere el generador sin las cubiertas o carcassas protectoras. • NO use prendas sueltas, joyas ni otras cosas que podrían quedar atrapadas en el arrancador u otras piezas rotativas. • Lleve el cabello recogido y retire las joyas.



Las velocidades de funcionamiento sumamente altas podrían resultar en lesiones menores o daños al generador.

- NO modifique el resorte regulador, las uniones u otras piezas para aumentar la velocidad del motor. Los suministros del generador corrigen la frecuencia y el voltaje nominales al funcionar en una carga pesada.
- NO modifique el resorte regulador, las uniones u otras piezas para aumentar la velocidad del motor. Los suministros del generador corrigen la frecuencia y el voltaje nominales al funcionar en una velocidad regulada.
- NO modifique el generador de ninguna forma.



Exceder la capacidad de amperaje o voltaje de los generadores podría provocar daños en el generador o en los dispositivos eléctricos conectados a este. • NO exceda la capacidad de amperaje o voltaje del generador. Consulte No sobrecargar el generador en la sección Funcionamiento. • Encienda el generador y permita que el motor se estabilice antes de conectar las cargas eléctricas. • APAGUE las cargas eléctricas y desconéctelas del generador antes de detenerlo.



El tratamiento incorrecto del generador podría dañarlo y acortar su vida útil.

- Solo utilice el generador para los fines previstos.
- Si tiene preguntas sobre el uso previsto, comuníquese con el concesionario o con el centro de atención local.
- Solo opere el generador en superficies niveladas.
- NO exponga el generador a humedad, polvo, suciedad o vapores corrosivos en exceso.
- NO inserte ningún objeto por las ranuras de refrigeración.
- Si los dispositivos conectados se calientan en exceso, apáguelos y desconéctelos del generador.
- Si se pierde la salida eléctrica, - o si el equipo libera chispas, humo o emite llamas - o la unidad vibra en exceso, apáguelos y desconéctelos del generador.

ADVERTENCIA

El escape del motor de este producto, determinados componentes de este producto y los accesorios relacionados contienen químicos que el Estado de California conoce como causantes de cáncer, anomalías congénitas y otros daños reproductivos. Lávese las manos luego de manipularlo.

ADVERTENCIA

Este generador no cumple con las Reglamentación 33CFR-183 de la Guardia costera de EE. UU. y no puede utilizarse en aplicaciones marítimas. El uso incorrecto del generador adecuado y aprobado por la Guardia costera de EE. UU. podría provocar la muerte, lesiones graves o daños a la propiedad.

ADVERTENCIA

El rebote (retroceso rápido) de la cuerda de arranque arrastrará la mano y el brazo hacia el motor más rápido de lo que usted lo pueda soltar, lo cual podría provocar fracturas, contusiones o esguinces que resulten en lesiones graves.

Al arrancar el motor, tire de la cuerda lentamente hasta que sienta la resistencia y luego tire rápidamente para evitar el rebote.

NUNCA encienda o detenga el motor mientras hay dispositivos eléctricos conectados y encendidos.

ADVERTENCIA

El combustible y sus vapores son extremadamente inflamables y explosivos, y pueden provocar quemaduras, incendios o explosiones que resulten en la muerte, lesiones graves o daños en la propiedad.

AL AGREGAR O DRENAR COMBUSTIBLE

• Apague el motor del generador y déjelo enfriar al menos 2 minutos antes de retirar la tapa de combustible. Afloje la tapa lentamente para aliviar la presión del tanque.

• Llene o drene el tanque de combustible en el exterior.

• NO llene el tanque en exceso, permita que haya espacio para la expansión del combustible.

• Si el combustible se derrama, espere hasta que se evapore antes de encender el motor.

• Mantenga el combustible lejos de chispas, llamas expuestas, llama de encendido, calefacción y otras fuentes de encendido.

• Verifique con frecuencia la tapa que las tuberías de combustible, el tanque, la tapa y los accesorios no presenten grietas o pérdidas. Reemplácelas, si es necesario.

• NO encienda un cigarrillo ni fume.

ADVERTENCIA

AL ARRANCAR EL EQUIPO

• Asegúrese de que la bujía, el silenciador, la tapa de combustible y el depurador de aire estén colocados. NO ponga en marcha el motor sin la bujía colocada.

AL OPERAR EL EQUIPO

• NO opere este producto dentro de ningún edificio, garaje, porche, equipo móvil, aplicación marítima o recinto.

• NO incline el equipo en un ángulo que pueda provocar derrames de combustible.

• NO detenga el motor moviendo el control del obturador a la posición de "APAGADO".

AL TRANSPORTAR O REPARAR EL EQUIPO

• Realice el transporte, traslado o reparación con el tanque de combustible VACÍO o con la válvula de combustible APAGADA.

• NO incline el motor o el equipo en un ángulo que pueda provocar derrames de combustible.

• Desconecte el cable de la bujía.

AL ALMACENAR COMBUSTIBLE O EL EQUIPO CON COMBUSTIBLE EN EL TANQUE

• Almacene los lejotes de calderas, estufas, calentadores de agua, secadoras de ropa u otros electrodomésticos que poseen una fuente de encendido a llama o de otro tipo, ya que pueden provocar que los vapores de combustible se incendien.

ADVERTENCIA

El voltaje del generador podría provocar descargas eléctricas o quemaduras que resulten en la muerte o lesiones graves.

• Utilice un equipo de traslado aprobado para evitar la realimentación al aislar el generador de los empleados de mantenimiento eléctrico.

• Cuando utilice el generador como fuente de alimentación de respaldo, notifíquelo a la empresa del servicio.

• Utilice un interruptor de circuito de falla con sumamente conductor, como una plataforma de metal o una estructura en acero.

• NO toque los cables o tomacorrientes expuestos.

• NO utilice el generador con cables eléctricos que estén desgastados, pelados, expuestos o dañados de cualquier forma.

• NO opere el generador bajo la lluvia o en clima húmedo.

• NO manipule el generador o los cables eléctricos mientras está parado sobre agua, descaizo o con las manos o pies húmedos.

• NO permita que personas no calificadas o niños operen el generador o realicen tareas de mantenimiento en él.

INTRODUCCIÓN

Gracias por comprar productos de A-POWER. Le agradecemos que nos haya elegido. Nuestro generador es impulsado por un motor compacto refrigerado por aire de alto rendimiento, el cual puede suministrar energía eléctrica para operar herramientas eléctricas en el lugar de trabajo, o brindar energía en ubicaciones remotas donde el servicio de electricidad no se encuentra disponible. Este manual incluye información de seguridad para que usted tenga conocimiento de los riesgos y peligros asociados con el generador y cómo evitarlos. Es importante que usted lea y comprenda detalladamente estas instrucciones antes de intentar arrancar u operar este equipo.

originales para referencias futuras.

Si no comprende una parte de este manual, comuníquese con el concesionario autorizado más cercano para obtener información sobre los procedimientos de arranque, funcionamiento y mantenimiento. Además, le recomendamos enfáticamente que le brinde instrucciones a los demás usuarios que operarán el generador en caso de emergencia.

El Sistema de control de emisiones de este generador está garantizado por el conjunto de estándares de la Agencia de Protección Ambiental de Estados Unidos (EPA). Se han llevado a cabo todos los esfuerzos necesarios para garantizar que la información de este manual sea precisa y actual. Sin embargo, A-POWER Corp. se reserva el derecho de modificar, alterar o, de otra forma, mejorar el generador y esta documentación en cualquier momento y sin previo aviso.







Lea atentamente este manual y familiarícese con su generador. Conozca sus aplicaciones, limitaciones y los peligros involucrados. En toda esta publicación, y en las etiquetas y calcomanías adjuntas al generador, los símbolos de PELIGRO, ADVERTENCIA, PRECAUCIÓN Y NOTA se utilizan para alertar al personal con instrucciones especiales sobre un funcionamiento determinado que puede resultar peligroso si se lleva a cabo de forma incorrecta o sin cuidado; observe atentamente. Sus definiciones son las siguientes: Este es el símbolo de alerta de seguridad. Se utiliza para alertarlo de potencialmente peligrosas situaciones. Observe todos los mensajes de seguridad que incluyen este símbolo para evitar posibles lesiones o la muerte.



REGLAS DE SEGURIDAD

	PELIGRO
PELIGRO indica una situación de peligro inminente que, si no se evita, resultará en la muerte o lesiones graves.	
	ADVERTENCIA
ADVERTENCIA indica una situación potencialmente peligrosa que, si no se evita, podría resultar en la muerte o lesiones graves.	
	PRECAUCIÓN
PRECAUCIÓN indica una situación potencialmente peligrosa que, si no se evita, podría resultar en lesiones menores o moderadas.	
	PRECAUCIÓN
si no se evita, podría resultar en daños a la propiedad.	
	NOTA
NOTA brinda información adicional que es útil para el uso y el mantenimiento correcto de esta herramienta. Si se indica una NOTA, asegúrese de comprenderla por completo.	

Símbolos de seguridad y sus significados



PELIGRO

Utilizar el equipo en espacios cerrados es extremadamente peligroso. El generador expide gases que son dañinos para la salud.

NUNCA coloque el generador en lugares cerrados como una casa o un garaje.

El equipo SOLO debe ser utilizado en lugares abiertos.

ADVERTENCIA

Un motor en funcionamiento emana monóxido de carbono, un gas venenoso, incoloro e inodoro. Respirar monóxido de carbono puede resultar en la muerte, lesiones graves, dolor de cabeza, fatiga, mareos, vómitos, confusión, convulsiones, náuseas o desmayos.

• Operar este producto SOLO en el exterior.

• Instale una alarma de monóxido de carbono a baterías cerca de las habitaciones.

• Evite que el gas de escape ingrese en un área confinada a través de ventanas, puertas, ductos de ventilación u otras aberturas.

• NUNCA opere este producto dentro de un edificio, garaje, porche, equipo móvil, aplicaciones marítimas o recipientes, incluso si las ventanas y puertas están abiertas.

INTRODUCTION

A FEW WORDS ABOUT SAFETY

Your safety and the safety of others are very important. And using this generator safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining a generator.

Record the model and serial numbers as well as date and place of purchase for future reference. Have this information available when ordering parts and when making technical or warranty inquiries.

⚠ WARNING

This product can expose you to chemicals which are known to the State of California to cause cancer.

For more information, go to www.P65Warnings.ca.gov

⚠ ADVERTENCIA

Este producto puede exponerte a sustancias químicas que el Estado de California reconoce como cancerígenas.

Para obtener más información, diríjase a www.P65Warnings.ca.gov


⚠ DANGER

Using a generator indoors WILL KILL YOU IN MINUTES. Exhaust contains carbon monoxide, a poison gas you cannot see or smell.

NEVER use in the home or in partly enclosed areas such as garages.



Only use **OUTSIDE** and far from open windows, doors, and vents.



Avoid other generator hazards. **READ MANUAL BEFORE USE.**

ÍNDICE

Introducción	1
Sección 1: Reglas de seguridad	1
Índice de normas.....	1
Sección 2: Información general.....	4
2.1 Desempaque	4
2.2 Armado	4
Sección 3: Funciones y controles	5
Sección 4: Preparación antes del funcionamiento	6
4.1 Agregado de aceite de motor.....	6
4.2 Agregado de combustible	6
4.3 Conexión a tierra del generador	6
6.3 Filtro de aire de servicio.....	11
6.4 Holgura de la válvula	12
6.5 General.....	12
6.6 Otros consejos de almacenamiento.....	12
Sección 5: Funcionamiento	7
Sección 6: Resolución de problemas..	13
Sección 7: Almacenamiento	12
Sección 8: Resolución de problemas..	13
Sección 9: Parámetros.....	14
Sección 10: Diagrama.....	15
Sección 11: Garantías.....	26
5.1 Arranque del motor	7
5.2 Conexión de cargas eléctricas	9
5.3 Detención del motor.....	9
5.4 Sistema de apagado por nivel de aceite bajo	9
5.5 Gran altitud	9

PARA LOS RESIDENTES DE CALIFORNIA:

ADVERTENCIA: Este producto contiene sustancias químicas conocidas por el Estado de California como causantes de cáncer o defectos de nacimiento y otros daños re



A-POWERTM

GENERADOR PORTÁTIL

Manual del usuario



**GUARDE ESTE MANUAL PARA
REFERENCIA FUTURA**

**IMPORTANTES INSTRUCCIONES DE SEGURIDAD ESTÁN INCLUIDAS
EN ESTE MANUAL**

**CUSTOMER SERVICE
SERVICE CLIENTELE
SERVICIO AL CLIENTE**
1-855-888-3598

**A-POWER Corp.
10887 Commerce
Way Unit A Fontana
CA 92337
www.a-ipower.com**